

Karaoke USA

All-In-One Wi-Fi Multimedia Karaoke System With 7" LCD Touch Screen, Recording and Bluetooth Speaker

User's Guide

MODEL NO.:
WK760



Smart Device is not included

Before operating this product, please read these instructions.

Congratulation! You have purchased the most powerful All-In-One Wi-Fi Multimedia Karaoke System with the most recent Quad Core 6.0 OS that gives you the benefit of all the latest updates and access to tools and applications(Apps) to make your experience exciting.

Thousands of Android Apps are available online and in the Google Play Store. Karaoke Apps are available from around the world with various languages and songs for downloading and streaming. You can also install Apps like YouTube, Netflix, TED, HBO and CNN and many others to take advantage of the features they offer.

The Hi-Fidelity audio system gives you powerful sound reproduction for the best listening experience. We are confident that this multimedia Karaoke system will give you endless entertainment pleasure and fun party events with your family and friends.

Contents

 
Warnings and Precautions.....	01
Important Safety Instructions.....	02
Caution.....	03
What's in the Gift Box.....	04
Song List	05-06
Features.....	07
Front Panel Illustration.....	08
Rear Panel Illustration.....	09
Connecting to a TV Set.....	10
Charging Smart Device.....	10
Remote Control.....	11
Remote Control Operation.....	12
Remote Control Preparation.....	13
How to Select and Play.....	14
How to Record and Record Playback.....	15
How to Select and Play (continued).....	16-17
How to Delete and Copy.....	18-19
Streaming.....	20
Bluetooth.....	21
System Setup.....	22-25
Specifications.....	26
Troubleshooting.....	27
Notes on SD Card	28

Warnings and Precautions

WARNING: To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

“**Caution Marking and Rating Label**” is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.

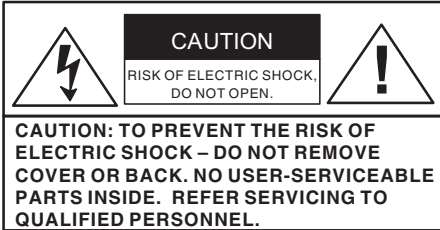

This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. **DO NOT OPEN THE UNITS CASE.**



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

SAFETY

For units with an insertable AC Power Adapter cord set:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power “ON” may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

FCC INFORMATION

This unit complies with part 15 of the “FCC Rules.” Operation is subject to the following conditions:

1. This unit may not cause harmful interference.
2. This unit must accept any interference received, including interference that may cause undesirable operation.



Double insulation.
This is a Class II apparatus.

Important Safety Instructions

1. Read These Instructions: All safety and operations manual should be read before the product is operated.

2. Keep These Instructions: The safety and operations manual should be retained for future reference.

3. Heed All Warnings: All warnings applicable to the unit and in the operations manual should be adhered to.

4. Follow All Instructions: All operations manual should be followed.

5. Water and Moisture: Do not use this unit near water. For example, do not use near a bath tub, wash bowl, kitchen sink, or laundry tub. Do not use this unit in a wet basement or near a swimming pool or similar location. The unit shall not be exposed to dripping or splashing and no objects filled with liquids (ex: vases), shall be placed on or near this unit.

6. Cleaning: Clean the unit only with a dry cloth. Unit must be unplugged from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the unit.

7. Ventilation: Slots and openings in the cabinet of the unit are provided to ensure reliable operation and ventilation and to protect the unit from overheating. The openings must not be covered and should never be blocked by placing the product on a soft surface like a bed, sofa, or rug. This unit should not be placed in a built-in installation like a bookcase or rack, unless proper ventilation is provided.

8. Heat: Do not install the unit near any heat source like a radiator, heat register, stove or other device that produces heat, including amplifiers.

9. Grounding or Polarization: If applicable, do not disable or circumvent the polarized or grounding-type plug. A polarized plug has 2 blades with 1 wider than the other. A grounding-type plug has 2 blades and a 3" grounding plug. The wide blade, or the 3" prong, is provided for your safety. If the provided plug does not fit into an outlet, consult a qualified electrician for replacement of this outlet.

10. Power Cord Protection: Protect the power cord from being walked on, pinched or cut or damaged in any

way. If any damage occurs, consult with a trained technician for repair.

11. Accessories: Only use accessories specified and approved by the manufacturer. Do not place this unit on an unstable cart, stand, tripod, bracket or table that has not been previously approved by the manufacturer. This unit may fall, causing serious injury to a child, adult or to the unit itself. Any mounting of the unit should be done within the manufacturer's guidelines.

12. Transporting: If a pre-approved device is used to transport this unit, caution and care must be observed and practiced to avoid damages. Make sure the device and unit together are stable before moving.



PORTABLE
CART
WARNING

S3125A

13. Lightning: Unplug this unit and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the unit due to lightning and power line surges.

14. Servicing: Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
15. Power Sources: Only connect to the type of household power supply as indicated in the operations manual and "Caution Marking and Rating Label." If you are not sure of the type of power supplied to your home (or location of the outlet the unit is being plugged into), consult with the local power company. For units intended to operate from battery power, or other sources, refer to the manufacturer's operations manual.

16. Overloading: Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock and may be hazardous.

17. Foreign Material: Protect this unit from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this unit. This could result in a risk of fire or electric shock and may be hazardous.

18. Replacement Parts and Safety Check: When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure the proper operation to avoid possible fire, electric shock or other hazards.

19. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. If there is any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

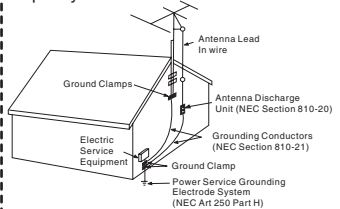

20. Wall or Ceiling Mounted: The unit should be mounted to a wall or a ceiling only as recommended by the manufacturer.

21. Disconnect Device: Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power "off" is needed quickly.

22. Protective Attachment Plug: If applicable, this unit may be equipped with an attachment plug having overload protection. This is a safety feature. See the operations manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

23. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

Caution

- Please use the original box and packing materials for safe transportation of this product.
- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.
- Do not use hard or sharp instruments to hit the color Touch Screen Display, it may scratch or damage its surface!
- Do not use greasy solvent or oil base cleaning agent to clean the screen surface. As it may insulate the touch screen and disable your commands.

Warning

Some Apps that you download from the Internet could be harmful or interfere with this system. You may need to Reboot/Reset this machine or completely remove these harmful Apps from the system to correct any abnormalities.

NOTE: Due to variances in App designs and functions, we cannot promise all Apps will install, function or satisfy your expectations. Feel free to contact us if any App fails to function as expected and we will try to investigate solutions. No promises can be made a solution will be found.

What's in the Giftbox



WK760 X 1



Microphone x 2



Remote Control x 1



 
Smart Device Holder x 1



AC Adaptor x 1
DC 12V/3.5A



Warranty Card x 1

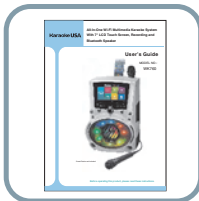

User's Guide x 1

Song List (Built-in)

Sing A Long Karaoke Songs (200 Traditional Karaoke Songs)

- Alexander's Ragtime Band
- All Things Bright And Beautiful
- All Through The Night
- Alouette
- Alphabet Song, The
- America (My Country Tis Of Thee)
- Animal Fair
- Around And Around The Village
- Aye Aye Aye Aye The Limerick Song
- B I N G O
- Baa Baa Black Sheep
- Barney Buntline
- Be Kind To Your Web Footed Friends
- Bear Went Over The Mountain
- Big Rock Candy Mountain
- Billy Boy
- Billy Pringle
- Bird's Song
- Blessed Assurance
- Blow The Man Down
- Blue Bells Of Scotland
- Bluebird
- Bollweevil
- Bye, Baby Bunting
- Caissons Go Rolling Along
- Calendar Song
- Camptown Races
- Capital Ship, A
- Cat Came Back, The
- Cinderella
- Clementine
- Cock A Doodle Doo
- Cockles And Mussels
- Cocky Robin
- Colors
- Come, O Come, Emanuel
- Counting Song
- Cradadad Song
- Crocodile, The
- Cuckoo Is A Pretty Bird
- Day And Night
- Dixie
- Do Your Ears Hang Low
- Dry Bones
- Elephant And The Flea
- Father Grumble
- Fiddle De De
- Fishes
- Five Currant Buns
- For He's A Jolly Good Fellow
- For Me And My Gal
- Fox
- Frere Jacques
- Froggie Went A Courting
- Georgie Porgie
- German Lullaby
- Girls And Boys Come Out To Play
- Git Along Little Dogies
- Golden Slumbers
- Good Morning Merry Sunshine
- Goosey Goosey Gander
- Grasshopper
- Grasshoppers Three
- Greensleeves
- Ground Hog
- Harrigan
- Here We Go Around The Mulberry Bush
- Here We Go Looby Loo
- Hey Diddle Diddle
- Hickory Dickory Dock
- Higgledy Piggledy My Black Hen
- Home On The Range
- Humpty Dumpty
- Hunting We Will Go, A
- Hush Little Baby
- Hush-a-bye
- I Am A Young Musician
- I Gave My Love A Cherry
- I Had A Little Nut Tree
- I Love You Truly
- I Spy
- If You're Happy And You Know It
- I'll Take You Home Again, Kathleen
- I'm A Little Teapot
- I'm Always Chasing Rainbows
- I'm Looking Over A Four Leaf Clover
- In The Good Old Summertime
- It Ain't Gonna Rain No More
- It's Raining It's Pouring
- I've Been Working On The Railroad
- Jack And Jill
- Jack Be Nimble
- Jack Spratt
- Jenny Jenkins
- Jimmy Crack Corn
- Lady Bird Lady Bird
- Letters Of The Alphabet
- Little Black Bull
- Little Boy Blue
- Little Jack Horner
- Little Sally Waters
- Little Things, The
- Little Tommy Tucker
- London Bridge Falling Down
- London Street
- Ma She's Making Eyes At Me
- Mademoiselle From Armentieres
- Marine's Hymn
- Michael Row The Boat Ashore
- Midnight Special, The
- Moonlight Bay
- My Old Dog Tray
- My Old Hen
- Now I Lay Me Down To Sleep
- Oats Beans And Barley Grow
- Off To Bed Now
- Oh Dear What Can The Matter Be
- Ol Woman Who Lived In A Shoe
- Old Blue
- Old John Braddlem
- Old Mother Hubbard
- On The Banks Of The Sacramento
- On Top Of Old Smokey
- One Meat Ball
- One Two Buckle My Shoe
- One Two Three Four Five
- Oranges And Lemons
- Over In The Meadow
- Over The River And Through The Woods
- Pat A Cake
- Pease Porridge Hot
- Peg O' My Heart
- Peter Peter Pumpkin Eater
- Polly Put The Kettle On
- Polly Wolly Doodle
- Pop Goes The Weasel
- Ride A Cock Horse To Banbury Cross
- Right Hand Says Good Morning
- Ring Around The Rosie
- Rise And Shine
- Rock A Bye Baby
- Rock A Bye Baby Baby
- Rock Island Line
- Rocking The Cradle
- Rose Of Tralee
- Row Row Row Your Boat
- Russian Cradle Song
- Sailing Sailing
- School Days
- She'll Be Coming Around The Mountain
- Shoo Fly Don't Bother Me
- Shortening Bread
- Simple Simon
- Sing A Song Of Sixpence
- Six Little Ducks
- Skip To My Lou
- Sleep Baby Sleep
- Spelling
- Spider And The Fly, The
- Star Spangled Banner, The
- Sur Le Pont D'avignon
- Swanee River
- Sweetly Sings The Donkey
- Swing Low Sweet Chariot
- Tailor And The Mouse
- Take Me Out To The Ball Game
- Ten In A Bed
- The Ants Go Marching
- The Eensy Weensy Spider
- The Farmer In The Dell
- The Holly And The Ivy
- The Muffin Man
- The Old Gray Mare
- There Was A Little Man
- There Was A Tree
- There's A Hole In Middle Of Sea
- This Little Pig Went To Market
- This Old Man
- Three Blind Mice
- Three Little Kittens
- Three Little Pigs
- Tisket A Tasket, A
- To Market To Market
- Toot Toot Toosie Goodbye
- Try Try Again
- Tura Lura Lura
- Turkey In The Straw
- Vive La Compagne
- Wabash Cannonball, The
- Waltzing Matilda
- We Hunted And We Hunted
- We Three Kings
- What Child Is This
- When Johnny Comes Marching Home
- Where Oh Where Has My Little Dog Gone
- Who Threw The Overalls In Mrs. Murphy's Chowder
- Wish You A Happy Birthday
- World Turned Upside Down, The
- Yankee Doodle
- Yellow Rose Of Texas

Song List (Built-in)

Favorite Karaoke Songs (100 Traditional English and Spanish Karaoke Songs)

1. Abide With Me
2. Amazing Grace
3. Angel De Los Reinos Santos
4. Angels From The Realms Of Glory
5. Angels We Have Heard On High
6. April Shower
7. Auld Lang Syne
8. Ave Maria
9. Away In A Manger
10. Battle Hymn Of The Republic
11. Bicycle Built For Two
12. Bill Bailey, Won't You Come Home
13. Boom, Boom, Ain't It Great To Be Crazy
14. Brahm's Lullaby
15. Bringing In The Sheaves
16. Campanas de Navidad
17. Church in The Wildwood
18. Con Mi Burrito Sabanero
19. Daddy Sang Bass
20. Danny Boy
21. Deck The Halls
22. Ding Dong Que Alegria
23. Doce Dias De Navidad
24. Down By The Riverside
25. El Buen Rey Weceslao
26. El Primer Noel
27. El Tamborilero
28. First Noel, The
29. Frankie And Johnny
30. Give My Regards To Broadway
31. Go Tell It On The Mountain
32. God Rest Ye Merry Gentlemen
33. Hail Hail The Gang's All Here
34. Hark! The Herald Angels Sing
35. He's Got The Whole World In His Hand
36. His Eye Is On The Sparrow
37. How Great Thou Art
38. I Love To Tell The Story
39. I'll Fly Away
40. In The Garden
41. It Came Upon A Midnight Clear
42. It Is No Secret What God Can Do
43. Jeanie With The Light Brown Hair
44. Jesus Loves Me
45. Jingle Bells (Childrens)
46. Joy To The World
47. Just A Closer Walk With Thee
48. Let Me Call You Sweetheart
49. Little Bo Peep
50. Little Miss Muffet
51. Llego A Mi Medianoche
52. Los Tres Reyes
53. Mary Had A Little Lamb
54. Mary Quite Contrary
55. Mozart's Lullaby
56. My Bonnie Lies Over The Ocean
57. My Old Kentucky Home
58. My Wild Irish Rose
59. Navidad, Navidad
60. Noche De Paz
61. Noche Santa
62. O Holy Night
63. Oh Christmas Tree
64. Oh Come All Ye Faithful
65. Oh Little Town Of Bethlehem
66. Oh Ven Oh Ven Emmanuel
67. Oh When The Saints Go Marching In
68. Oh You Beautiful Doll
69. Oh, Susanna
70. Old King Cole
71. Old MacDonald Had A Farm
72. Old Time Religion
73. One Day At A Time
74. One More River To Cross
75. Onward Christian Soldiers
76. Peace In The Valley
77. Precious Lord Take My Hand
78. Precious Memories
79. Rock Of Ages
80. Rock-A-My Soul
81. Silent Night
82. Sweet By And By
83. Sweet Hour Of Prayer
84. The Little Drummer Boy
85. The Lord's Prayer
86. The Old Rugged Cross
87. This Little Light Of Mine
88. Toda La Noche
89. Twelve Days Of Christmas
90. Twinkle Twinkle Little Star
91. We Gather Together
92. We Wish You A Merry Christmas
93. Wedding Song (There Is Love)
94. What A Friend We Have In Jesus
95. When Irish Eyes Are Smiling
96. When The Roll Is Called Up Yonder
97. While Shepherds Watched, Their Flocks
98. Whispering Hope
99. Ya Llego La Navidad
100. You're A Grand Old Flag

Features



 
- 7" HD solution LCD color Touch-screen, Wi-Fi multimedia Karaoke System
- Built-in Flash Memory (16GB)
- 7" TFT Digital Touch- Screen Color Display
- Record and Record Instant Playback
- 50W Peak Power Output
- Remote Control
- 2 Microphones
- 2 Microphone Inputs and Holders
- USB/SD card slots (up to 128GB)
- USB charger for Smart Device
- LED Lightings that Synchronize and Flash with the Rhythm of Music
- Analog Echo Control
- Quad Core MVC 6.0 OS
- Bluetooth wireless connection and speaker
- Balance Control
- HDMI Output
- WiFi (IEEE802.11) Wireless connection
- AC 100V~240V
AC/DC Adaptor included
- DC 12V Car Adaptor (optional)
**Can be ordered online: karaokeusa.com*

Front Panel Illustration



1. 7" HD LCD Color Touch-screen Display
2. SD CARD: SD slot to accommodate SD cards
3. POWER ON/OFF button
4. LIGHT ON/OFF: Flashing LED Lights ON/OFF Button
5. RETURN: Return to previous screen
6. MIC VOLUME: Microphone Volume Control
7. ECHO: Adjust ECHO Up or Down
8. MIC INPUT: Microphone input jacks (LEFT and RIGHT)
9. IR LED: Remote Control infrared red Receiver
10. MASTER VOLUME: Master Volume Control
11. USB: USB slot to accommodate USB
12. EARPHONE: Standard 3.5mm Earphone jack
13. PLAY/PAUSE: Select a menu item / play or pause a song
14. NEXT: NEXT song
15. PREV: PREVIOUS song
16. BALANCE: MUSIC ONLY or MUSIC & VOCAL
17. SPEAKER: Audio speaker


Rear Panel Illustration

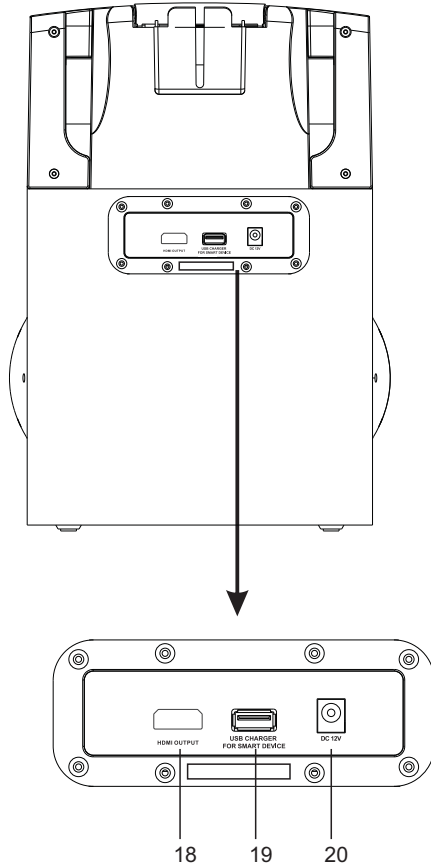


- 18. HDMI Output: Hi-Definition Signal Output to Your External TV
- 19. USB Charger: Smart Device USB Charger
- 20. DC 12V Input Socket

Connecting to a TV Set

 
To view and hear system output on your HDMI capable TV, Connect the system HDMI output to your TV's HDMI input with a quality HDMI cable (not provided). After connection, change your TV channel to the correct HDMI input channel.

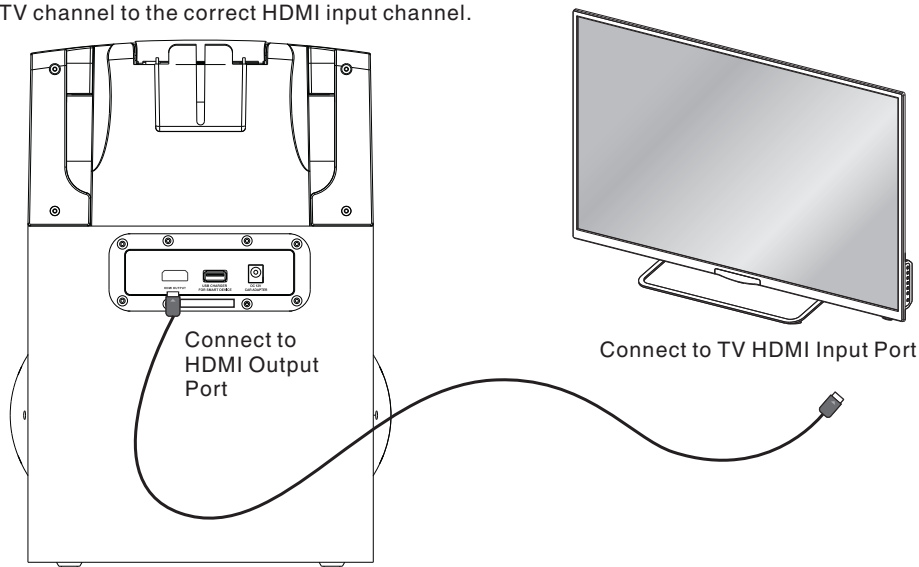

Charging a Smart Device

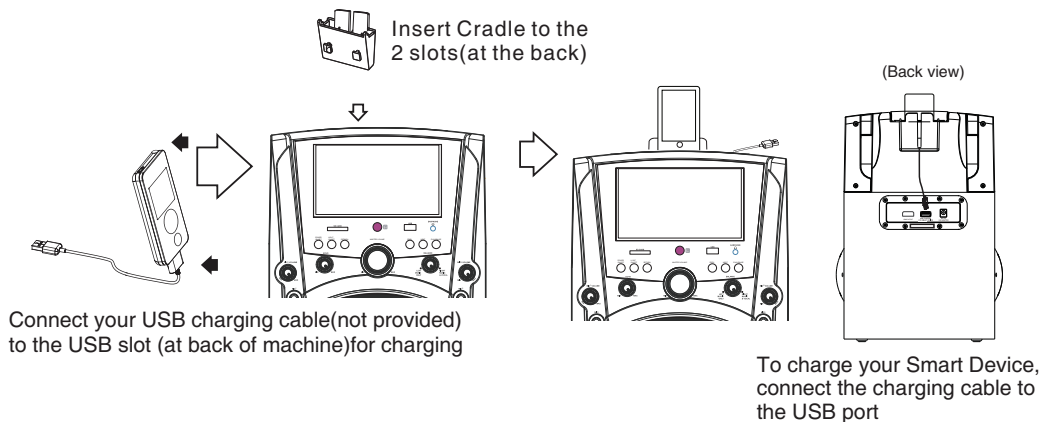 


Remote Control

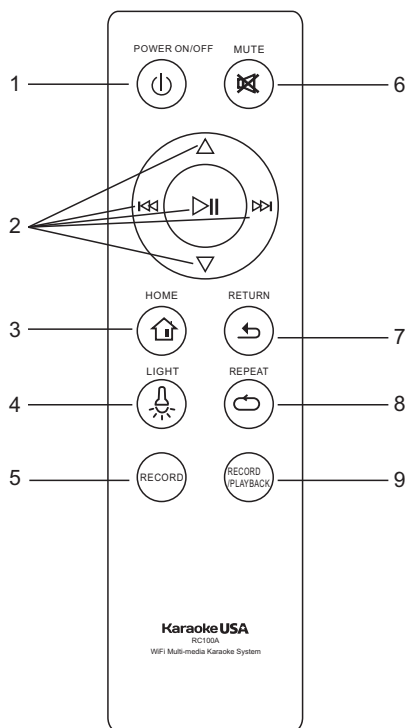 



1. POWER ON/OFF
2. UP/DOWN/PREV./NEXT/
PLAY (PAUSE)
3. HOME
4. LIGHT
5. RECORD
6. MUTE
7. RETURN
8. REPEAT
9. RECORD PLAYBACK


Remote Control Operation


POWER ON/OFF


-  ● Power on/off
- PLAY



 ● Press PLAY to start playing.
- PAUSE


 ● Press PAUSE during playback to pause.
- NEXT


 ● Press NEXT to skip to next chapter or track.
- PREV.



 ● Press PREV. to skip to previous chapter or track.
- HOME

 ● Press to return Main menu(Home).
- LIGHT

 ● Press to control light on/off.
-  ● Record your vocal and music mix to the USB or SD card.
(Note: USB or SD card must be inserted before start recording. DVD disc is not possible for recording.)
- MUTE

 ● Press MUTE to cut the Audio output.
Press MUTE again to resume normal Audio output.
- RETURN

 
 ● Return to last screen while playing.
- REPEAT

 ● Press this key to play selected item repeatedly.
The screen shows as below:
REP: [OFF] REP: [REP1] REP: [REP ALL]
-  ● Press this button to listen the music that you **JUST** recorded.

Remote Control Preparation

Battery installation


1. Open the cover

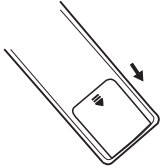



2. Install battery



 3. Close the cover

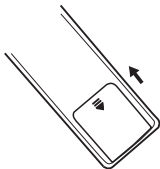

Using the Remote Control

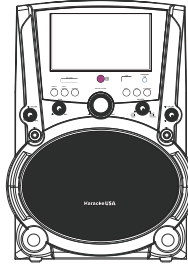  

Notes:

- Point the Remote Control directly to the sensor of the machine.
- Do not leave the Remote Control in an extremely hot or humid place.
- Do not spill water or put anything wet on the Remote Control.
- When this machine will not be used for an extended period of time, please remove the Battery from the Battery Compartment.

How to Select and Play

Power on/off

Press and hold the power button for 5 seconds to properly boot up the machine. Likewise, press and hold button 5 seconds to properly turn the machine off. Depending on applications and songs, allow 60 seconds to completely boot up machine.

 
Home Screen

After turning on the system, the Home Screen displays short cut icons as shown below.




① Internet Media

Touch and press the “Internet Media” icon to add new Apps(Media Site)

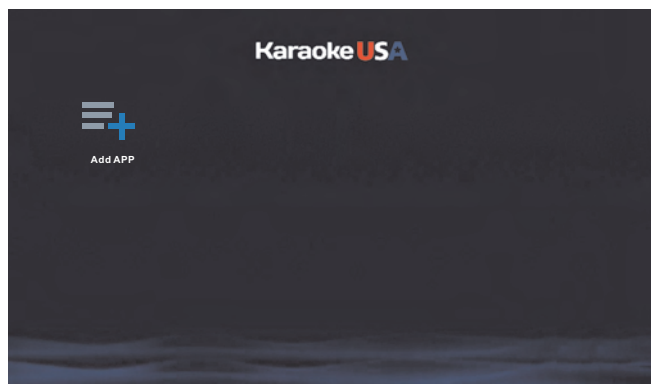


How to Record and Record Playback

 After selecting a song from either a USB Flash Drive or SD card, a row of functional control buttons will display. Use these buttons to execute your desired function.

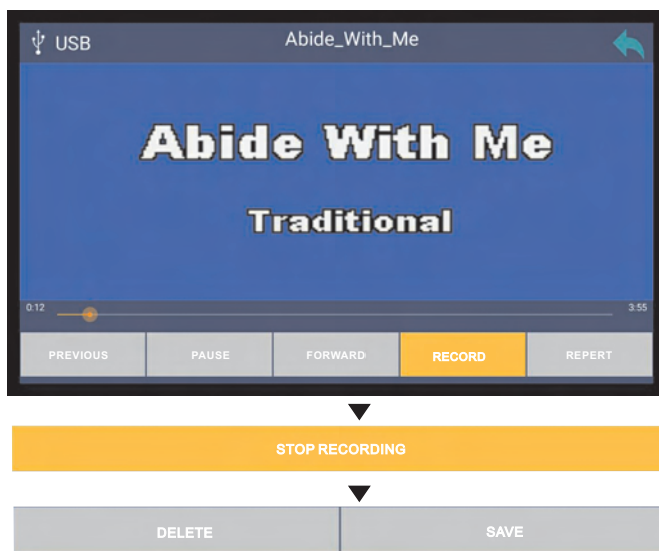

To record your voice and music, while a song is playing, depress **RECORD** button. The song will start over in RECORD mode. For best recordings, adjust your microphone volume to 70% or more. Sing loud and clear into the top of the microphone, not the side of the microphone grill. When finished recording, press **STOP RECORDING** button. Your options are to **SAVE** or **DELETE** your recording. Saving the recording will write a file to your record folder on the machine. To Playback any recorded songs, select your song from the Record Folder.

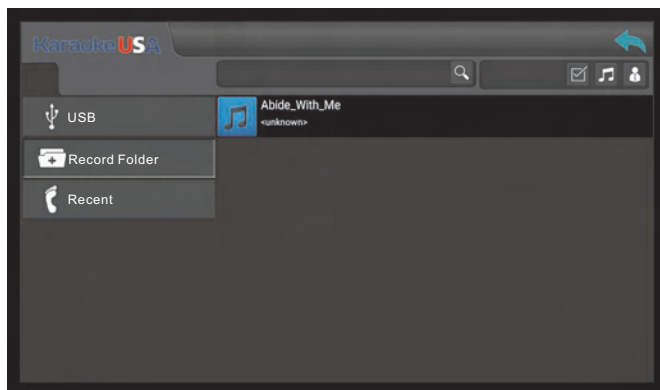 


How to Select and Play (Continued)

② Built-in Song

- How to play a Built-in song

 On the HOME Touch-Screen, select and press the Built-in song title to play a song

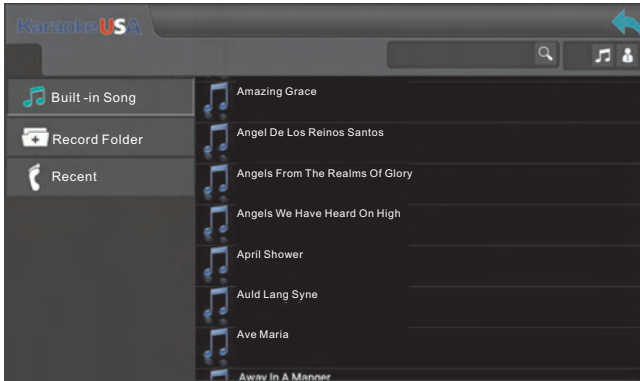

- After the song is selected, a row of Control Bars will show up. The selected song will play automatically.



PREVIOUS — Touch **PREVIOUS** to return to the last song.

PAUSE — Touch **PAUSE** to stop playing.

FORWARD — Touch **FORWARD** to go to the next song.

RECORD — Touch this bar to record your vocal with the song selected. You must connect the Microphone (provided) to Mic 1 or 2, then adjust the Microphone volume to 70% or more, sing vertically and loudly to the Microphone for better recording results.

After you finish recording, press **STOP RECORDING** to play the song & music mix. If you want to save your recording, press **SAVE**, otherwise press **DELETE** to erase the recording.

- The saved song can be found from the Record Folder inside the machine.
- To Playback any recorded song, select from the recorded song list.

How to Select and Play (Continued)

 
③ USB Flash

- Insert your USB (loaded with pre-recorded or downloaded songs) to the USB slot at the front of this Machine. The USB will now reconize.
- Touch the USB icon on the Home Screen to active, the song list will be displayed
- Pick and press on the song title you wish to play, a row of Control Bars will show up and the selected song title will play automatically.
- To **RECORD** or **SAVE**, please follow the previous illustrations on ② for Built-in Song.



④ SD Card

- After inserting of your SD Card (loaded with pre-recorded or downloaded songs) to the SD Card slot, follow the operating procedures as illustrated on ② for Built-in Song

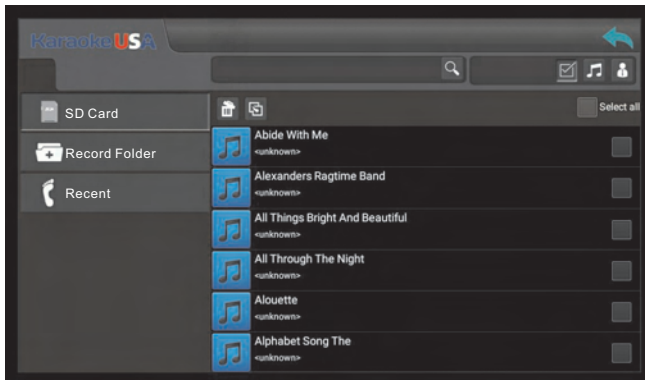




Note:

When inserting the SD card, Press forward until you hear a click sound. To remove, just push until the “catch” releases, then pull out softly from the slot.

How to Delete and Copy


How to delete a Built-in song

Press Edit icon once, a  Trash Bin icon and a group of check boxes will be displayed after each song title. Select those you wish to delete, followed by pressing on the  bin icon, an Alert window will show up, asking: "Delete selected songs?" Select and press OK to delete.

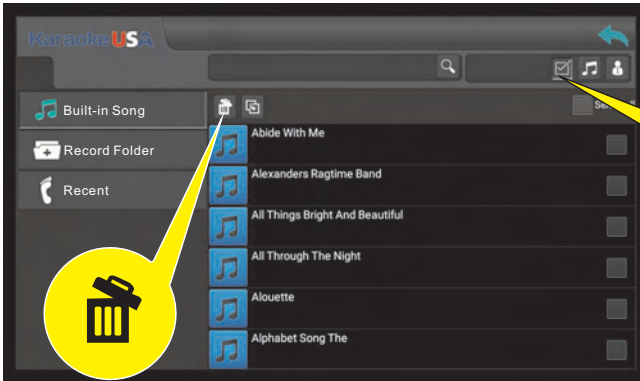 


Trash / Delete

 
Edit icon

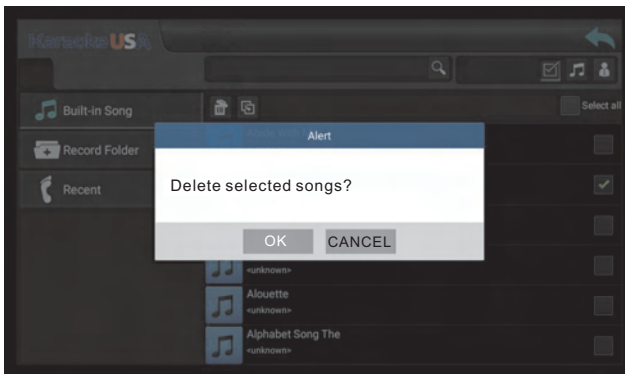

How to Delete and Copy(Continued)


How to copy a Built-in song to SD card or USB flash.

After depressing on Edit icon, then press  Transfer icon, a group of check boxes will be displayed after each song title, tap on those songs you wish to copy to SD or USB, then press to process. If you wish to cancel, then depress the button.

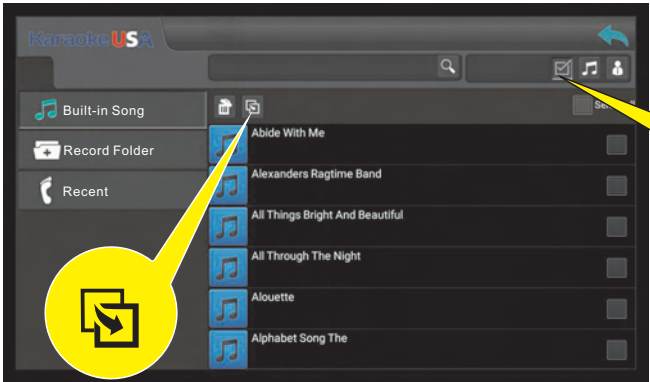 

Copy To

 Edit icon

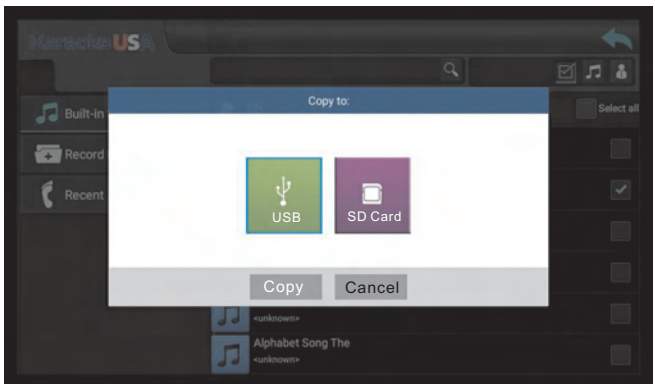



Note:

The Delete and Copy procedures for SD Card & USB flash are identical to those for Built-in Song.

Streaming

 
⑤ Streaming

Many Android Smart Phones have DLNA (Digital Living Network Alliance) App preloaded into their system, which allows them to project images, music, movies and videos to Wk760 screen (thru WiFi) or to TV (by HDMI connection).

Streaming Procedures: a) Depress Streaming  on WK760 Home Screen. (b) select the image(photo) or video you wish to project from your Smart Phone, then press DLNA icon , you will see WK760 appears on the phone, depress on WK760 once to activate the transfer.

Likewise you can do Streaming from your other Android Smart devices to WK760 following the same procedures as above.

Note: Both your Android Smart Device and WK760 machine ought to be connected to the same WiFi Network.

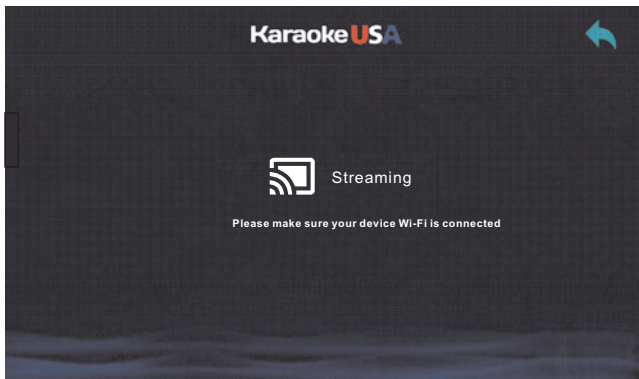


Bluetooth

⑥ Bluetooth


A. Prepare the Machine for Bluetooth connection

 - Press and pick Bluetooth mode on the Home Screen.
- The Home Screen will display : Waiting For Connect.

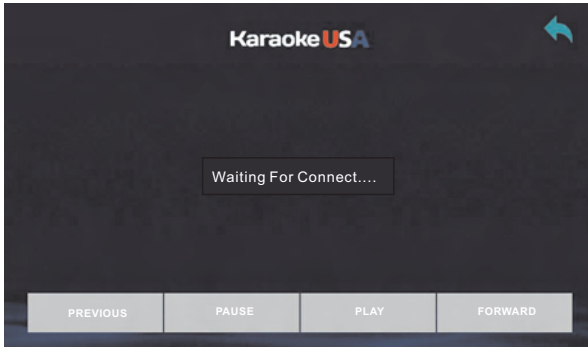

B. How to connect Smart Device (Smart Phone)to Bluetooth

 - At Setting mode, turn Bluetooth pairing on.
- A list of available devices will show on your device.
- Wk760 will appear on your device as an available connection.
- Click WK760 for pairing.
- If successful, "Connected" will appear.

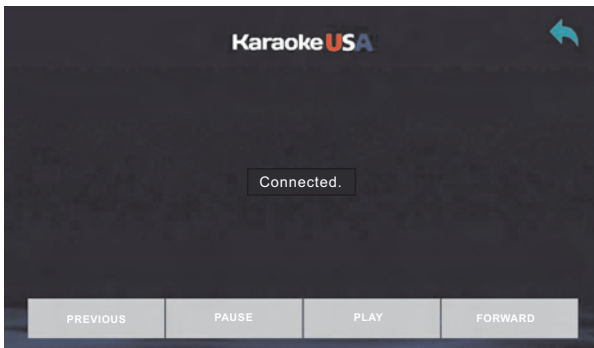


C. To play audio/music after Bluetooth pairing

- Select the song title or song lists you wish to play from your device.
- Be sure to increase volume on your Bluetooth source device.
- Then the song will play through the speaker of the machine.

System Setup


Setup

 On the Home Screen, when Setup is pressed, the following items will be shown: Wi-Fi, Language, Display, Memory, Reset & Version Update.

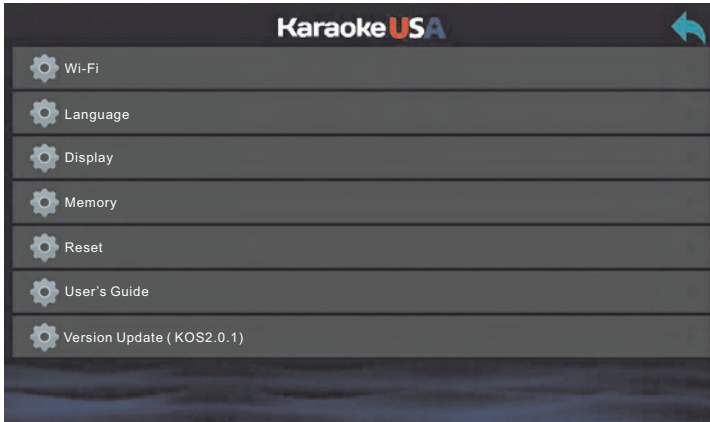

1. Wi-Fi

 
Connecting to your WiFi is the most important step to getting the most from your new system. Touch Wi-Fi (icon) and a list of available Wi-Fi networks will appear. You will need the owner's password to complete the connection. If successful, it will display "Connected" and the system is ready to access the internet and application stores.

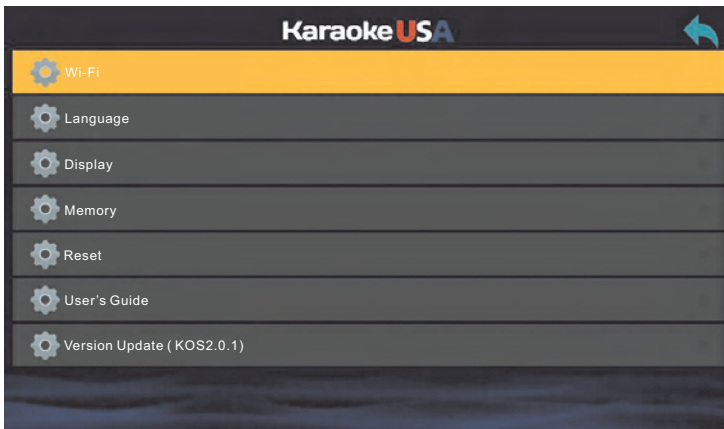

System Setup (Continued)


2. Language

 There are nearly 90 language options for various global areas. Choose and press on the desired language. The system will then operate with your chosen language. Further options include spell checking, personal dictionary, keyboard, speech rate, etc.

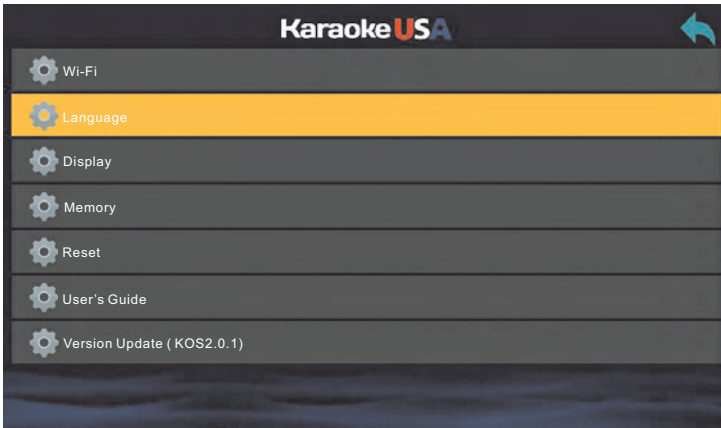

3. Display

 
Touch Display to adjust the Screen Brightness level .

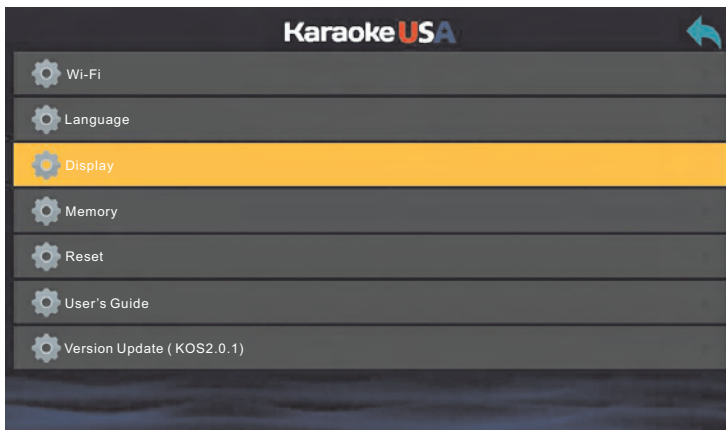

System Setup (Continued)

4. Memory

 
To check backup memory level used and still available.

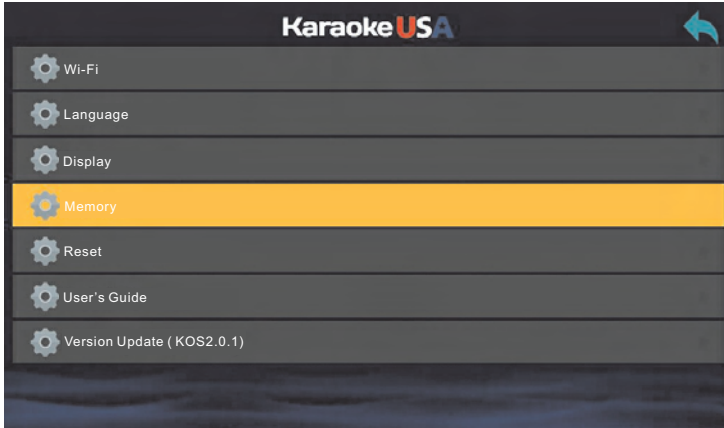

5. Reset


There may be a time when too much data is stored, too many Apps installed or troublesome Apps are causing slow system responses. If you cannot manually remove issues causing the problems, a system reset may be needed.

 WARNING: Resetting this system will reset all settings to factory defaults. All data, applications and profiles will be lost. That includes music, video, photos and recordings. (However all Built-in songs will be recovered). Please allow 5 minutes to complete the process. If unit freezes after 5 minutes, unplug and reconnect power. You are recommended to back up all data to an external USB Flash drive or SD card. Do not rely on the machine to save data during a reset.

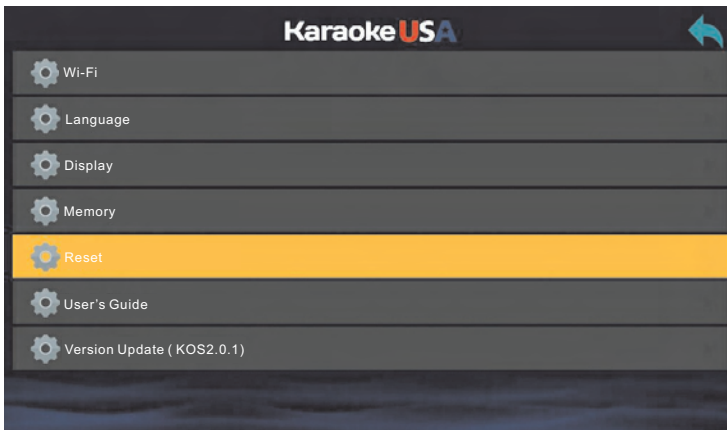


System Setup (Continued)

 6. User's Guide

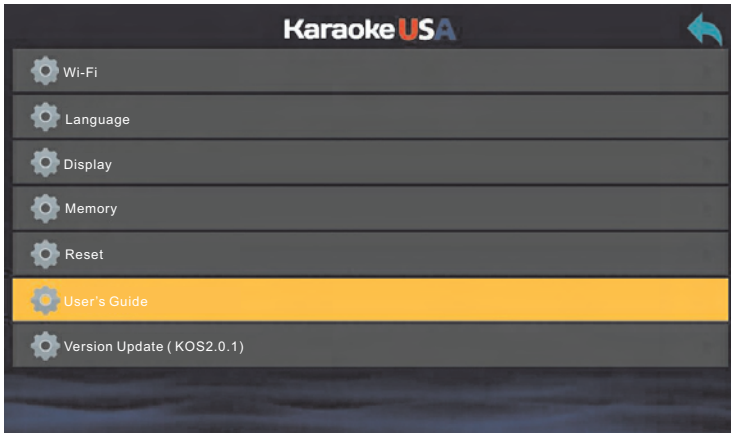

7. Version update

 When Version Update is depressed, a software update bar is shown. Press update to download the latest version. After updating, press install to complete the process. It will show "App installed" when finished.

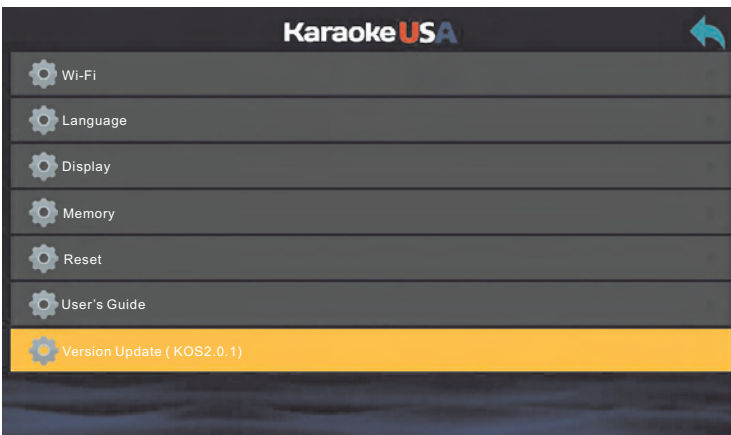

Specifications

7" High Definition LCD (1024 x 768 Resolution)

Capacitive Multi-Touch Screen

CPU: Quad- Core A7

RAM: 1GB

ROM:16GB

Wi-Fi (IEEE802.11 b/g/n) for internet connection

SD Card / USB slot recognizing up to 256GB

Operating Power : DC 12V/3.5A

Output Power : 50 Watts (Peak Power)

Accessories

AC Adapter x 1

Remote Control x 1

User's Guide x 1

Quick Start Guide x 1

Warranty Card x 1

Holder for Smart Devices x 1

Microphone x 2


Troubleshooting

	Symptom	Possible Problem	Solution
General	No Power	Power outlet	Ensure all are connected firmly
		power adaptor	
		Power cord	
		Power switch ON/ OFF position	Ensure the switch is in "ON" mode
	Powered but not respond	Needs to reset machine	Turn off the unit then turn on again
Microphone	Volume too low	Adjust Microphone volume setting	Set the microphone volume higher especially when recording
TV Connection	No picture (or sound) from TV set	Wrong setting on your TV	Ensure TV setting on the proper channel (video 1, channel 1 etc.)
Play USB & SD	Not reading	No files or wrong format file on your USB & SD	Download the files to your device and try different format if necessary
	Does not record	USB or SD Card is full storages	Delete some files to reserve some space for recording
	No function at all	wrong format or been used too long time	Backup your files on your computer and format the USB or SD card
Bluetooth	Not pairing	In the wrong mode	Set to Bluetooth mode
	Music too low	Volume setting too low on your smart device	Turn both volumes up on your smart device and the machine
Remote Control	Does not react	Battery (CR2032) No contact	Remove the Battery PVC isolator

Notes on SD Card

SD CARD

 - * Please use standardized SD Cards. poor quality SD Cards may cause Karaoke machine to malfunction.
- * Gently insert the SD Card with its label facing upwards.

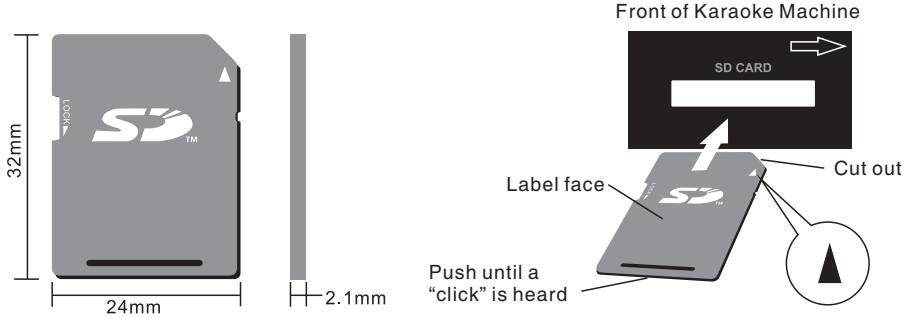

- * Compliant card type: SDHC Card, SD Card, miniSD Card, mini SDHC Card, microSD Card, mircoSDHC Card (requiring miniSD Card/miniSDHC Card/microSD Card/microSDHC Card adapter)
- * When any mini size SD Card or TF Card is used, firstly insert it to an Adaptor before application.

Karaoke USA

KARAOKE USA
1185 GOODEN CROSSING
LARGO, FL 33778 USA

TECH SUPPORT: WWW.KARAOKEUSA.COM/CS
DOWNLOAD SONGS: WWW.SINGTHEHITS.COM
SALES DEPARTMENT: SALES@KARAOKEUSA.COM