ARMBAND AM/FM RADIO

User's Guide for Model No. R300B v880-02




FUNCTIONS & CONTROLS

Features

- Digital AM/FM radio (PLL)
- Station memory presets (20 FM, 20 AM)
- LCD display
- Digital volume control
- · Digital clock with single alarm
- Stereo headphone jack with DBBS: dynamic bass boost system
- DC battery power: 2 AAA batteries (not included)


Includes

- Black armband with adjustable closure
- One set of stereo earbuds

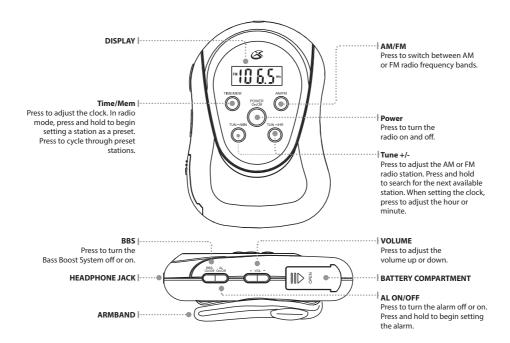

Battery Power

 Insert 2 AAA batteries (not included) into the BATTERY COMPARTMENT.

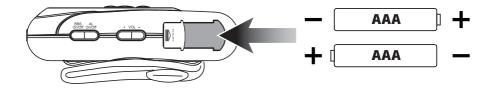

CLOCK, ALARM, AND RADIO

Setting the Clock

- 1. Press the Time/Mem button.
- 2. Press the Tune +/- buttons to adjust the hour.
- 3. Press the **Time/Mem** button.
- Press the Tune +/- buttons to adjust the minute. The AM or PM INDICATOR on the display will illuminate when the time is set in the AM or PM.
- 5. Press the **Time/Mem** button to finish setting the clock.

Setting the Alarm

- Press and hold the Alarm On/Off button until the display begins to flash.
- 2. Press the Tune +/- button to adjust the hour.
- 3. Press the Alarm On/Off button.
- Press the Tune +/- buttons to adjust the minute. The AM or PM INDICATOR on the display will illuminate when the time is set in the AM or PM.
- 5. Press the **Alarm On/Off** button to finish setting the clock.
- 6. Press the **Alarm On/Off** button to turn the alarm on. The ALARM INDICATOR on the display will illuminate when the alarm is turned on.
- 7. After the alarm sounds, press the **Power** button to turn the alarm off.

WARNINGS & PRECAUTIONS

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and. if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to ty to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

WARNING: To reduce the risk of fire or electric shock, do not expose this
apparatus to rain, moisture, dripping, or splashing.

Tuning the AM/FM Radio

- 1. Press the **Power** button to turn the radio on.
- Press the AM/FM button to switch between AM and FM frequencies.
- Press the Tune +/ buttons to set the desired AM or FM radio station. Press and hold to search for available stations.

Saving a Station as a Preset

- 1. Once on a desired frequency, press and hold the **Time/Mem** button.
- 2. Use the Tune +/- to set the desired preset number.
- 3. Press the **Time/Mem** button to finish setting the station as a preset.

Tuning to a Preset Radio Station

Press the Time/Mem button to cycle through your preset radio stations.

- CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- WARNING: Shock hazard Do Not Open.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
 Keep new and used batteries away from children. If the battery compartment does
- not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- · Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- · Batteries should be recycled or disposed of as per state and local guidelines.
- WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65).
 Wash hands after handling.
- · This product meets and complies with all Federal regulations.

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: **www.gpx.com**

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: **www.gpx.com**

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **www.gpx.com**

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@ dpiinc.com

Copyright © 2010 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



Protect for Today Sustain for Tomorrow