


# CARSON®

## DESKBRITE™ 300

COB LED 2x / 5x MAGNIFIER & DESK LAMP

LM-30

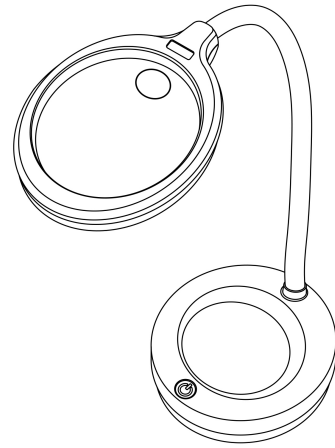

### Instructions for use:

#### Installing Batteries

Pull open battery door on bottom of base and set aside (Fig. 1). Insert 3 fresh AA batteries according to polarity indicators marked inside battery compartment (Fig. 2). Replace battery door when complete (Fig. 3).

Fig. 1

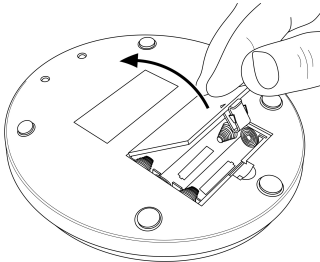


Fig. 2


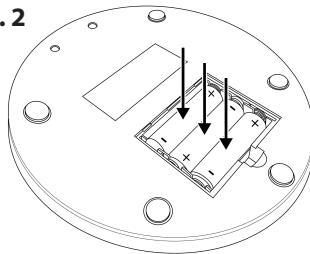


Fig. 3

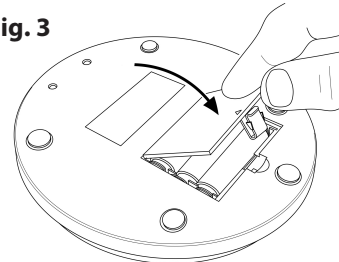


**Warning:** Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.

#### To Use With USB-C Wall Adapter

Insert USB-C plug into the USB-C port located on the back of the magnifier base (Fig. 4). Plug adapter into standard wall outlet.

**Note:** Batteries do not need to be removed when using wall adapter.


Fig. 4

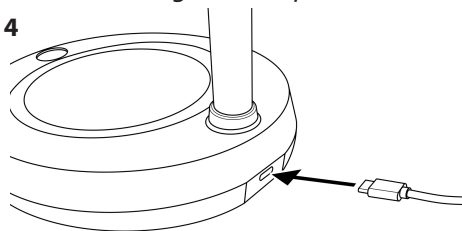

#### Activating LED Light

Press power button located on front of base once to activate LED light (Fig. 5). Press button again to increase brightness. Press once more to turn light off.

Fig. 5

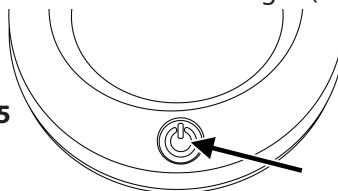

#### Cleaning Your Magnifier

Clean lens with a soft, clean microfiber cloth by rubbing gently in a circular motion. Moisten the lens cloth with water if needed. Do not use harsh chemicals, solvents or abrasives as they may damage the lens.

#### CAUTION - FIRE HAZARD:

Keep magnifier away from direct sunlight to prevent accidental fire.

#### Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.

#### In the U.S.A.

Phone: 1-631-963-5000

Email: info@carson.com

#### In the U.K.

Phone: +44 (0) 1938 557440

Email: uksupport@carson.com

#### In the E.U.

Phone: +44 (0) 1938 557440

Email: eusupport@carson.com

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)