(((SiriusXM°)))

USER GUIDE

Dock & Play Home Kit



Table of Contents

Compatibility	3
Introduction	4
Safety and Care Information. What's in the Box?	5
Home Dock Color-Coded Connections	8
SXWBR1 Remote Control Functions	
Home Installation	11
Step 1: Insert the Radio Dock Adapter Into the Dock Step 2: Connect the Home Dock and Dock the Radio	
Step 3: Place and Aim the Indoor/Outdoor Home Antenna	16
Troubleshooting	23
Product Specifications	26
Patent and Environmental Information	27
Patent Information	
FCC Statement	28
Copyrights and Trademarks	29
Indoor/Outdoor Home Antenna Template	30

Compatibility

This Home Kit is compatible with the following Dock & Play Radios:

SiriusXM:

- Tour
- Onyx Plus
- Edge

XM:

- Onyx
- Onyx EZ
- Onyx EZR
- XpressRCi
- XpressRC
- XpressR

Sirius:

- Sportster 5
- Starmate 8, 5, 4, 3
- Stratus 7, 6, 5
- Stratus

Thank you for purchasing the SiriusXM Dock & Play Home Kit!

The Home Kit lets you play your compatible XM or SiriusXM Dock & Play Radio through your home stereo system or powered speakers.

- There is no need for a second subscription. Just connect this Home Kit to a stereo system or set of powered speakers - and then simply move your Radio from any location to your home or office.
- This Home Kit works with a set of powered speakers or any stereo system with audio input jacks.

And for the latest information about this and other SiriusXM products and accessories, visit **www.siriusxm.com** or your favorite retailer.

Please read the entire User Guide before installing your Home Kit!

Safety and Care Information



 
IMPORTANT! Self installation instructions and tips are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. SiriusXM shall have no liability for damage or injury resulting from the installation or use of any SiriusXM or third party products. SiriusXM product warranties do not cover the installation, removal or reinstallation of any product.

- Do not expose to extreme temperatures (above 140°F or below -4°F, or above 60°C or below -20°C).
- Do not expose to moisture. Do not use device near or in water. Do not touch the device with wet hands.
- Do not let any foreign matter spill into device.
- Do not store in dusty areas.
- Do not expose to chemicals such as benzene and thinners. Do not use liquid or aerosol cleaners. Clean with a soft damp cloth only.
- Do not expose to direct sunlight for a prolonged period of time, and do not expose to fire, flame, or other heat sources.
- Do not try to disassemble and/or repair the device yourself.
- Do not drop your device or subject it to severe impact.
- Do not place heavy objects on device.
- Do not subject device to excessive pressure.

WARNING!

- · Opening the case may result in electric shock.
- Make sure that you insert the Home Power Adapter's plug all the way into the outlet.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

What's in the Box?



Home Dock



 





Indoor/Outdoor Home Antenna



Stereo Audio Cable



 IR Remote Control (For use with all radios except Tour)




SXWBR1 Remote Control (For use with Tour)



0

Home Dock Color-Coded Connections

The color-coded Home Dock makes it simple to connect the cables to the appropriate connectors at the rear of the dock.

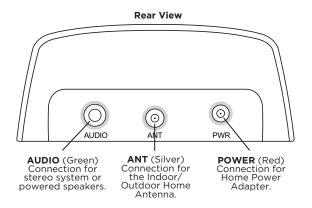

IR Remote Control Functions

Power Button

Press to turn Radio on and off.

Pause and Replay Buttons

For Radios which have these features, pause, rewind, and replay live radio and smart favorite channels.

Select Button

When in a menu or list, press to confirm selection of highlighted item; for SiriusXM addios which have these features, when in TuneMix or TuneScan, press to end TuneMix/Scan and continue playing the currently tuned channel; for some Sirius Radios, press to directly enter a channel number.

TuneMix/Memo Button

For SiriusXM Radios which have this feature, press to begin TuneMix; for Sirius Radios which have this feature, press to save artists or sonos.

FM Button

For Radios which have this feature, press to access and cycle through FM presets. (Vehicle Dock only).

Number Buttons

Press to tune to a stored favorite channel; for Radios which have this feature, also used to enter a channel number and directly tune to that channel.

Jump Button

For Radios which have these features, directly access traffic and weather of the chosen city; access the previous channel or a favorite channel.

For use with all Radios except Tour

Arrow Buttons Up/Down

Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight menu items

Arrow Buttons Left/Right

Press to search for channels by category.

Menu Button

Press to access advanced features and configuration options.

TuneScan Button

' For SiriusXM Radios which have this feature, press to begin TuneScan.

Direct/Display Button

For XM and SiriusXM Radios which have this feature, press to directly enter a channel number; for Sirius Radios which have this feature, press to customize the way you view content on the display.

Mute Button

 
Press to silence the audio. Press again to hear to the audio.

Bank Button

For Radios which have this feature, press to switch between favorite channel banks or bands.

IMPORTANT!

Pull tab and remove before using Remote Control.



SXWBR1 Remote Control Functions

(1)

CH

For use with Tour

Power Button

Press to turn Radio on and off.

Previous/Next Channel

Press open Linear Tune and to tune to the previous/next channel.

Select Button

Press to execute a focused button, tile, or other screen element. Press and hold to execute a focused button, tile, or other screen element which has a press & hold function (such as the Now Playing screen channel logo to save/delete channel as a favorite).

Favorites Button

Press to open a list of channels, sports teams, Pandora Artist Stations, and on-demand shows that have been saved as favorites for easy tuning.

Skip Back Button

Press to skip back to the beginning of the song/ segment. Press to skip back one song/segment. Press and hold to Continuously skip back.

Number Buttons

Press 0-9 to enter numerical digits. At the Now Playing screen, press 0-9 to open Direct Tune and enter the digits pressed on the remote control.

Jump Button

Press to Jump to the previously tuned channel/ content. (Perform a TuneStart if possible when TuneStart is enabled)

Settings Button

Press to display additional selections for Pandora Artist Stations, For You recommendations, and Radio information. Also access listener preferences and Radio settings.

Voice Button

((SiriusXm))

select

쉾

ĺ DIII

2

PULL

CH >

=

9

8

Press to enter a voice command such as, search, channel, play, find, go to, listen to, tune, open – and more.

Arrow Buttons Up/Down

Press to navigate current screen focus up/down to a button, tile, or other screen element (such as channel number, channel logo, or metadata on the Now Playing screen, and on/off sliders in Settings, etc.)

Arrow Buttons Left/Right

Press to navigate current screen focus left/right to a button, tile, or other screen element. Press to increase/decrease by no estep Audio Level, FM Channel, or Brightness settings. Press and hold to navigate to a previous page of a multiple page list, such as in categories and channels, favorites, etc., and scroll Linear Tune. Continuously increase/decrease Audio Level, FM Channel, or Brightness settings.

Categories Button

Press to opens a list of the channels, on-demand content, and sports games and teams in categories for browsing and tuning.

Live/Skip Forward Button

When Skip Forward button is shown: press to skip forward one song or segment. Press and hold to continuously skip forward. When Live button is shown: None.

Home Button

Returns to the Now Playing Home screen from any other screen.

\Play/Pause Button

Press to play audio or pause audio.


IMPORTANT! Pull tab and remove before using Remote Control.

Remote Control Battery Replacement

The Remote Control has a child resistant battery compartment which requires a pointed object to open the battery compartment. A paper clip is recommended, as shown.

To Replace the Battery:

- Press the paper clip or other object into the lock release opening on the Remote Control, and slide the battery compartment cover off of the Remote Control.
- **2.** Slide the battery out of the battery compartment.
- **3.** Replace with a new battery. Observe the correct orientation of the battery; the + positive side of the battery should be facing up.
- **4.** Replace the battery compartment cover.

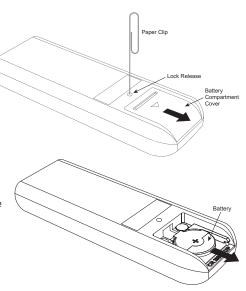


There are several steps to setting up your Home Kit. Follow these steps for an easy installation.


Step 1: Insert the Radio Dock Adapter Into the Dock

You'll need to insert the Radio Dock Adapter that is compatible with your Radio into the Home Dock.

 - 1. Locate the Radio Dock Adapter that is compatible with your Radio.
 - If you have an XM or SiriusXM Radio: If your Radio is branded as XM* or SiriusXM*, select the Radio Dock Adapter marked XM & SIRIUSXM on the back of the adapter.




 If you have a Sirius Radio: If your Radio is branded as Sirius*, select the Radio Dock Adapter that is marked SIRIUS on the back of the adapter.




*If you are unsure whether your Radio is an XM, SiriusXM, or Sirius Radio, check the label on the back of the Radio. If the label on your Radio says XM Radio ID or Radio ID, and has an 8-digit alphanumeric number, it is an XM or SiriusXM Radio. If the label on your Radio says Sirius ID, SID, or ESN, and has a 12-digit numeric number, it is a Sirius Radio.


2. Orient and place the Radio Dock Adapter that you selected into the Home Dock. Be sure the adapter is centered, and is seated all the way down into the dock.

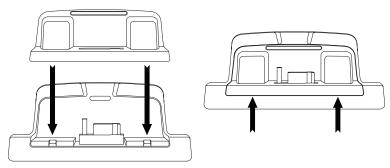

3. Once the adapter is seated correctly in the Home Dock, gently press the top of the adapter against the dock with your finger until it clicks into place. The Radio Dock Adapter is now installed.

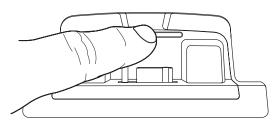

Should it become necessary to remove the Radio Dock Adapter from the Home Dock, use your fingernail to gently press down on the top of the adapter, and then use a long thin object such as a paper clip, a screw driver or something similar to pry the adapter away until it releases from the dock. Then lift the adapter up and out of the dock.

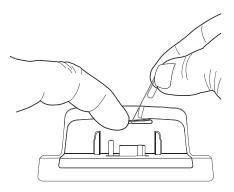


Step 2: Connect the Home Dock and Dock the Radio

When installing the Home Dock in your home, choose a location in close proximity to your stereo system or powered speakers, and also where the cable from the Indoor/Outdoor Home Antenna can reach the Home Dock. The location should be easily accessible and provide good visibility of the display, but should not be located where it will be in direct sunlight, which will affect the visibility of the display screen.

A. Connect the Indoor/Outdoor Home Antenna


Once you have selected a location for the dock, connect the antenna to the **silver ANT** connector at the rear of the Home Dock.

 We will work on the location and aiming of the antenna in the next step.



B. Connect the Home Power Adapter

Connect the Home Power Adapter to the **red Power** connector at the rear of the Home Dock, and plug it into a wall outlet.

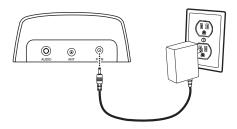


C. Dock Your Radio

Insert your Radio into the Home Dock as shown, and turn the Radio On by pressing the **Power** button.



NOTE: Your Radio may be a different model than the Radio shown here.

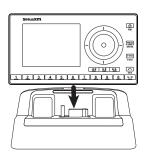

Step 3: Place and Aim the Indoor/Outdoor Home Antenna

To begin, try experimenting with the Indoor/ Outdoor Home Antenna to get a feel for the reception in your location. In major metropolitan areas, you might find that you get great reception in several locations without worrying too much about aim and placement. If 2 or 3 vertical bars of signal strength are being displayed, continue with step 4 on page 20.

If there is not at least two bars of signal strength displayed, refer to your Radio's User Guide (go to www.siriusxm.com/guides) for instructions on accessing the Signal Indicator, Signal, or Antenna Aiming screen of your Radio, to see a visual indication of signal strength. Move the antenna around the room or from room to room. Aim it from different windows. If you find a location where you are receiving good Satellite or Terrestrial signal strength (or both), exit the Signal Indicator, Signal, or Antenna Aiming screen. Continue with step 4 on page 20.





*The screens shown above are representative and may differ from the screens displayed on your Radio.

If you are unable to find a location where you are receiving good Satellite or Terrestrial signal strength, try some of the suggestions which follow.

Other Indoor/Outdoor Home Antenna Installation Suggestions

Try moving the Indoor/Outdoor Home Antenna closer to a window, ideally one that is facing due south.

Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? Move the antenna closer to the window.



TIP! Still not sure which way is south or where to place your Indoor/Outdoor Home Antenna? Look up your location on an online mapping website that offers satellite views of street addresses where you can easily see which way is south, and what window may offer an unobstructed view of the sky.

Another easy method is to start at any window, then work from window to window in a simple pattern to find the window that gives the best signal strength. Note that the antenna must also have an unobstructed

view, with no trees or buildings blocking its aim. If the antenna is aimed through a window, be aware that blinds, screens, or any other non-glass elements such as thermal insulation can sometimes cause reception issues. If this is the case, you may want to use another window or place the antenna outside of the window.



If you find a window that gives you good signal strength, you can place the antenna on the windowsill. The antenna may need to be placed on something


to raise it above the level of the window frame

If you don't have a window where you receive a consistent signal, or placing the antenna in a window is not a practical solution for you, **BETTER** reception can be achieved by placing the antenna outside on a window ledge, porch, table, or patio. The location you choose should provide the antenna with a clear view of the southern sky.

If none of the previous solutions work for you, then the **BEST** reception can be achieved by mounting the antenna outdoors, with a clear view of the southern sky.


Note that you will want to consider any potential hazards when you choose the mounting location, and possibly consider professional installation. Sirius XM Radio Inc. is not liable for any damages.

To mount the antenna, you will need four screws (not included)

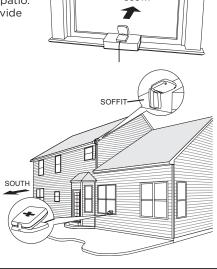


SOUTH

with a 1/4" head (e.g., an M3 screw), and that are suitable for the material onto which you are affixing the antenna, (e.g., wood, metal, etc.). The screws should be spaced 1-3/8" apart horizontally and 1-1/8" vertically. Refer to the template on "Indoor/Outdoor Home Antenna Template" on page 30.

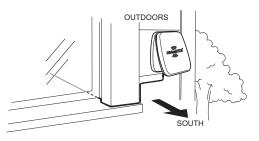

Once you have found a suitable location for the antenna, route the antenna cable to the Home Dock. Be sure you avoid any obstructions that could crimp, kink, or twist the cable. Use protective grommets wherever rough openings are encountered. If the antenna is installed outdoors, route the cable from the antenna location to the interior of the home, working the cable through the basement, under a window sill, etc., and make adjustments to take up cable slack as necessary.

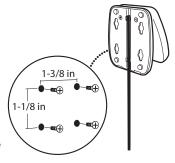




TIP! If your Indoor/Outdoor Home Antenna's cable isn't long enough, visit **www.siriusxm.com/accessories**, or your favorite retailer, and consider a 50 ft. Home Antenna Extension Cable or a Wireless Home Signal Repeater.

Verify that the antenna is pointed south, and that the antenna's view of the sky is not blocked by a tree, a building, a bridge, or anything else. Try various

locations until you find one where you are receiving a good signal.

The Indoor/Outdoor Home Antenna's reception can also be tweaked by opening or closing the antenna clamshell, and turning the antenna. While observing the signal strength, make small adjustments to the angle of tilt of the clamshell until the highest possible signal strength is achieved. If you have not wall-mounted the antenna, turn the antenna slightly to the right or left and observe if the signal strength increases. For each tweak, allow a few seconds in each position to determine if the signal strength increases.

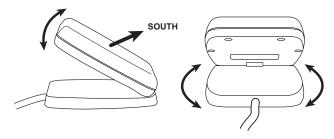

Step 4: Connect the Audio


The audio can be connected wirelessly using Bluetooth® if your SiriusXM Radio supports Bluetooth. If your SiriusXM radio does not support Bluetooth, the Home Dock can be connected to a stereo system or to a set of powered speakers,

If you are not using Bluetooth, see the following section if connecting to a stereo system, or "To Connect the Home Dock to Your Powered Speakers" on page 22 if connecting to a set of powered speakers.

To Connect the Home Dock to Your Stereo System

The Home Dock can be connected to your stereo system through the **Aux** In or Line In connection of your stereo system, using the provided Stereo Audio Cable.


- Take the provided Stereo Audio Cable and connect the single 1/8" (3.5 mm) connector to the green AUDIO connector at the rear of the Home Dock
- 2. Connect the white left and red right Stereo Audio Cable connectors ("L" and "R" are also on each respective tip) to any available input other than PHONO on your stereo system. (If your stereo's inputs are marked red and black, simply connect the white plug to the black input.)
- **3.** Turn the stereo system On, and make sure you select the correct input on your stereo system for the **Aux In** or **Line In** connection.
- **4.** If you have connected everything correctly, and you are receiving signal, you should hear the SiriusXM audio.
- 5. The audio level of your Radio can also be adjusted, if necessary. Refer to your Radio's User Guide (go to www.siriusxm.com/guides) for instructions on how to adjust the audio level. The installation is complete.

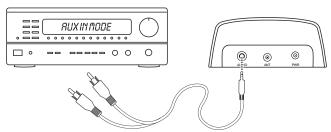

To Connect the Home Dock to Your Powered Speakers

The Home Dock can be connected directly to a set of powered speakers.

 - **1.** Connect the 1/8" (3.5 mm) connector from the powered speakers to the **green AUDIO** connector at the rear of the Home Dock.
- 2. Plug the powered speakers into an AC outlet.
- 3. Turn On the powered speakers.
- **4.** If you have connected everything correctly, and you are receiving signal, you should hear the SiriusXM audio.
- **5.** The audio level of your Radio can also be adjusted, if necessary. Refer to your Radio's User Guide (go to **www.siriusxm.com/guides**) for instructions on how to adjust the audio level. The installation is complete.



Troubleshooting

Your Home Kit has been designed and built to be trouble-free, but if you experience a problem, try this:

- Check that all connections are firm and secure.
- Make sure you have connected the Home Dock as described in this User Guide. Verify that the AC power outlet is working.

If you see this on the screen:	Try this:
No Signal or No Satellite Signal or Acquiring Signal	Move the antenna to a south-facing window. Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? You may need to find a better location for the antenna. Refer to "Step 3: Place and Aim the Indoor/Outdoor Home Antenna" on page 16.
Check Antenna Connection or Check Antenna or Antenna	Make sure that the Indoor/Outdoor Home Antenna cable is firmly and securely plugged into the Home Dock. Make sure the cable is not bent or broken. Turn the Radio off, then on, to reset this message. If the message persists, most likely the Indoor/Outdoor Home Antenna cable has been damaged. Replace the antenna.
Channel Off Air or Channel Unavailable	• The channel you've selected is not currently broadcasting. Tune to another channel.
Loading	Your Radio is acquiring audio or program information. This message usually goes away in a few seconds.

Troubleshooting

If you see this on the screen:	Try this:
_	No program information, such as artist name, song title, or channel exists.
If this happens:	
You do not receive all the channels to which you subscribed	If you have not yet activated your service, refer to the Activation or Subscribe section in the User Guide which accompanied your Radio (go to www.siriusxm.com/guides). Go to www.siriusxm.com/refresh and follow the directions to refresh your Radio. Call 1-866-635-2349 for further assistance.
No audio	Check all cables between your Radio and your stereo system or powered speakers for a firm and secure connection. Ensure you have selected the proper input source on your stereo system, or try another source. Increase the audio level of the Radio. Refer to the User Guide which accompanied your Radio for instructions (go to www.siriusxm.com/guides).
Audio sounds too soft	• Raise the volume of your stereo system or powered speakers, or increase the audio level of your Radio until the sound quality improves. Refer to the User Guide which accompanied your Radio for instructions (go to www.siriusxm.com/guides).
No song title or artist name is displayed	•The information may not be available or updates may be in progress.

Troubleshooting

If this happens:	Try this:
Traffic and Weather channels sound different from other channels	These channels use a different audio technology than other channels so they often sound different from other channels.
The Radio shuts off unexpectedly	If your Radio has these features, check these: If Sleep Timer is set, the Radio will turn off after the selected length of time in a Home Dock. Set Sleep Timer to Off. If Delayed Power is set, the Radio will turn off after the selected length of time in the Home Dock. Set Delayed Power to Off.
The demo is playing	Your Indoor/Outdoor Home Antenna is not connected or you are not receiving the signal. Check that the Indoor/Outdoor Home Antenna is connected properly and is not obstructed.

Product Specifications

System

Power Requirements: Operating Temperature:

Audio Output:

Home Dock

Dimensions:

Weight (without adapter): Weight (with adapter): Audio Connector:

Antenna Connector:

Remote Control

Dimensions:

Weight: Battery:

Home Power Adapter

Input: Output:

Indoor/Outdoor Home Antenna

Type: Connector:

Cable Length:

Stereo Audio Cable

Connectors: Cable Length: 110 V AC, 200 mA (max)

-4°F to +140°F (-20°C to +60°C)

1.5 V_{rms} (max)

4.1 in (W) X 1.8 in (H) X 1.7 in (D)

105 mm (W) X 45 mm (H) X 44 mm (D) 1.8 oz (50 g)

1.9 oz (54 g)

1/8 in (3.5 mm) female

SMB male

1.6 in (W) x 4.7 in (H) x 0.63 in (D)

41 mm (W) x 120 mm (H) x 64 mm (D)

2.1 oz (60 g) CR2032 (3 V)

100-240 V AC, 50-60 Hz, 0.35 A

5.0 V DC, 1.5 A

SiriusXM Indoor/Outdoor

SMB female

Approximately 20 ft (6.1 m)

1/8 in (3.5 mm) stereo male to RCA left & right

Approximately 5.9 ft (180 cm)

Patent and Environmental Information

Patent Information

It is prohibited to, and you agree that you will not, copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise access and/or make available any technology incorporated in this product. The music, talk, news, entertainment, data, and other content on the Services are protected by copyright and other intellectual property laws and all ownership rights remain with the respective content and data service providers. You are prohibited from any export of the content and/or data (or derivative thereof) except in compliance with applicable export laws, rules and regulations. The user of this or any other software contained in a SiriusXM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, hack, manipulate or disassemble the object code, or in any other way convert the object code into human-readable form.

Environmental Information

Follow local guidelines for waste disposal when discarding packaging and electronic appliances.

FCC Statement

The user is cautioned that changes or modifications not expressly approved by Sirius XM Radio Inc. can void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna of the affected receiver.
- Increase the separation between the SiriusXM equipment and the affected receiver.
- Connect the SiriusXM equipment into an outlet on a circuit different from that to which the affected receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! The FCC and FAA have not certified Satellite Radio Receiver use in any aircraft (neither portable nor permanent installation). Therefore, Sirius XM Radio Inc. cannot support this type of application or installation.

Copyrights and Trademarks

© 2020 Sirius XM Radio Inc. Sirius XM, Automatic, Pandora and all related logos are trademarks of Sirius XM Radio Inc. and its respective subsidiaries. All other marks. channel names and logos are the property of their respective owners. All rights reserved. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG. Inc.

SiriusXM subscriptions are sold separately. See our Customer Agreement for complete terms at siriusxm.com, including how to cancel, which includes calling SiriusXM at 1-866-635-2349.


Hardware and subscription sold separately. All fees, content and features are subject to change. Our satellite service is available only to those at least 18 and older. Installation instructions are provided. You must determine if you have the knowledge, skills and ability required to properly perform installation. Professional installation recommended. SiriusXM product warranties do not cover the installation, removal or reinstallation of any product.



★ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.



Indoor/Outdoor Home Antenna Template

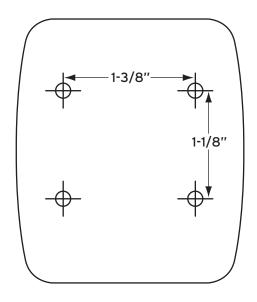

Sirius XM Radio Inc. 1221 Avenue of the Americas New York, NY 10020

1.866.635.2349

siriusxm.com

© 2020 Sirius XM Radio Inc.

SXDH4200709b