 


1 Insert the Radio Dock Adapter Into the Dock

 
You'll need to insert the Radio Dock Adapter that is compatible with your Radio into the Home Dock.

A. Locate the Radio Dock Adapter that is compatible with your Radio.


If you have an XM or SiriusXM Radio: If your Radio is branded as **XM*** or **SiriusXM***, select the Radio Dock Adapter marked **XM & SIRIUSXM** on the back of the adapter.




If you have a Sirius Radio: If your Radio is branded as **Sirius***, select the Radio Dock Adapter that is marked **SIRIUS** on the back of the adapter.




B. Orient and place the Radio Dock Adapter that you selected into the Home Dock. Be sure the adapter is centered, and is seated all the way down into the dock.

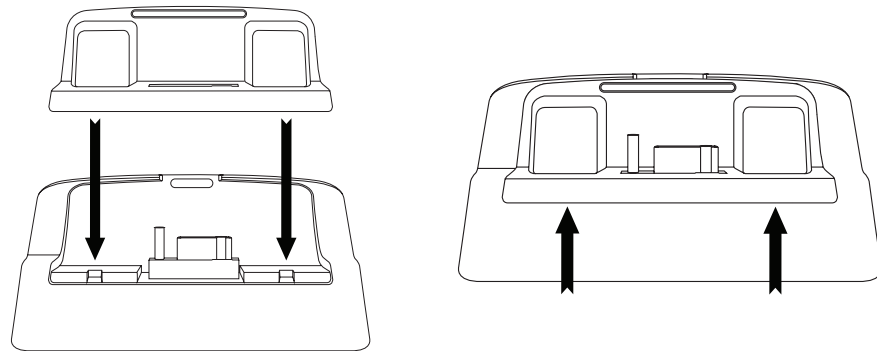

C. Once the adapter is seated correctly in the Home Dock, gently press the top of the adapter against the dock with your finger until it clicks into place. The Radio Dock Adapter is now installed.

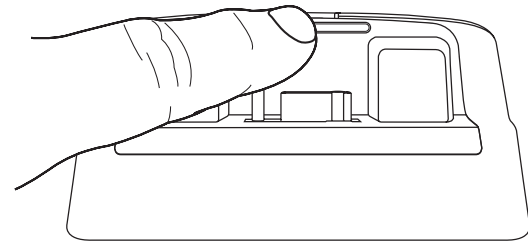

Should it become necessary to remove the Radio Dock Adapter from the Home Dock, use your fingernail to gently press down on the top of the adapter, and then use a long thin object such as a paper clip, a screw driver or something similar to pry the adapter away until it releases from the dock. Then lift the adapter up and out of the dock.

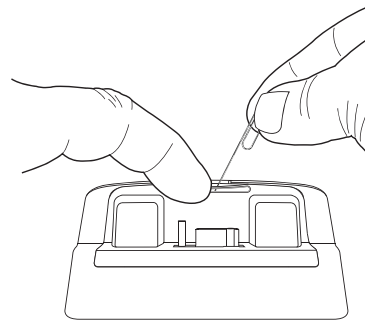


*If you are unsure whether your Radio is an XM, SiriusXM, or Sirius Radio, check the label on the back of the Radio. If the label on your Radio says XM Radio ID or Radio ID, and has an 8-digit alphanumeric number, it is an XM or SiriusXM Radio. If the label on your Radio says Sirius ID, SID, or ESN, and has a 12-digit numeric number, it is a Sirius Radio.


2 Connect the Home Dock and Dock the Radio

Select a location in close proximity to your stereo system or powered speakers, and also where the cable from the Indoor/Outdoor Home Antenna can reach the Home Dock. The location should be easily accessible and provide good visibility of the display, but should not be located where it will be in direct sunlight, which will reduce the visibility of the display screen.


A. Connect the Indoor/Outdoor Home Antenna to the **silver ANT** connector at the rear of the Home Dock.

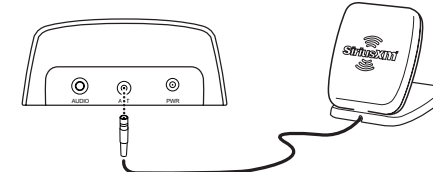


B. Connect the Home Power Adapter to the **red PWR** connector at the rear of the Home Dock, and plug it into a wall outlet.

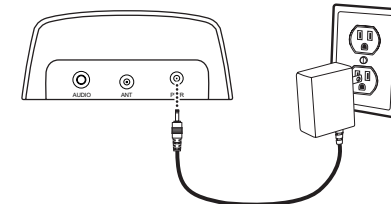

C. Place your Radio in the Home Dock.

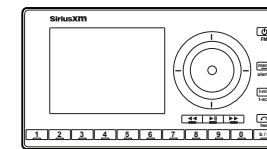

D. Power on your Radio by pressing the **Power button**.

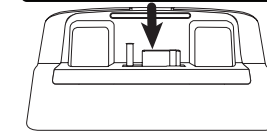

NOTE: Your Radio may be a different model than the Radio shown here.

3 Place & Aim the Indoor/Outdoor Home Antenna

A. Check the signal strength indicator on the Radio's screen. If there are 2 or 3 vertical bars of signal strength, continue with step 4. If not, continue with step 3B below.


B. Refer to your Radio's User Guide (go to www.siriusxm.com/guides) for instructions on accessing the **Signal Indicator**, **Signal**, or **Antenna Aiming** screen of your Radio, to see a visual indication of signal strength.

C. Try experimenting with the Indoor/Outdoor Home Antenna to get a feel for the reception in your location. If either the Satellite or the Terrestrial signal bar (or both) are more than half filled, you are receiving a good signal and are done aiming the antenna. Exit the **Signal Indicator**, **Signal**, or **Antenna Aiming** screen and continue with step 4. Note that for the Tour radio there must be 50% or greater signal strength on both the high and low bands.


D. If you are not yet receiving a good signal, move the antenna around the room, or from room to room. Aim it at different windows, try moving the antenna **closer to a window, ideally one that is facing due south**.

Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? Place the antenna on the windowsill making sure it faces the glass and not the window frame. If you are receiving a good Satellite or Terrestrial signal (or both), you're done aiming the antenna. Exit the **Signal Indicator**, **Signal**, or **Antenna Aiming** screen and continue with step 4.

If you were unable to find an indoor location for the antenna, you will need to place it outdoors. Refer to the SiriusXM Dock & Play Home Kit User Guide SXD4 for outdoor location options. Go to www.siriusxm.com/guides for the User Guide.

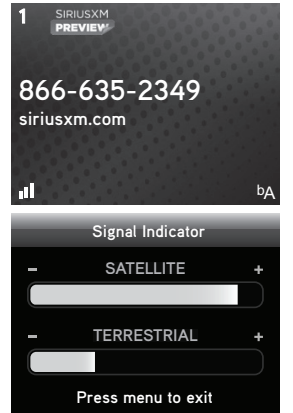

*The screens shown above are representative and may differ from the screens displayed on your Radio.

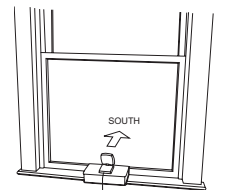

4 Connect the Audio

The Home Dock can be connected to your stereo system or a set of powered speakers. The Home Dock may also be connected to a Bluetooth® speaker or other Bluetooth audio device if your SiriusXM Radio supports Bluetooth.

To Connect the Home Dock to Your Stereo System:


- A.** Take the provided Stereo Audio Cable and connect the single connector to the **green AUDIO** connector at the rear of the Home Dock.
- B.** Connect the white left and red right Stereo Audio Cable connectors to any available input other than PHONO on your stereo system. (If your stereo's inputs are red and black, connect the white plug to the black input.)
- C.** Turn the stereo system On, and make sure you select the correct input on your stereo system for the **Aux In** or **Line In** connection.
- D.** If you have connected everything correctly, and you are receiving signal, you should hear the SiriusXM audio.
- E.** The audio level of your Radio can also be adjusted, if necessary. Refer to your Radio's User Guide (go to www.siriusxm.com/guides) for instructions on how to adjust the audio level.

To Connect the Home Dock to Your Powered Speakers:

- A.** Connect the powered speakers to the **green AUDIO** connector at the rear of the Home Dock.
- B.** Plug the powered speakers into a wall outlet.
- C.** Turn On the powered speakers.
- D.** If you have connected everything correctly, and you are receiving signal, you should hear the SiriusXM audio.
- E.** The audio level of your Radio can also be adjusted, if necessary. Refer to your Radio's User Guide (go to www.siriusxm.com/guides) for instructions on how to adjust the audio level.

To Connect the Home Dock using Bluetooth:

- A.** Follow the instructions that accompanied your Radio to connect to a Bluetooth device. Go to www.siriusxm.com/guides for the User Guide.

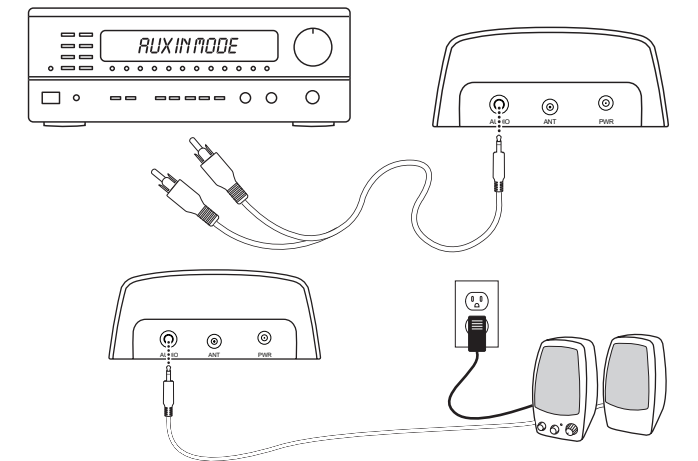



QUICK START GUIDE



Self installation instructions and tips are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills and physical ability required to properly perform an installation. SiriusXM shall have no liability for damage or injury resulting from the installation or use of any SiriusXM or third party products. SiriusXM product warranties do not cover the installation, removal or reinstallation of any product.

Sirius XM Radio Inc.
1221 Avenue of the Americas
New York, NY 10020
siriusxm.com
1.866.635.2349

SXWBR1 Remote Control Functions

For use with Tour

Power Button
Press to turn Radio on and off.

Previous/Next Channel
Press open Linear Tune and to tune to the previous/next channel.

Select Button
Press to execute a focused button, tile, or other screen element. Press and hold to execute a focused button, tile, or other screen element which has a press & hold function (such as the Now Playing screen channel logo to save/delete channel as a favorite).

Favorites Button
Press to open a list of channels, sports teams, Pandora Artist Stations, and on-demand shows that have been saved as favorites for easy tuning.

Skip Back Button
Press to skip back to the beginning of the song/segment. Press to skip back one song/segment. Press and hold to continuously skip back.

Number Buttons
Press 0-9 to enter numerical digits. At the Now Playing screen, press 0-9 to open Direct Tune and enter the digits pressed on the remote control.

Jump Button
Press to Jump to the previously tuned channel/content. (Perform a TuneStart if possible when TuneStart is enabled.)

Settings Button
Press to display additional selections for Pandora Artist Stations, For You recommendations, and Radio information. Also access listener preferences and Radio settings.

Voice Button
Press to enter a voice command such as, search, channel, play, find, go to, listen to, tune, open - and more.

Arrow Buttons Up/Down
Press to navigate current screen focus up/down to a button, tile, or other screen element (such as channel number, channel logo, or metadata on the Now Playing screen, and on/off sliders in Settings, etc.)

Arrow Buttons Left/Right
Press to navigate current screen focus left/right to a button, tile, or other screen element. Press to increase/decrease by one step Audio Level, FM Channel, or Brightness settings. Press and hold to navigate to a previous page of a multiple page list, such as in categories and channels, favorites, etc., and scroll Linear Tune. Continuously increase/decrease Audio Level, FM Channel, or Brightness settings.

Categories Button
Press to open a list of the channels, on-demand content, and sports games and teams in categories for browsing and tuning.

Live/Skip Forward Button
When Skip Forward button is shown: press to skip forward one song or segment. Press and hold to continuously skip forward. When Live button is shown: None.

Home Button
Returns to the Now Playing Home screen from any other screen.

Play/Pause Button
Press to play audio or pause audio.

IMPORTANT! Pull tab and remove before using Remote Control.

IR Remote Control Functions

For use with all Radios except Tour

Power Button
Press to turn Radio on and off.

Pause and Replay Buttons
For Radios which have these features, press to pause, rewind, and replay live radio and smart favorite channels.

Select Button
When in a menu or list, press to confirm selection of highlighted item; for SiriusXM Radios which have these features, when in TuneMix or TuneScan, press to end TuneMix/Scan and continue playing the currently tuned channel; for some Sirius Radios, press to directly enter a channel number.

TuneMix/Memo Button
For SiriusXM Radios which have this feature, press to begin TuneMix; for Sirius Radios which have this feature, press to save artists or songs.

FM Button
For Radios which have this feature, press to access and cycle through FM presets. (Vehicle Dock only).

Number Buttons
Press to tune to a stored favorite channel; for Radios which have this feature, also used to enter a channel number and directly tune to that channel.

Jump Button
For Radios which have these features, press to directly access traffic and weather of the chosen city; access the previous channel or a favorite channel.

Arrow Buttons Up/Down
Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight menu items.

Arrow Buttons Left/Right
Press to search for channels by category.

Menu Button
Press to access advanced features and configuration options.

TuneScan Button
For SiriusXM Radios which have this feature, press to begin TuneScan.

Direct/Display Button
For XM and SiriusXM Radios which have this feature, press to directly enter a channel number; for Sirius Radios which have this feature, press to customize the way you view content on the display.

Mute Button
Press to silence the audio. Press again to hear to the audio.

Bank Button
For Radios which have this feature, press to switch between favorite channel banks or bands.

IMPORTANT! Pull tab and remove before using Remote Control.

Specifications

System
Power Requirements: 110 V AC, 200 mA (max)
Operating Temperature: -4°F to +140°F (-20°C to +60°C)
Audio Output: 1.5 V_{rms} (max)

Home Dock
Dimensions: 4.1 in (W) X 1.8 in (H) X 1.7 in (D)
105 mm (W) X 45 mm (H) X 44 mm (D)
Weight (without adapter): 1.8 oz (50 g)
Weight (with adapter): 1.9 oz (54 g)
Audio Connector: 1/8 in (3.5 mm) female
Antenna Connector: SMB male

Remote Controls (2)
Dimensions: 1.6 in (W) x 4.7 in (H) x 0.63 in (D)
41 mm (W) x 120 mm (H) x 64 mm (D)
Weight: 2.1 oz (60 g)
Battery: CR2032 (3 V)

Home Power Adapter
Input: 100-240 V AC, 50-60 Hz, 0.35 A
Output: 5.0 V DC, 1.5 A

Indoor/Outdoor Home Antenna
Type: SiriusXM Indoor/Outdoor
Connector: SMB female
Cable Length: Approximately 20 ft (6.1 m)

Stereo Audio Cable
Connectors: 1/8 in (3.5 mm) stereo male to RCA left & right
Cable Length: Approximately 5.9 ft (180 cm)

Important Legal Information

© 2020 Sirius XM Radio Inc. SiriusXM, Automatic, Pandora and all related logos are trademarks of Sirius XM Radio Inc. and its respective subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

SiriusXM subscriptions are sold separately. See our Customer Agreement for complete terms at siriusxm.com, including how to cancel, which includes calling SiriusXM at 1-866-635-2349.

Hardware and subscription sold separately. All fees, content and features are subject to change. Our satellite service is available only to those at least 18 and older. Installation instructions are provided. You must determine if you have the knowledge, skills and ability required to properly perform installation. Professional installation recommended. SiriusXM product warranties do not cover the installation, removal or reinstallation of any product.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

Please Recycle

What's in the Box?

Home Dock

SXWBR1 Remote Control (For use with Tour)

IR Remote Control (For use with all radios except Tour)

Indoor/Outdoor Home Antenna

XM & SiriusXM Radio Dock Adapter

Sirius Radio Dock Adapter

Home Power Adapter

Stereo Audio Cable