

# WS-1025 Digital Window Thermometer

## Features:

- Clear functional design
- Easy to read outdoor temperature from indoors
- Maximum and minimum values with auto reset
- Easy to mount
- Detachable for simple window cleaning
- Weather resistant

## Specifications:

Measuring range:	-13 °F to +158 °F
Accuracy:	32 °F to 122 °F $\pm$ 1.8 °F, otherwise $\pm$ 2.7 °F
Resolution:	0.1 °F (0.1°C)
Battery:	1 AAA alkaline

## Installation:

1. Select your location for mounting in an area that is easy to view.
2. Clean the glass surface completely before mounting.

**NOTE:** Be sure to completely clean the surface of dust and dirt and let the area dry completely prior to mounting the thermometer. Failure to do so may result in bad adhesion between the window and holder.

3. Remove the holder that has the adhesive tape attached (this is held on by a pressure fitting and can simply be pulled off).
4. Using a screwdriver open the battery compartment.
5. Remove the plastic tab from between the battery and the positive terminal.
6. At this point the display will be active.
7. Replace the battery compartment door.
8. Replace the thermometer into the holder.
9. Remove the protective film from the display of the thermometer.

**NOTE:** Before continuing please be sure to set the time – See the next section on **Setting the Time**

10. Remove the plastic from the adhesive strip.
11. Press the adhesive strip against the glass to adhere the thermometer.

Please note: In order to obtain the most accurate temperature reading be sure to mount the thermometer out of direct sunlight. Mounting the unit in direct sunlight will cause artificially high temperature readings.

## Setting the Time:

1. Press the MODE button to enter the setting mode.
2. The hours digits will flash in the center of the display.
3. Press and release the + button to advance the hour.

**NOTE:** When in the hours between midnight and noon A.M. will be displayed on the left of the display. When in the hours between noon and midnight P.M. will be displayed on the left side of the display.

4. Press and release the MODE button to confirm the hour and advance to the minute setting.
5. The minutes digits will flash at the bottom of the display.
6. Press and release the + button to advance the minute.
7. Holding down the + button will advance the minutes faster.
8. Press and release the MODE button to confirm the minutes and exit the time setting mode.

**NOTE:** The thermometer does not have an automatic time out feature and will stay in the time set mode until manually completed.

## Use and MAX/MIN temperatures:

- The upper display shows the maximum temperature.
- The middle display shows the current temperature.
- The lower display shows the minimum temperature.
- The maximum temperature automatically resets at 8:00 A.M.
- The minimum temperature automatically resets at 8:00 P.M.
- If the time is not set the maximum and minimum temperature will not be reset at the correct local time.

## Maintenance:

- Replace the battery when the display becomes weak.
- Do not expose the instrument to extreme temperatures, vibration or shock
- Clean the thermometer with a soft damp cloth only. Do not use solvents or scouring agents.
- Please do not try to repair the unit. Contact the original point of purchase or La Crosse Technology Warranty for repair/replacement instructions.

## WARRANTY INFORMATION

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need or repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay reasonable return shipping charges to the owner of the product.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology, Ltd  
190 Main Street  
La Crescent, MN 55947  
Phone: 507.895.7095  
Fax: 507.895.2820

e-mail:

[support@lacrossetechnology.com](mailto:support@lacrossetechnology.com)  
(warranty work)

[sales@lacrossetechnology.com](mailto:sales@lacrossetechnology.com)  
(information on other products)

web:

[www.lacrossetechnology.com](http://www.lacrossetechnology.com)

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

All trademarks and patents are acknowledged.