 


Fits headrest supports with diameters less than 16 mm (0.63 inches).

 
Included Parts:

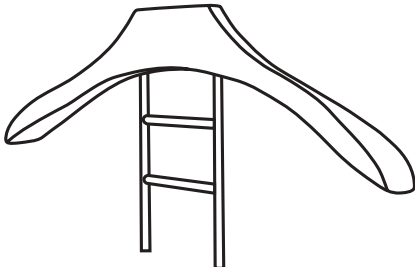


(A)
Hanger



(B)
Slotted Black
Hanger Sleeves

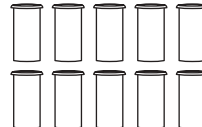

 (C)
Headrest
Sleeves



(D)
Bases

Installation Instructions:

1. Remove the headrest for the desired seat location in your vehicle.
2. Check to see which headrest sleeve diameter best fits the headrest supports in your vehicle by trying to slide each sleeve size over the headrest supports. The headrest sleeves (C) are provided in diameters of 8 mm, 10 mm, 12 mm, 12.7 mm, and 14.1 mm. The sleeves should fit around the headrest supports as tightly as possible to prevent vibration. No sleeve is required for headrest supports with diameters between 14.2 mm and 16 mm (insert the headrest supports directly into the bases (D) for this size).
3. Once you have found the correct headrest sleeve size, insert the headrest sleeves (C) into the smooth slots in the bases (D).
4. Insert the assembled bases (D & C) onto the headrest supports and re-install the headrest supports into the seat.
5. Insert the slotted black hanger sleeves (B) onto the bottom of the hanger (A) by aligning the slots.
6. Insert the hanger with slotted black hanger sleeves attached into the open slotted holes of the bases (D) and press down gently until the slotted black hanger sleeves (B) are flush with the top of the bases (D).

