




OPERATION INSTRUCTION

FUNCTIONAL DESCRIPTION

WORLD BAND RECEIVER

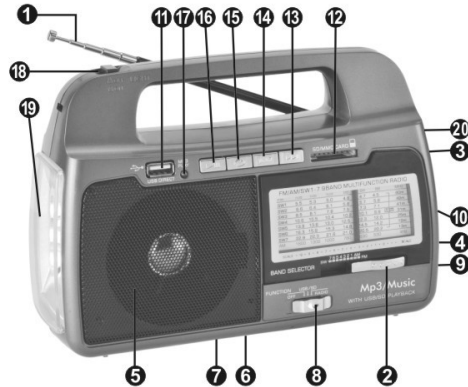

1. Antenna
2. Band switch
3. Tuning knob
4. Volume control(ON/OFF)
5. Built in Speaker
6. Battery compartment(BACK)
7. AC power socket(BACK)
8. Radio Mp3 switch
9. Phone Jack
10. AUX in Jack
11. USB port
12. SD slot
13. NEXT button
14. PREV button
15. Repeat button
16. Play/pause button
17. Mp3 indicator
18. Light on/off button
19. Torch light
20. Opr/batt indicator

	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>The Lightning flash and arrowhead within the triangle is a warning sign alerting you of " dangerous voltage " inside the product.</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>

1. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
2. WARNING : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
3. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
4. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable
5. No naked flame sources, such as lighted candles, should be placed on the apparatus.
6. Attention should be drawn to environmental aspects of battery disposal.

CURRENT 44mA POWER 9W

THE OPERATING MANUAL

1. Put Um1x3 battery into battery compartment(6) paying careful attention to the polarity.
Connect the AC power cord to the AC socket(7)
2. Turn the Volume control (4) clockwise, the radio can be turned on when you hear the sound of "bi", keep on turning this knob to adjust the volume.
Turn off the radio by turning the volume control (4) anti-clockwise until you hear the sound of "bi".
3. Adjust the band selector(2), and then turn the tuning knob(3) to receiver the different programmes from AM/FM/SW1-7
4. When listen to the programmes from FM, Please pull out the antenna and change the length to make the listening clear.
5. When listen to the programs from AM please change the radio's position until receiving the best signal.
6. When you don't want to listen to the radio, please turn it off and disconnect the AC power cord or take out the batteries. When you don't want to use the radio for a long time, please take out the batteries from the unite.

USB(SD) PLAYBACK

1. TURN ON THE POWER
2. SET THE FUNCTION SELECTOR TO USB(SD)
3. INSERT A USB FLASH DRIVE(OR A SD CARD) WITH MP3 FORMAT MUSIC, THE UNIT WILL PLAY AUTOMATICALLY. PRESS PAUSE/PLAY BUTTON TO HOLD THE PLAYBACK, PRESS IT AGAIN TO CONTINUE THE PLAYBACK. PRESS REPEAT BUTTON TO REPEAT THE PLAYING SONG, PRESS REW BUTTON TO SELECT THE PREVIOUS SONG AND F.F BUTTON TO THE NEXT SONG.

NOTE:

1. THIS MODEL INCLUDES BUILT IN RECHARGE ABLE BATTERY
2. IN ORDER TO PROLONG BATTERY LIFE AND PRODUCT NORMAL USE, CHARGING TIME PLEASE KEEP 6-8 HOURS