



## OPERATING INSTRUCTIONS

Model: 21038

1. **To Start Clock**

Remove battery cover. Insert a new "AA" battery (not included) in battery compartment according to direction of the (+) and (-) signs inscribed herein

2. **To Set Time**

Turn the hand set knob at the back counter clockwise until correct time has been selected.

3. **To Set Alarm**

Turn the hand set knob counter clockwise to the desired time.

4. **To Switch Alarm On/Off**

Push the switch to the right to shut the alarm off. Push the switch to the left to trigger the alarm function.

### Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

### If your product is not working properly, please send:

- The Product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity Warranty Dept.

2817 Losey Blvd. S

La Crosse, WI 54601

For Customer Support, visit:

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

*Equity* <sup>®</sup> <sub>by</sub> La Crosse <sup>™</sup>

**2 Year Limited Warranty**

La Crosse, WI 54601

[www.equitybylacrosse.com](http://www.equitybylacrosse.com)