5873 Product instruction insert

> Back Front

### ÷ \_1 5873

### BATTERY INFORMATION:

TAYLOR. DIGITAL TIMER

The timer operates on 2 AA batteries (included). Before use, remove the strip under battery cover. Replace batteries when readings grow dim.

# SET THE CLOCK:

- 1. Side the switch on the bottom of the timer to CLOCK SET.

  2. Press "H" to set the hour (1-11 AM/PM or 24 hour mode). Press "M" to set minutes the "be" to confirm time setting.
- 3. Slide switch back to CLOCK or TIMER.

#### PROGRAM THE TIMER:

 $-_{i}$ 

- PROGRAM THE LIMICK:

  1. Slide switch to TIMER.

  2. Press "H" and "M" to set hours and minutes.

  3. Press "▶■" to start the timer countdown.

  4. To pause, press "▶■". Press to start timing

- again.

  5. To reset the timer, press "▶■" to pause then press again and hold for 3 seconds.

  6. When the countdown reaches zero, the alarm will sound at 95 decibels. Press any button to stop the alarm. The timer has a memory function and will display the previously set time.

  7. The time will also count up Pers "▶■" whose
- previously set time.

  7. The timer will also count up. Press ">■" when 00:00 00" displays and the timer will count up and "> TIMER" shows on the LCD.

  8. If the slide switch is in CLOCK or CLOCK SET and the countdown reaches zero, the alarm

:

will sound and TIMER DONE will blink. Press any button to stop the alarm. The count up time will display when the switch is moved to TIMER. Press "▶■" to recall memory function. Press and hold "▶■" for 3 seconds to reset.

9. The maximum timer allowance is '23H 59M 00S'.

i

1\_

NOTE: Please recycle or dispose of batteries per local regulations.

WARNING: Batteries may pose a choking hazard. As with all small items, do not let children handle batteries, if swallowed, seek medical attention immediately.

Immediately.

PRECAUTION: Do not dispose of batteries in fire.

Batteries may explode or leak. Remove the batteries if the scale will not be used for a long period of time.

# CLEANING & CARE:

\_\_

Clean by hand. Do not completely immerse timer in water or put into dishwasher.

# ONE YEAR LIMITED WARRANTY:

Taylor warrants this product to be free from defects in material or workmanship (excluding batteries), and on return, will repair or replace it at our option, without charge.

©2016 Taylor Precision Products. Taylor® is a registered trademark of Taylor Precision Products and its affiliated companies. All rights reserved.

www.shoptaylorusa.com 1

Made in China. 5873 11.16

Date: 12/12/16 Designer: Wendell W. Cisco II