



MOSQUITO & FLYING INSECT BUG ZAPPER

OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

WARNING:

When using electric appliances, basic precautions should always be followed. Never touch the wire grid. Electric current may be retained after the button has been released which may cause shock.

PIC® Mosquito & Flying Insect Bug Zapper racket is designed with two safety grids on either side of the zapping device on racket head. Do not pinch or press the grids together. Do not put objects or fingers through the racket face. Keep away from moisture. Do not use in rain. Safe for indoor and outdoor use. This is not a toy. **KEEP AWAY FROM CHILDREN.**

OPERATION INSTRUCTIONS:

Open the battery compartment and insert 2 AA alkaline batteries (not included) as shown on the internal diagram. Close the battery compartment and test the power by pushing and holding the button on handle. Holding the button illuminates the red light indicating the 3 volt electrical grid is activated. Grid shuts off after button is released. Replace batteries when light no longer turns on. **DO NOT TOUCH SAFETY GRIDS.**

TO USE:

Safely aim the racket grid surface at flying insects while pressing and holding the trigger button to activate the electrical grid and swing. Making contact with the insect should kill the insect on contact. Do not swing next to people or animals.

CLEANING:

As bugs make contact, particles may accumulate in the racket face. To clean, remove the batteries and use vacuum or soft, dry, non-metallic brush to remove any debris. Frequent cleaning will provide for more efficient use.



Manufactured for:
PIC® Corporation
1101-1107 West Elizabeth Ave.
Linden, NJ 07036, USA
1-800-799-7302
EPA Est. No. 93340-VNM-1