

First Texas Products, L.L.C.

**1-YR LIMITED
WARRANTY**

This product is warranted against defects in materials and workmanship under normal use for one year from the date of purchase to the original owner. Liability in all events is limited to the purchase price paid. Liability under this Warranty is limited to replacement or repair, at our option, of the product returned, shipping cost prepaid, to First Texas Products, L.L.C. Damage due to neglect, accidental damage or misuse of this product is not covered by the warranty.

According to FCC part 15.21 Changes or Modifications made to this device not expressly approved by the party responsible for compliance could void the users authority to operate this equipment.

Proof of purchase is required to make a claim under this warranty.

NOTE TO CUSTOMERS OUTSIDE THE U.S.A.

This warranty may vary in other countries; check with your distributor for details.

Warranty does not cover shipping costs.

**First Texas Products, L.L.C.
1465 Henry Brennan
El Paso, TX 79936
800-413-4131**

MPP Rev.4 040814

OWNER'S MANUAL

PINPOINTER



PinPointer

***For Treasure Hunting
and unearthing small
objects***

After identifying the presence of a metal object in the ground with a metal detector, pinpointing its exact location, and separating it from the earth, can be difficult and time consuming.

With the PinPointer, retrieving coins and other small metal objects is easy.

Unearthing Small Objects

A buried object, especially after the passage of time, can be indistinguishable from the soil it is buried in. In addition, historical objects will lose value if damaged in the unearthing process.

It is therefore recommended to use the PinPointer in a probing or sifting process. The tip of the PinPointer will detect a coin-sized metal object approximately 3/4" away from the tip of the probe. Probe the tip of the PinPointer directly into the ground; poke around directly on the surface in different areas until the internal buzzer activates. If the earth is loose enough, lift handfuls of soil out of the ground and probe in the palm of your hand with the PinPointer.

Operation

1. Install Battery (see Figure A)
2. Click On by rotating the knob clockwise.
3. Battery Check

The PinPointer will buzz immediately, indicating that the batteries are in good condition.

If the buzzer does not sound after switching on, replace the single 9-volt battery.


4. Set the Sensitivity

A. Starting with the knob in a position where the buzzer is making sound, **rotate knob clockwise** to the point where the device is just silent. (Figure B)

B. You want to position the knob in the **most counterclockwise position at which the buzzer is still silent**. This threshold setting provides maximum sensitivity. (Figure C)

5. During use, periodically re-set the knob for maximum sensitivity.

Figure A

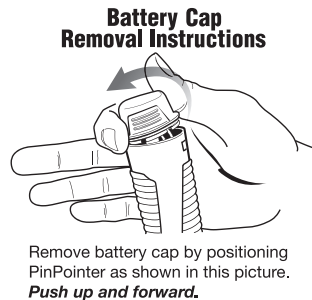

Do not remove battery cap sideways. **Locking tabs could break.**

Figure B

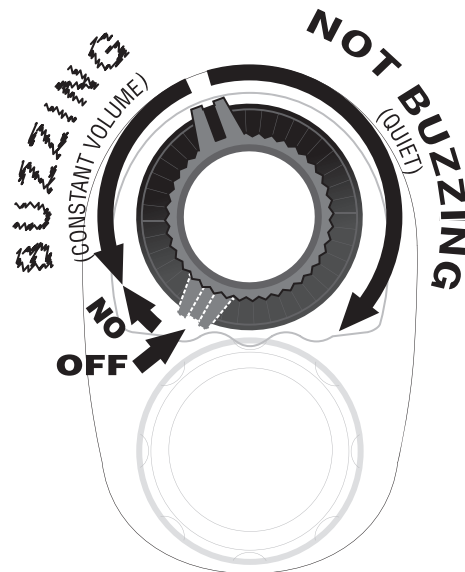


Figure C

