

MEGAPHONE/BULLHORN

Professional Compact Power Megaphone

QUICK GUIDE

Model: **PMP50**



This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.

SAFETY

This megaphone is intended to be used only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or device damage. Please use the megaphone as described and under supervision if used by children or minors.

- Ensure that plastic bags, packaging, etc.
- Never let children unattended use electrical devices.
- Use proper polarity is observed when inserting batteries.
- Incorrectly inserted batteries may cause damage and risk of fire.
- Leaking batteries can cause permanent damage to the device.
- Remove batteries if the megaphone will not be used for long periods of time.

OPERATING INSTRUCTIONS

Slide the 'PA Mode Selector Switch' on the side of the megaphone to choose the desired PA mode and to power on/off the unit. Choose between 'Siren', 'Talk' and 'Off' modes.

Talk:

While in 'Talk' mode, speak through the microphone mouthpiece while holding the 'Press-to-Talk' button on the detachable handheld differential mic. The user also has the ability to use the 'PA Talk Trigger Switch' on the megaphone's handheld pistol grip.


NOTE: Also located on the handheld mic is an adjustable volume control slider.

Siren:

Selecting this mode activates an automatic, continuous alarm siren. Switch to another mode to discontinue the alarm siren play.

Off:

Powers the unit off.

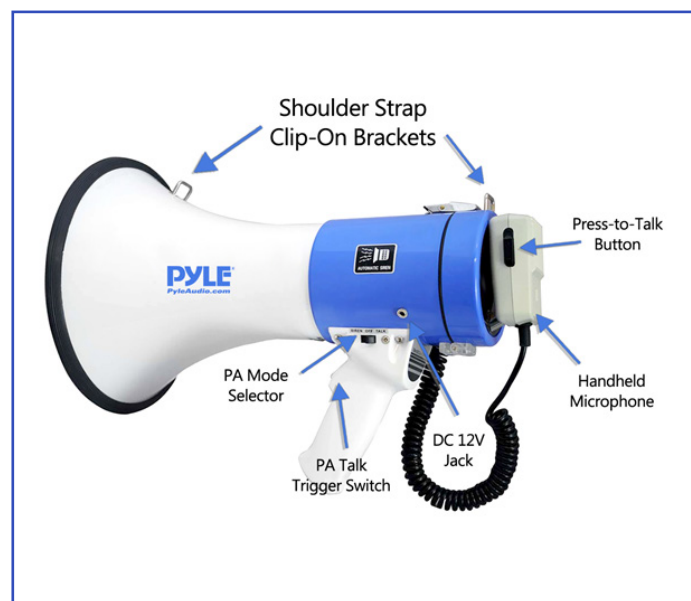

BATTERY INSERTION

Unfasten the clip located near the top, back-side of the unit. The clip will release the lid to reveal the battery compartment.

Please see correct battery direction placement on the top side of the opening battery compartment lid. Insert batteries, close the cover and fasten clip until locked.

NOTE: Make sure the batteries are inserted correctly observing correct polarity.

FEATURES & SPECIFICATIONS:

- 2 Modes: Talk and Siren Alarm
- Powerful Piezo Driver and Large Bell Diameter
- Ergonomic Pistol Grip & Lightweight Chassis
- 1,200 Yard Range
- 50 Watt Max Power Output
- Adjustable Volume Control
- Detachable Handheld Microphone
- DC 12V Power Supply Connector Jack
- Indoor/Outdoor Use
- Battery Powered: Requires 8 x 'C' Batteries (not included)
- Dimensions: 9.0" (Diameter) x 13.8" (Length)