

# PYLE

PyleUSA.com



## *PMP481R*

Portable Megaphone with Built-in Battery  
Megaphone Speaker with Built-in Rechargeable Battery,  
Aux (3.5mm) Input for MP3/Music, Siren Alarm

USER MANUAL

## PMP48IR

### Portable Megaphone with Built-in Battery

Megaphone Speaker with Built-in Rechargeable Battery,  
Aux (3.5mm) Input for MP3/Music, Siren Alarm

This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.



## OPERATION

- Open the back cover by pressing down on the '**Open**' Button
- Insert 6 x 'D' Batteries then close back cover until locks into position. Now, you're megaphone is ready for operation.
- To activate the megaphone, press the '**ON/OFF**' button on the back cover.
- When using the megaphone, place your lips as close as possible to the megaphone when speaking. Adjust the '**Volume Control**' to the desired level without causing any howling or feedback.
- Press the '**Play**' button to play recorded voice or press the '**Siren**' button to activate emergency siren/alarm. To switch off the siren, press the same button again, or press the '**ON/OFF**' button.
- Adjust the volume control to the min. before recording. To record, press the **RECORD** button. Now your megaphone s ready for recording. The longest record time is about 10 seconds. Press the **RECORD** button again after recording is done.
- Press the **PLAY** Button to activate the recorded materials circularly.


## PRECAUTIONS

- Ensure correct polarity of Batteries used. Insert the batteries in the correct direction by aligning the (-) marks on the batteries with the spring in the back cover.
- Use new batteries/cells whenever possible.
- When the megaphone is not in use for a long period of time, remove the dry Batteries and replace.
- Drained Batteries or rechargeable battery will not give sufficient sound volume.

## BATTERY CHARGING

1. The megaphone features a removable rechargeable battery, that plugs-in directly into the wall power outlet for charging. Once connected to the wall power outlet, the battery will begin charging automatically (average time for full-charge : **8.5 hours**). A Red light will be lit while charging and turns Green when fully charged.

2. Once fully charged, insert the battery into the megaphone using the release button in the rear of the megaphone. Be sure to slide the battery into the compartment properly, ensuring the power connection cable is exposed.
3. Once the battery is inserted, connect the battery power cable connector into the megaphone power input (You may need to partially close the open megaphone compartment to make the connection).

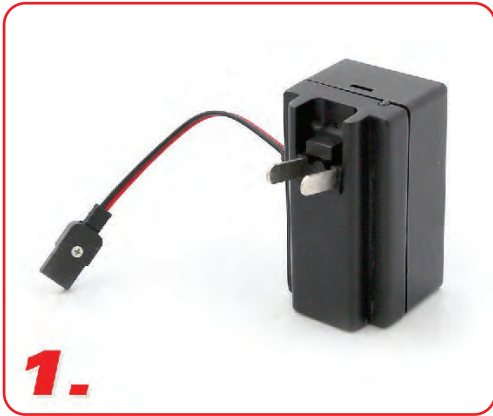

## **PMP48IR**

### **Portable Megaphone with Built-in Battery Megaphone Speaker with Built-in Rechargeable Battery, Aux (3.5mm) Input for MP3/Music, Siren Alarm**

#### **Features:**

- (3) Audio Modes: Record, Siren Alarm and Talk
- 10 Second Integrated Audio Memory with Replay Ability
- Built-in Rechargeable Battery Charges via Wall Outlet
- \*Or can be Battery Operated: (6) x 'D' Batteries, Not Included
- Adjustable Volume Control
- Ergonomic Pistol Grip and Light-Weight Chassis
- Button Activated Siren Alarm
- Aux (3.5mm) Input Connector Jack
- Connect & Stream Audio from External Devices  
(iPhone, Android, Smartphone, MP3 Player, Tablet, etc.)
- 1,000 Square Yard Range
- Used by U.S. Armed Forces

#### **What's in the Box:**

- Megaphone Speaker
- Removable Rechargeable Battery
- Wired Plug-in Handheld Microphone

#### **Technical Specs:**

- MAX Power Output: 40 Watt
- Rechargeable Battery: 7.4V Lithium-iOn, 1500mAh (11.1Wh, 124g)
- Power: 220-240V Compatible
- Dimensions: Horn Diameter 8.0" x Length 13.1" -inches
- Sold as: Unit

# PYLE

PyleUSA.com



**VISIT US ONLINE:**  
*Have a question?*  
*Need service or repair?*  
*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

PYLE