

BLUETOOTH MEGAPHONE

Professional Compact Power Megaphone

QUICK GUIDE

Model: **PMP52BT**



This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.

SAFETY

This megaphone is intended to be used only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or device damage. Please use the megaphone as described and under supervision if used by children or minors.

- Ensure that plastic bags, packaging, etc.
- Never let children unattended use electrical devices.
- Use proper polarity is observed when inserting batteries.
- Incorrectly inserted batteries may cause damage and risk of fire.
- Leaking batteries can cause permanent damage to the device.
- Remove batteries if the megaphone will not be used for long periods of time.

BLUETOOTH CONNECTION

Switch the megaphone ' USB/SD/AUX/BT' Mode. The megaphone's LED indicator will then blink signaling it is ready to be paired, via Bluetooth, with your device.

The megaphone will appear as 'HC_Bluetooth' in your Bluetooth device list. Connect to the megaphone and you will be able to instantly stream media through the megaphone's speaker.

Control your media with the previous, next, play/pause buttons.

OPERATING INSTRUCTIONS

Use the sliding switch to choose between the (3) PA Modes: Speak, Siren, USB/SD/BT/AUX

Speak: While in 'Speak Mode', speak through the microphone mouthpiece while holding the 'Press to Talk' button on the detachable handheld differential mic. The user also has the ability to use the 'PA Talk Trigger Switch' on the megaphone's handheld pistol grip.

Siren: Slide the switch over to 'Siren' and an automatic, continuous alarm siren plays. Switch to another mode to discontinue the alarm siren play.

USB/SD/BT/AUX: Slide the switch over to 'USB/SD/BT/AUX' to project externally connected devices or digital media files, via inserted USB Flash or SD Memory Card, through the megaphone. Control your media with the previous, next, play/pause buttons.

Adjust volume control located on the right hand side of the removable differential microphone.



BATTERY INSERTION

Unfasten the clip located near the top, back-side of the unit. The clip will release the lid to reveal the battery compartment.

Please see correct battery direction placement on the top side of the opening battery compartment lid. Insert batteries, close the cover and fasten clip until locked.

NOTE: Make sure the batteries are inserted correctly observing correct polarity.

FEATURES & SPECIFICATIONS:

- Built-in Bluetooth for Wireless Music Streaming
- Works with Virtually Any Bluetooth Device
- (iPhone, Android, Smartphone, iPad, Tablet, PC, etc.)
- 1,200 Yard Range
- For Indoor/Outdoor Use
- Used by U.S. Armed Forces
- Maximum Power Output: 50 Watt
- SD Card & USB Flash Memory Readers
- Ergonomic Pistol Grip and Light-Weight Chassis
- Batteries Required: 8 x "C" Batteries, Not Included
- Battery Life: Up to 16 Hours
- 6 Audio Functions Including Talk, Siren & USB/SD Modes
- Aux-Input (3.5mm) Jack to Connect External Devices
- Dimensions: Diameter 9.44" x Length 13.77"