

# PYLE

PyleUSA.com



## *PMP591R*

Megaphone with Rechargeable Battery  
Handheld Microphone, Aux (3.5mm) Input,  
Voice Record & Replay Mode

## PMP59IR


### Megaphone with Rechargeable Battery

Handheld Megaphone, Aux (3.5mm) Input, Voice Record & Replay Mode

This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.



**\*Important Note\*:** Before operating the megaphone, ensure you hit the correct switch to the proper position when **CHARGING/OPERATING** Mode.

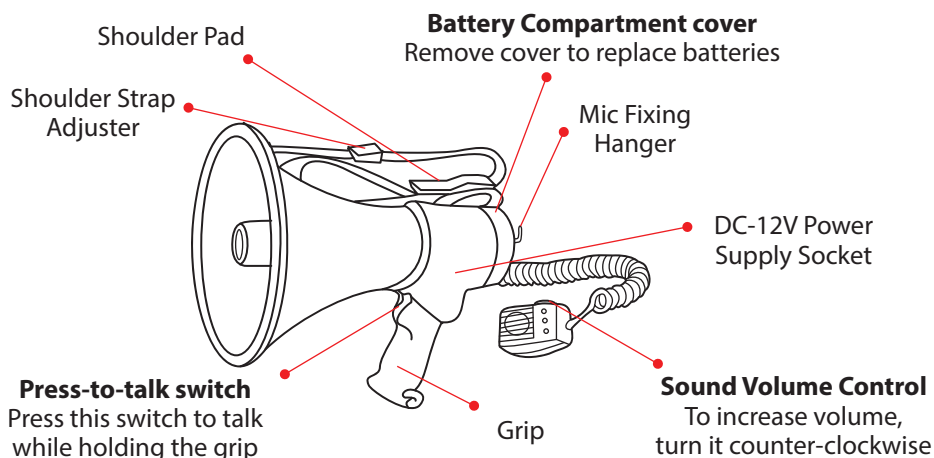

### PRECAUTIONS

- Ensure correct polarity of Batteries used. Insert the batteries in the correct direction by aligning the (-) marks on the batteries with the spring in the back cover.
- Charge the lithium battery for 3 – 4 hours before first use. After the lithium battery is fully charged, the indicator light will change from red into green.
- For best quality, when the megaphone has not been in use for a long period of time, replace the batteries.
- Drained or weakened batteries will not give sufficient sound volume.
- Replace batteries or charge the lithium battery at regular intervals (usually three month periods), for optimal performance.

## OPERATING INSTRUCTIONS




- Open the back cover and remove the plastic battery sleeve to insert 8 “D” Batteries in the correct orientation, insert the sleeve into the battery according to the instructions within the compartment.

### OR

You can insert the included rechargeable battery. Be sure to insert the black and double-orifice plug into the jack in the battery compartment. Then close the back cover until it locks.

### Now the megaphone is ready to be used.

- To activate the mic of the megaphone, press the button on the grip after fixing the hanger inlet to the mic fixing hanger or switch to **'TALK'** when carrying it on the shoulder.
- When using the megaphone, place your mouth as close as possible to the megaphone on the hanger inlet. Adjust the volume accordingly without causing any howling or interference feedback.
- Switch the button to **'TALK'** and press the **'SIREN'** button to activate the emergency siren. To turn off the siren, switch back the same button to **'OFF'** or press the **'SIREN'** button again.
- Before recording, switch the button to **'TALK'** and press the **'REC'** button, then the **'REC'** indicator light will be **ON**. Now the recording function is ready. Speak into the microphone on the hanger inlet to record. To finish or stop the recording, simply press the **'REC'** button again. The **MAX** recording time is 10 seconds.
- To play what you recorded in a loop, press the **'PLAY'** button. To stop, press the **'PLAY'** button again.

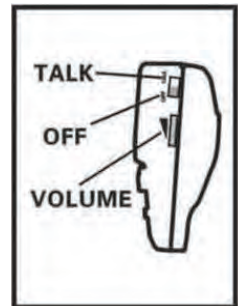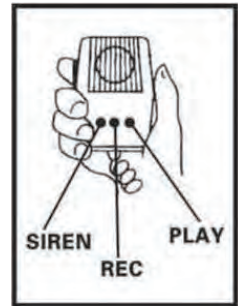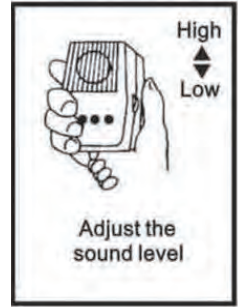

## TO REPLACE BATTERIES

Loosen the locking screw of the battery compartment cover on back of the body in order to remove the cover. Insert 8 x type 'D' batteries in the battery case, making sure they're in the correct position. Then, insert the battery case with batteries into the battery compartment of the megaphone observing correct polarity.

## BATTERY CHARGING

1. The megaphone features a removable rechargeable battery, that plugs-in directly into the USB wall power outlet for charging. Once connected to the wall power outlet, the battery will begin charging automatically, after you set the battery to "**Charge Mode**" (average time for full-charge: **8.5 hours**). A Red light will be lit while charging and turns Green when fully charged.
2. **\*Important Note\***: Before charging the battery, ensure you hit the switch to "**DC CHARGING**" -- as located on the battery, to enable Charge Mode.
3. Once fully charged, insert the battery into the megaphone by opening the end cap in the rear of the megaphone. Be sure to slide the battery into the compartment properly, ensuring the power connection cable is exposed.
4. Once the battery is inserted, connect the battery power cable connector into the megaphone power input -- ensure you set the battery to "**Power Output**" Mode.
5. **\*Important Note\***: Before operating the megaphone, ensure you hit the switch to "**DC OUTPUT**" -- as located on the battery, to enable Power Output Mode.



## **PMP59IR**

### **Megaphone with Rechargeable Battery**

Handheld Microphone, Aux (3.5mm) Input, Voice Record & Replay Mode

#### **Features:**

- (3) Megaphone Modes: Talk + Siren + Record
- Recording Function with 10 Second Audio Memory
- Built-in Rechargeable Battery for Wireless PA Speaker Portability
- Battery Charges via Included USB Wall Power Adapter
  - \*or Optional Battery Powered: Requires (8) x 'D' Batteries, Not Included
- Aux (3.5mm) Input Connector Jack
- Ability to Connect & Stream Audio from External Devices
- Simple Button Control Operation
- High-Powered Audio Reproduction
- Convenient Wired Handheld Microphone
- Wide Bell Diameter for Extended Projection
- Ergonomic Pistol Grip & Lightweight Chassis
- Perfect for Outdoor Events and Crowd Control
- Used by U.S. Service Personnel & Armed Forces
- \*Can be Optionally Powered via 12V Power Adapter

#### **What's in the Box:**

- Megaphone Speaker
- Rechargeable Battery
- USB Wall Adapter

#### **Technical Specs:**

- MAX Power Output: 50 Watt
- Audio Projection Range: Over 3,600' ft.
- Sound Processor: Dynamic Piezo Driver
- Rechargeable Battery: 11.1V Lithium-iOn, 1500mAh (16.6Wh, 166g)
- Power: 110/240V
- Sold as: Unit

# PYLE

PyleUSA.com



**VISIT US ONLINE:**  
*Have a question?*  
*Need service or repair?*  
*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

PYLE