

PYLE
PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?
We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com



PT390BTU
Digital Home Theater Wireless BT Stereo Receiver
Aux (3.5mm) Input, MP3/USB/SD/AM/FM Radio,(2) Mic Inputs (300 Watt)

USER MANUAL

Please take a few minute to read the instruction manual and operating instructions. This will tell you how to use the receiver system. Here, you will find unit features and operation instructions to ensure trouble free use and installation. Please retain these operating instructions for future reference.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. DON'T EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.



THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION!

*Designs and specifications are subject to change without notice.

*Caution: Please use 4 Ω speakers.

BEFORE USE

1. Ensure that the power line voltage is AC 110V/220V

If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

2. Protect the Power Cord

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



3. Do not block any ventilation openings.



 
4. Keep the unit free from moisture, water, and dust.

Do not place objects filled with liquids, such as vases, on the unit.




5. Operating Environment

Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked)

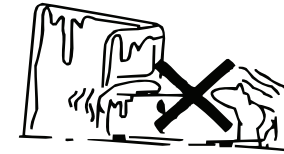

6. Install this sound system in a well ventilated, cool, dry, clean place.

 Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light)

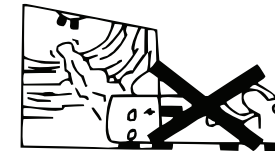


7. Avoid metals dropping in the unit

Avoid metals dropping into the unit, like needle, hairpins, smaller metal objects



 8. DO NOT OPEN THE UNIT as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service company.

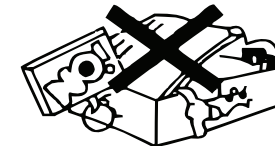

9. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry or slightly damp cloth.



OPERATION

1. **POWER:** Use this button to turn **ON** or **OFF** the speakers.

Caution: Make sure that all connections are properly connected and the main volume is set to minimum level before turning **ON** the unit.

2. **INPUT SELECT:** Select the input source: CD/DVD, USB, Radio, Wireless BT Streaming

3. **MICROPHONE VOLUME: MIC VOL**

Adjust "MIC VOL" knob to increase or decrease the karaoke volume

4. **ECHO:** Adjust "ECHO" to get a satiable echo effect.

5. **TREBLE/BASS**

Turn **TREBLE/BASS** knob to adjust treble/bass tone master channel.

6. **MASTER VOLUME:** You can adjust **MASTER VOLUME** from turn right volume up , turn left volume down.

How to replace the preset radio stations?

Use the remote control to set the radio stations.

NOTE: The preset radio stations can't be deleted, **BUT CAN BE REPLACED.**

Operations Steps:

1. Press **TUNER MODE** on the remote control
2. Press **AM/FM**, and select **FM**
3. Press **PRE/NEXT** to select the stations you don't want to keep;
4. Press **TUNING** again choose the radio stations you want to save
5. Press **MEMORY** to save the new stations

In this way, you can replace the preset radio stations.

Wireless BT Playback

 
1. Make sure the unit is powered "ON"
2. Set the input mode to "BT"
3. Use your smart phone or other compatible Wireless BT-enabled device to search for available Wireless BT Networks- The **PT390BTU** will appear in the Wireless BT Network list as '**PT390BTU**'
4. **Connect and pair:** Connecting does not require a password (if prompted for a password enter '**0000**' (4 zeros))

Note:

1. In Wireless BT Streaming mode, control volume both through your unit and your Wireless BT device.
2. Wireless BT Streaming operation range may be effected by other electronic parts or barrier between your unit and the Wireless BT device.


CONTROLS & FUNCTIONS

FRONT PANEL

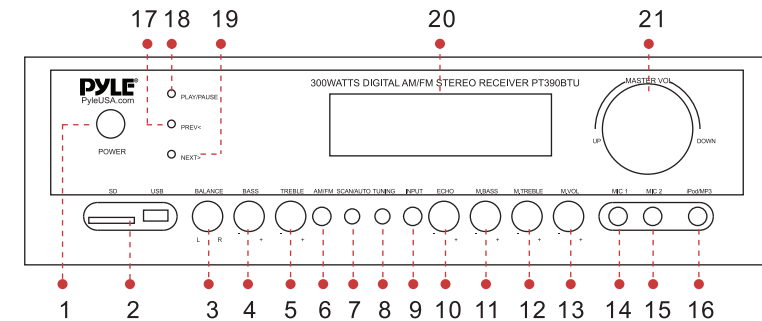


1. Power **ON/OFF** key
2. USB/SD signal input
3. Music balance knob
4. Music bass knob
5. Music treble knob
6. Tuner **AM/FM** conversion button
7. Tuner automatic search button
8. Tuner fine-tuning button
9. Audio input select key
10. Mic Echo volume knob
11. Mic Bass knob
12. Mic Treble knob
13. Mic Master Volume knob
14. Mic 1 input
15. Mic 2 input
16. Ipod/mp3 signal input
17. USB/SD Prev button
18. USB/SD Play pause button
19. USB/SD Next button
20. VFD Display
21. Music Master Volume knob

 BACK PANEL

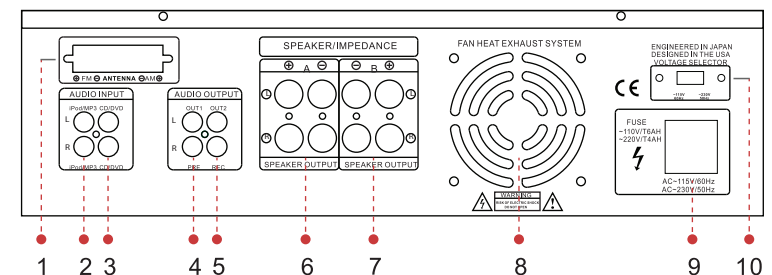

1. **FM/AM** Radio antenna
2. Ipod/mp3 Signal input
3. Dvd Signal input
4. Audio Output 1
5. Audio Output 2
6. R-LSpeaker a output jack
7. R-L Speaker b output jack
8. Take out the breeze fan export
9. Power line (~110V /220V)
10. 110V/220V selection switch

 REMOTE CONTROL

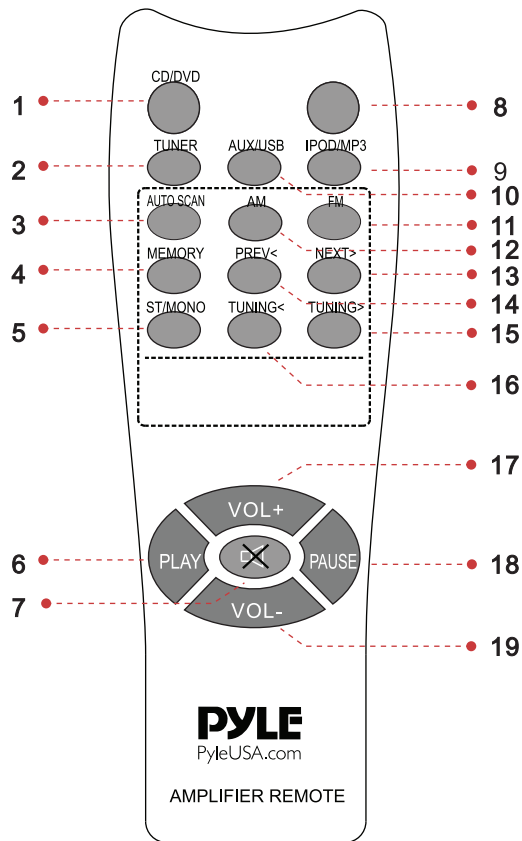

- | | |
|---|--------------------------------|
| 1. CD/DVD Audio Input Select key | 11. Tuner FM Select key |
| 2. Tuner Audio Input Select key | 12. Tuner AM Select key |
| 3. Tuner Automatic Search key | 13. USB/SD Next key |
| 4. Tuner Memory key | 14. USB/SD Prev. key |
| 5. Tuner Stereo/Mono key | 15. Tuner tuning + select key |
| 6. USB/SD player key | 16. Tuner tuning - select key |
| 7. Audio Mute key | 17. Music Volume + key |
| 8. None | 18. USB/SD pause key |
| 9. IPOD/MP3 Audio Input Select key | 19. Music Volume - key |
| 10. AUX/USB Audio Input Select key | |

TROUBLESHOOTING

If you experience any of the following difficulties while using the unit, use this troubleshooting guide to help you remedy the problem, should any problem persist, consult your nearest dealer.

PROBLEM	POSSIBLE CAUSE
No power	<ul style="list-style-type: none"> • The ac power cord is disconnected • Wall socket poor connection or the wall socket is inactive
No sound	<ul style="list-style-type: none"> • Disconnected speakers and components. • Make sure you select the correct component on the unit • Volume control at lowest level • Speaker wire short or open
One master speaker NO sound	<ul style="list-style-type: none"> • Bad or Incorrect speaker connections • Balance not in center • Speaker wire short or open
Bad Sound	<ul style="list-style-type: none"> • The place is unfit for the speakers • Bad or incorrect speakers connections • Treble and bass controls are too low
Microphone has no sound	<ul style="list-style-type: none"> • Microphone volume is too low • Microphone not turned ON • Microphone wire short or open
Severe hum or noise	<ul style="list-style-type: none"> • Check that the speakers and components are connected securely • The plugs and jacks are dirty

PT390BTU

Digital Home Theater Wireless BT Stereo Receiver

Aux (3.5mm) Input, MP3/USB/SD/AM/FM Radio, (2) Mic Inputs (300 Watt)

System Features:

- 4-Channel Receiver System
- Powers Up to 4 Speakers
- Wireless BT Streaming Ability
- AM/FM Radio with Digital LCD Display
- USB Flash & SD Memory Card Readers
- MP3 Digital Audio File Compatibility
- Aux (3.5mm) Input Connector Jack
- Ability to Connect External Devices
(iPhone, Android, Smartphone, iPad, Tablet, etc.)
- (4) Pair Speaker Terminal Binding Posts
- (2) 1/4" Microphone Inputs
- (2) Pair RCA (L/R) Audio Input Connector Jacks
- (2) Pair RCA (L/R) Audio Output Connector Jacks
- Connects to TV, Home Theaters, External Speaker Systems
- Radio Station Auto Scan, Tuning Control
- Built-in Ventilation Cooling Fan
- 50 Radio Station Memory Pre-Sets
- Main Volume/Balance/Treble/Bass Controls
- Microphone Volume/Bass/Treble/Echo Controls
- Includes Antennas, Audio Cable, Remote Control

Wireless BT Streaming Connectivity:

- Instantly Receives Wireless Music Streaming
- Works with all of Your Favorite Devices
(iPhone, Android, Smartphone, iPad, Tablet, etc.)
- Wireless BT Version: 3.0

What's in the Box:

- Home Theater Receiver
- Remote Control
- AM/FM Antennas
- Power Cable

Technical Specs:

- Power Output: 300 Watt MAX
- Impedance: 8 Ohm
- T.H.D.: <1%
- S/N Ratio: >76dB
- Input Lvl. Impedance: 350mV/47k
- Tone Characteristics: +/-12dB
- Input Sensitivity: 300mV/33k
- USB/SD can play what file types: MP3, WMA, WAV
- Maximum USB/SD Card support size: 8GB
- Frequency Response: 20Hz-20kHz
- Battery Operated Remote, Requires (2) x 'AAA', Not Included
- Power Supply: 110/220V Switchable
- Dimensions (L x W x H): 16.9" x 12.2" x 4.7" -inches