

**Karaoke USA**

# CDG /MP3G KARAOKE & BLUETOOTH MEDIA PLAYER

- English
- Español
- Français

**EN** User's Guide

MODEL:  
GF920



Smart Device not included

Before operating this product, please read these instructions.

# Contents

---

 
Warnings and Precautions.....	01
Important Safety Instructions.....	02
Caution.....	03
What's in the Gift Box.....	04
Song List on your Disc.....	05-06
Features.....	07
Front Panel Illustration.....	08
Top&Rear Panel Illustration.....	09
Remote Control Functions.....	10
Monitor Message.....	11
Connect Power Adapter.....	11
Charging Internal Battery.....	12
Using Microphone.....	12
Charging Your Mobile.....	13
Replace Built - in Battery.....	13
Install Cradle.....	14
Place Smart Device into Cradle.....	14
Connecting to Television / Ext. Device.....	15
Loading a Disc.....	16
Playing Disc Music.....	16
Install USB Memory Stick.....	17
Playing USB Music Files.....	17
Using Repeat / Program.....	18
Using Bluetooth.....	19
Disco Light.....	19
Using Echo.....	19
Using Balance.....	19
Record Feature Instructions.....	20
Specification.....	21

## Warnings and Precautions

**WARNING:** To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

“Caution Marking and Rating Label” is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.

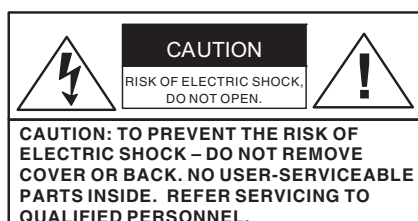

This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. DO NOT OPEN THE UNITS CASE.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

### SAFETY

For units with an insertable AC Power Adapter cord set:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

### MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power “ON” may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

### WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

### FCC INFORMATION

This unit complies with part 15 of the “FCC Rules.” Operation is subject to the following conditions:

1. This unit may not cause harmful interference.
2. This unit must accept any interference received, including interference that may cause undesirable operation.



Double insulation.  
This is a Class II apparatus.

FCC ID: 2ANH7-3938021TFT

# Important Safety Instructions

**1. Read These Instructions:** All safety and operations manual should be read before the product is operated.

**2. Keep These Instructions:** The safety and operations manual should be retained for future reference.

**3. Heed All Warnings:** All warnings applicable to the unit and in the operations manual should be adhered to.

**4. Follow All Instructions:** All operations manual should be followed.

**5. Water and Moisture:** Do not use this unit near water. For example, do not use near a bath tub, wash bowl, kitchen sink, or laundry tub. Do not use this unit in a wet basement or near a swimming pool or similar location. The unit shall not be exposed to dripping or splashing and no objects filled with liquids (ex: vases), shall be placed on or near this unit.

**6. Cleaning:** Clean the unit only with a dry cloth. Unit must be unplugged from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the unit.

**7. Ventilation:** Slots and openings in the cabinet of the unit are provided to ensure reliable operation and ventilation and to protect the unit from overheating. The openings must not be covered and should never be blocked by placing the product on a soft surface like a bed, sofa, or rug. This unit should not be placed in a built-in installation like a bookcase or rack, unless proper ventilation is provided.

**8. Heat:** Do not install the unit near any heat source like a radiator, heat register, stove or other device that produces heat, including amplifiers.

**9. Grounding or Polarization:** If applicable, do not disable or circumvent the polarized or grounding-type plug. A polarized plug has 2 blades with 1 wider than the other. A grounding-type plug has 2 blades and a 3<sup>rd</sup> grounding plug. The wide blade, or the 3<sup>rd</sup> prong, is provided for your safety. If the provided plug does not fit into an outlet, consult a qualified electrician for replacement of this outlet.

**10. Power Cord Protection:** Protect the power cord from being walked on, pinched or cut or damaged in any

way. If any damage occurs, consult with a trained technician for repair.

**11. Accessories:** Only use accessories specified and approved by the manufacturer. Do not place this unit on an unstable cart, stand, tripod, bracket or table that has not been previously approved by the manufacturer. This unit may fall, causing serious injury to a child, adult or to the unit itself. Any mounting of the unit should be done within the manufacturer's guidelines.

**12. Transporting:** If a pre-approved device is used to transport this unit, caution and care must be observed and practiced to avoid damages. Make sure the device and unit together are stable before moving.



PORTABLE  
CART  
WARNING

**13. Lightning:** Unplug this unit and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the unit due to lightning and power line surges.

**14. Servicing:** Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
**15. Power Sources:** Only connect to the type of household power supply as indicated in the operations manual and "Caution Marking and Rating Label." If you are not sure of the type of power supplied to your home (or location of the outlet the unit is being plugged into), consult with the local power company. For units intended to operate from battery power, or other sources, refer to the manufacturer's operations manual.

**16. Overloading:** Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock and may be hazardous.

**17. Foreign Material:** Protect this unit from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this unit. This could result in a risk of fire or electric shock and may be hazardous.

**18. Replacement Parts and Safety Check:** When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure the proper operation to avoid possible fire, electric shock or other hazards.

**19. Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. If there is any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

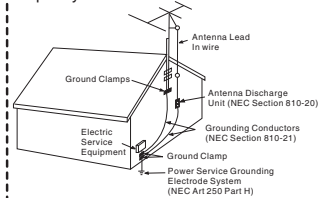

**20. Wall or Ceiling Mounted:** The unit should be mounted to a wall or a ceiling only as recommended by the manufacturer.

**21. Disconnect Device:** Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power "off" is needed quickly.

**22. Protective Attachment Plug:** If applicable, this unit may be equipped with an attachment plug having overload protection. This is a safety feature. See the operations manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

**23. Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

## Caution

---

- Please use the original box and packing materials for safe transportation of this product.
- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.
- Do not move this product during playing. Doing so may cause damage to the pickup and the disc.
- Press OPEN CD DOOR button to open tray. Do not pull the tray. Do not touch tray when opening or closing.
- USB Flash Devices should be formatted to FAT32 on your computer before use.
- When EQ function /key control is turned on, the Recording effect/result would not be ideal.
- Do not use hard or sharp instruments to touch the TFT Screen, it may scratch or damage its surface!

## What's in the Gift Box

---



GF920 X1



 
Microphone x 2



RCA Cable x 1



Smart Device  
Holder x 1

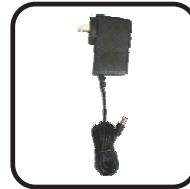


AC Adaptor x 1  
DC15V/2A



Remote Control x 1  
(Included CR2025 3V  
lithium battery)



 AUX IN  
Cable x 1

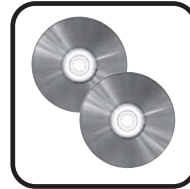

MP3G Demo  
Disc x 2



User's Guide x 1



Warranty Card x 1

## Song List on your Discs

### 9347 Sing A Long Karaoke Songs (200 Traditional Karaoke Songs)

- |   |   |  |
|---|---|--|
| 1. Alexander's Ragtime Band             | 68. Here We Go Looby Loo                  | 135. Polly Wolly Doodle                              |
| 2. All Things Bright And Beautiful      | 69. Hey Diddle Diddle                     | 136. Pop Goes The Weasel                             |
| 3. All Through The Night                | 70. Hickory Dickory Dock                  | 137. Ride A Cock Horse To Banbury Cross              |
| 4. Alouette                             | 71. Higgledy Piggledy My Black Hen        | 138. Right Hand Says Good Morning                    |
| 5. Alphabet Song, The                   | 72. Home On The Range                     | 139. Ring Around The Rosie                           |
| 6. America (My Country Tis Of Thee)     | 73. Humpty Dumpty                         | 140. Rise And Shine                                  |
| 7. Animal Fair                          | 74. Hunting We Will Go, A                 | 141. Rock A Bye Baby                                 |
| 8. Around And Around The Village        | 75. Hush Little Baby                      | 142. Rock A Bye Baby Green                           |
| 9. Aye Aye Aye The Limerick Song        | 76. Hush-a-bye                            | 143. Rock Island Line                                |
| 10. B I N G O                           | 77. I Am A Young Musician                 | 144. Rocking The Cradle                              |
| 11. Baa Baa Black Sheep                 | 78. I Gave My Love A Cherry               | 145. Rose Of Tralee                                  |
| 12. Barney Buntline                     | 79. I Had A Little Nut Tree               | 146. Row Row Row Your Boat                           |
| 13. Be Kind To Your Web Footed Friends  | 80. I Love You Truly                      | 147. Russian Cradle Song                             |
| 14. Bear Went Over The Mountain         | 81. I Spy                                 | 148. Sailing Sailing                                 |
| 15. Big Rock Candy Mountain             | 82. If You're Happy And You Know It       | 149. School Days                                     |
| 16. Billy Boy                           | 83. I'll Take You Home Again, Kathleen    | 150. She'll Be Coming Around The Mountain            |
| 17. Billy Pringle                       | 84. I'm A Little Teapot                   | 151. Shoo Fly Don't Bother Me                        |
| 18. Bird's Song                         | 85. I'm Always Chasing Rainbows           | 152. Shortening Bread                                |
| 19. Blessed Assurance                   | 86. I'm Looking Over A Four Leaf Clover   | 153. Simple Simon                                    |
| 20. Blow The Man Down                   | 87. In The Good Old Summertime            | 154. Sing A Song Of Sixpence                         |
| 21. Blue Bells Of Scotland              | 88. It Ain't Gonna Rain No More           | 155. Six Little Ducks                                |
| 22. Bluebird                            | 89. It's Raining It's Pouring             | 156. Skip To My Lou                                  |
| 23. Bollweevil                          | 90. I've Been Working On The Railroad     | 157. Sleep Baby Sleep                                |
| 24. Bye, Baby Bunting                   | 91. Jack And Jill                         | 158. Spelling  |
| 25. Caissons Go Rolling Along           | 92. Jack Be Nimble                        | 159. Spider And The Fly, The                         |
| 26. Calendar Song                       | 93. Jack Spratt                           | 160. Star Spangled Banner, The                       |
| 27. Camptown Races                      | 94. Jenny Jenkins                         | 161. Sur Le Pont D'avignon                           |
| 28. Capital Ship, A                     | 95. Jimmy Crack Corn                      | 162. Swanee River                                    |
| 29. Cat Came Back, The                  | 96. Lady Bird Lady Bird                   | 163. Sweetly Sings The Donkey                        |
| 30. Cinderella                          | 97. Letters Of The Alphabet               | 164. Swing Low Sweet Chariot                         |
| 31. Clementine                          | 98. Little Black Bull                     | 165. Tailor And The Mouse                            |
| 32. Cock A Doodle Doo                   | 99. Little Boy Blue                       | 166. Take Me Out To The Ball Game                    |
| 33. Cockles And Mussels                 | 100. Little Jack Horner                   | 167. Ten In A Bed                                    |
| 34. Cocky Robin                         | 101. Little Sally Waters                  | 168. The Ants Go Marching                            |
| 35. Colors                              | 102. Little Things, The                   | 169. The Eensy Weensy Spider                         |
| 36. Come, O Come, Emanuel               | 103. Little Tommy Tucker                  | 170. The Farmer In The Dell                          |
| 37. Counting Song                       | 104. London Bridge Falling Down           | 171. The Holly And The Ivy                           |
| 38. Crawdad Song                        | 105. London Street                        | 172. The Muffin Man                                  |
| 39. Crocodile, The                      | 106. Ma She's Making Eyes At Me           | 173. The Old Gray Mare                               |
| 40. Cuckoo Is A Pretty Bird             | 107. Mademoiselle From Armentieres        | 174. There Was A Little Man                          |
| 41. Day And Night                       | 108. Marine's Hymn                        | 175. There Was A Tree                                |
| 42. Dixie                               | 109. Michael Row The Boat Ashore          | 176. There's A Hole In Middle Of Sea                 |
| 43. Do Your Ears Hang Low               | 110. Midnight Special, The                | 177. This Little Pig Went To Market                  |
| 44. Dry Bones                           | 111. Moonlight Bay                        | 178. This Old Man                                    |
| 45. Elephant And The Flea               | 112. My Old Dog Tray                      | 179. Three Blind Mice                                |
| 46. Father Grumble                      | 113. My Old Hen                           | 180. Three Little Kittens                            |
| 47. Fiddle De De                        | 114. Now I Lay Me Down To Sleep           | 181. Three Little Pigs                               |
| 48. Fishes                              | 115. Oats Beans And Barley Grow           | 182. Tisket A Tasket, A                              |
| 49. Five Currant Buns                   | 116. Off To Bed Now                       | 183. To Market To Market                             |
| 50. For He's A Jolly Good Fellow        | 117. Oh Dear What Can The Matter Be       | 184. Toot Toot Toosie Goodbye                        |
| 51. For Me And My Gal                   | 118. Ol Woman Who Lived In A Shoe         | 185. Try Try Again                                   |
| 52. Fox                                 | 119. Old Blue                             | 186. Tura Lura Lura                                  |
| 53. Frere Jacques                       | 120. Old John Braddlem                    | 187. Turkey In The Straw                             |
| 54. Froggie Went A Courting             | 121. Old Mother Hubbard                   | 188. Vive La Compagne                                |
| 55. Georgie Porgie                      | 122. On The Banks Of The Sacramento       | 189. Wabash Cannonball, The                          |
| 56. German Lullaby                      | 123. On Top Of Old Smokey                 | 190. Waltzing Matilda                                |
| 57. Girls And Boys Come Out To Play     | 124. One Meat Ball                        | 191. We Hunted And We Hunted                         |
| 58. Git Along Little Dogies             | 125. One Two Buckle My Shoe               | 192. We Three Kings                                  |
| 59. Golden Slumbers                     | 126. One Two Three Four Five              | 193. What Child Is This                              |
| 60. Good Morning Merry Sunshine         | 127. Oranges And Lemons                   | 194. When Johnny Comes Marching Home                 |
| 61. Goosey Goosey Gander                | 128. Over In The Meadow                   | 195. Where Oh Where Has My Little Dog Gone           |
| 62. Grasshopper                         | 129. Over The River And Through The Woods | 196. Who Threw The Overalls In Mrs. Murphy's Chowder |
| 63. Grasshoppers Three                  | 130. Pat A Cake                           | 197. Wish You A Happy Birthday                       |
| 64. Greensleeves                        | 131. Pease Porridge Hot                   | 198. World Turned Upside Down, The                   |
| 65. Ground Hog                          | 132. Peg O' My Heart                      | 199. Yankee Doodle                                   |
| 66. Harrigan                            | 133. Peter Peter Pumpkin Eater            | 200. Yellow Rose Of Texas                            |
| 67. Here We Go Around The Mulberry Bush | 134. Polly Put The Kettle On              |  |

Any and all discs shown are for illustration only and may or may not represent the actual disc(s) included in this package

## Song List on your Discs

---

### 9346 Favorite Karaoke Songs (100 Traditional English and Spanish Karaoke Songs)

1. Abide With Me
2. Amazing Grace
3. Angel De Los Reinos Santos
4. Angels From The Realms Of Glory
5. Angels We Have Heard On High
6. April Shower
7. Auld Lang Syne
8. Ave Maria
9. Away In A Manger
10. Battle Hymn Of The Republic
11. Bicycle Built For Two
12. Bill Bailey, Won't You Come Home
13. Boom, Boom, Ain't It Great To Be Crazy
14. Brahm's Lullaby
15. Bringing In The Sheaves
16. Campanas de Navidad
17. Church in The Wildwood
18. Con Mi Burrito Sabanero
19. Daddy Sang Bass
20. Danny Boy
21. Deck The Halls
22. Ding Dong Que Alegria
23. Doce Dias De Navidad
24. Down By The Riverside
25. El Buen Rey Weceslao
26. El Primer Noel
27. El Tamborilero
28. First Noel, The
29. Frankie And Johnny
30. Give My Regards To Broadway
31. Go Tell It On The Mountain
32. God Rest Ye Merry Gentlemen
33. Hail Hail The Gang's All Here
34. Hark! The Herald Angels Sing
35. He's Got The Whole World In His Hand
36. His Eye Is On The Sparrow
37. How Great Thou Art
38. I Love To Tell The Story
39. I'll Fly Away
40. In The Garden
41. It Came Upon A Midnight Clear
42. It Is No Secret What God Can Do
43. Jeanie With The Light Brown Hair
44. Jesus Loves Me
45. Jingle Bells (Childrens)
46. Joy To The World
47. Just A Closer Walk With Thee
48. Let Me Call You Sweetheart
49. Little Bo Peep
50. Little Miss Muffet
51. Llego A Mi Medianoche
52. Los Tres Reyes
53. Mary Had A Little Lamb
54. Mary Quite Contrary
55. Mozart's Lullaby
56. My Bonnie Lies Over The Ocean
57. My Old Kentucky Home
58. My Wild Irish Rose
59. Navidad, Navidad
60. Noche De Paz
61. Noche Santa
62. O Holy Night
63. Oh Christmas Tree
64. Oh Come All Ye Faithful
65. Oh Little Town Of Bethlehem
66. Oh Ven Oh Ven Emmanuel
67. Oh When The Saints Go Marching In
68. Oh You Beautiful Doll
69. Oh, Susanna
70. Old King Cole
71. Old MacDonald Had A Farm
72. Old Time Religion
73. One Day At A Time
74. One More River To Cross
75. Onward Christian Soldiers
76. Peace In The Valley
77. Precious Lord Take My Hand
78. Precious Memories
79. Rock Of Ages
80. Rock-A-My Soul
81. Silent Night
82. Sweet By And By
83. Sweet Hour Of Prayer
84. The Little Drummer Boy
85. The Lord's Prayer
86. The Old Rugged Cross
87. This Little Light Of Mine
88. Toda La Noche
89. Twelve Days Of Christmas
90. Twinkle Twinkle Little Star
91. We Gather Together
92. We Wish You A Merry Christmas
93. Wedding Song (There Is Love)
94. What A Friend We Have In Jesus
95. When Irish Eyes Are Smiling
96. When The Roll Is Called Up Yonder
97. While Shepherds Watched, Their Flocks
98. Whispering Hope
99. Ya Llego La Navidad
100. You're A Grand Old Flag

Any and all discs shown are for illustration only and may or may not represent the actual disc(s) included in this package



 
## Features

---




- CD+G/MP3+G Karaoke Player
- 7" TFT Color Screen
- Record CD+G/MP3+G Video/Audio mix
- PA System record function
- Record and Record Instant Playback
- 300W Peak Power Output
- Remote Control
- 2 Microphones
- 2 Microphone Inputs and Holders
- USB Slots (up to 32GB)
- USB Charger for Smart Device
- LED Lightings that Synchronize and Flash with the rhythm of Music
- Analog Echo Control
- Bluetooth wireless connection and Speaker
- Balance Control
- Digital Key Control
- Audio Input
- Audio and Video Output
- Audio/Video RCA Cable
- 3.5mm to RCA Cable
- AC 110V~240V Adaptor

## Front Panel Illustration

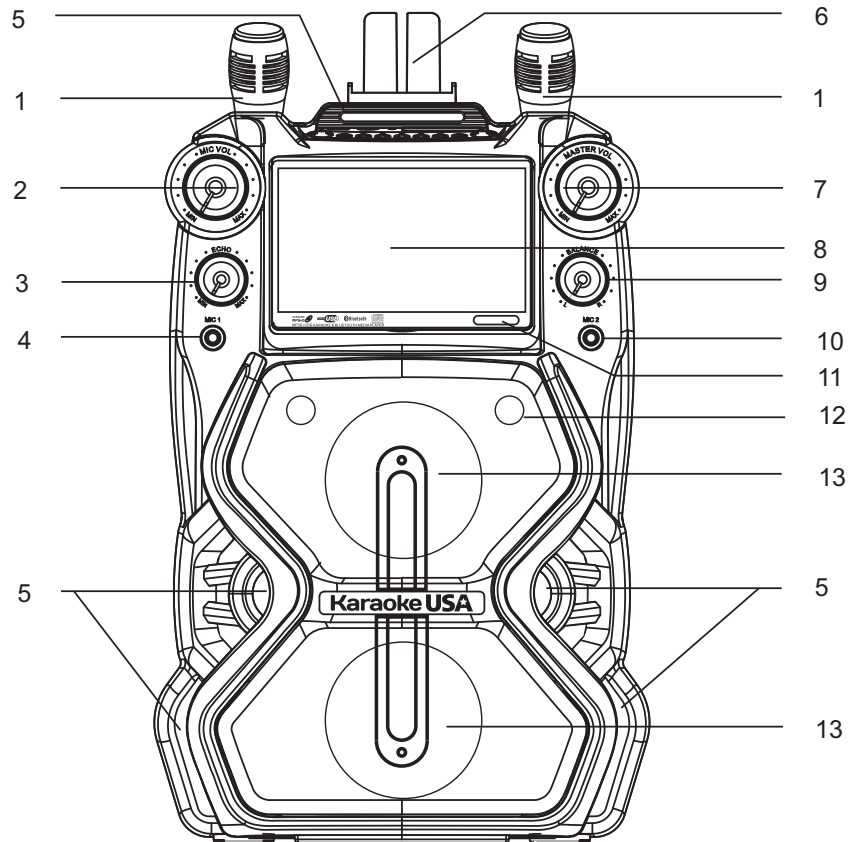


1. MICROPHONE HOLDER
2. MICROPHONE VOLUME CONTROL
3. ECHO CONTROL
4. MICROPHONE 1 INPUT
5. LED LIGHT
6. SMART DEVICE CRADLE
7. MASTER VOLUME CONTROL
8. TFT DISPLAY AND DISC DOOR
9. BALANCE CONTROL
10. MICROPHONE 2 INPUT
11. REMOTE SENSOR
12. SPEAKER (HIGH-RANGE)
13. SPEAKER (MID-RANGE)

## Top & Rear Panel Illustration

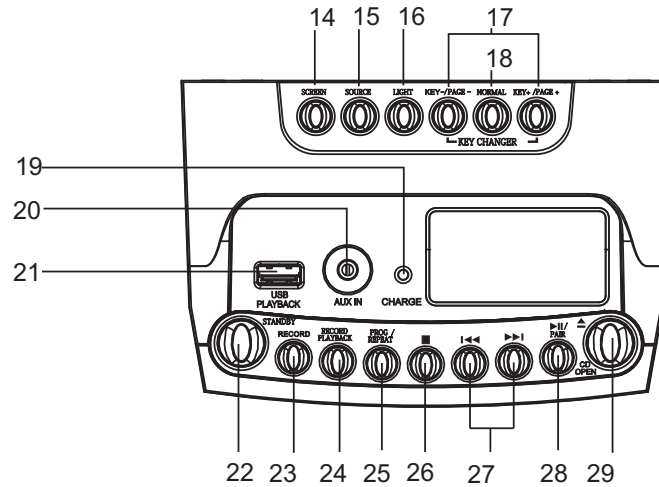 


- |                              |                                      |
|------------------------------|--------------------------------------|
| 14. SCREEN Button            | 22. STANDBY Button                   |
| 15. SOURCE Button            | 23. RECORD Button                    |
| 16. LIGHT Button             | 24. RECORD PLAYBACK Button           |
| 17. KEY CHANGER Button :     | 25. PROG / REPEAT Button             |
| KEY- / PAGE- or KEY+ / PAGE+ | 26. ■ STOP Button                    |
| 18. KEY NORMAL Button        | 27. ◀▶ / SEARCH Button               |
| 19. CHARGING Indicator       | 28. ▶   / PAIR / PLAY / PAUSE button |
| 20. AUX IN Input             | 29. ▲ DISC DOOR OPEN Button          |
| 21. USB Port For Play Back   |                                      |

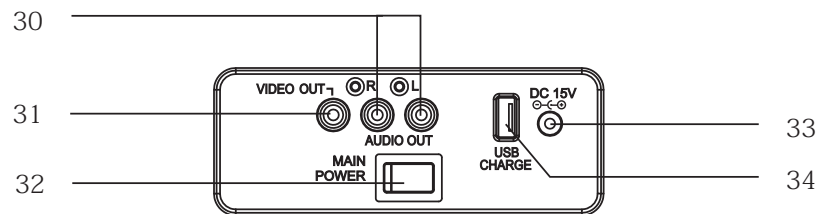 

- |                           |
|---------------------------|
| 30. AUDIO OUT RCA Jack    |
| 31. VIDEO OUT RCA Jack    |
| 32. MAIN POWER Switch     |
| 33. DC IN Jack            |
| 34. USB Port For Charging |

## Remote Control Functions

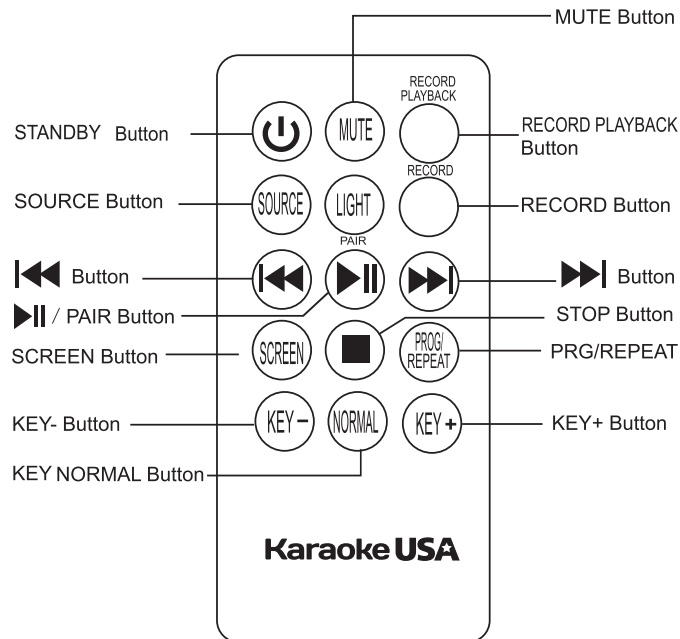 

### Notes:

 
1. Press the MUTE button of remote to mute the audio sound, press again to resume. Other button of remote same as main unit function.
2. Remove spacer tab before using this unit for first time .
3. Press the buttons of the remote to pointing the main unit remote sensor area to fully control the main unit.

### INSTALLING OR REPLACING REMOTE CONTROL BATTERY


1. Pull the battery door at the back of the unit as shown figure.
2. Insert the battery in the battery door with "+" positive facing up. Only CR2025 3V lithium battery should be used.
3. Insert the battery door with new battery back into the unit.

### BATTERY WARNING:


1. Make sure the correct polarity of battery to be installed.
2. Make sure you dispose of batteries properly (refer to your local regulations).
3. Do not open batteries.
4. Do not dispose of batteries in fire.
5. Do not heat up batteries.
6. Do not expose batteries to water.
7. Do not charge or recharge batteries.

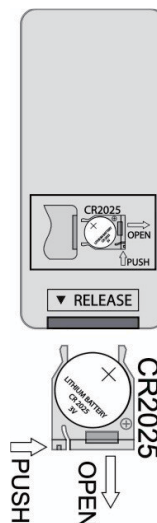

## Monitor Message

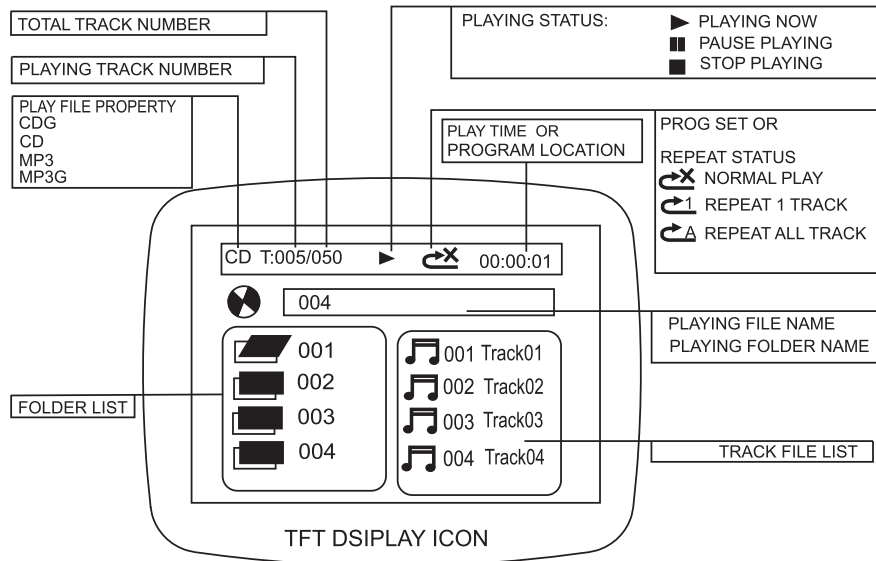 

## Connect Power Adapter

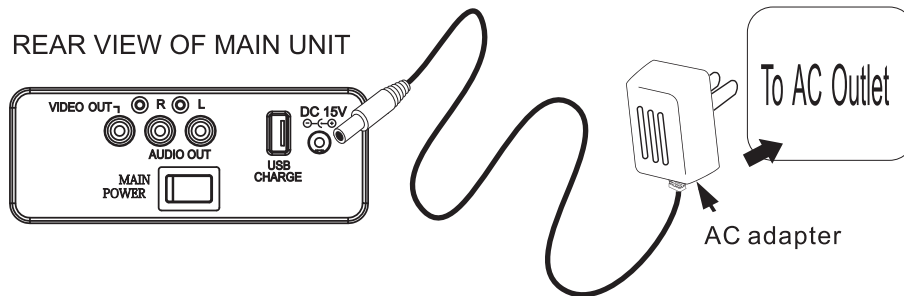 

Plug the included AC adapter into the standard AC power outlet to power the unit. Connect small end to DC INPUT jack of the KARAOKE MACHINE. After adapter connection, Slide the MAIN POWER switch to ON position and press STANDBY button to turn on unit. Press the SOURCE button ( unit or remote) to select USB / DISC / BLUETOOTH / AUX mode for listening.

## Charging Internal Battery

---

The KARAOKE MACHINE operates on a built-in battery that can be recharged using included adapter.

### CHARGING THE BATTERY FOR FIRST TIME

1. Connect the including adapter for start charging the internal battery
2. Charge the built-in battery a minimum of 12 hours prior to first use. Plug the included adapter for charging.
3. The CHARGING indicator will light to RED color while charging and turn to GREEN color when the unit is fully charged.
4. When battery charging completed, unplug the adapter.

### RECHARGING THE INTERNAL BATTERY

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the internal battery charge is low, the CHARGING indicator will turn "ON" RED color and FLASH" alerting you to recharge the internal battery as soon as possible.

### BATTERY WARNING:

 
1. Do not open batteries.
2. Do not dispose of batteries in fire.
3. Do not heat up batteries.
4. Do not expose batteries to water.

## Using Microphone


---

Requires a microphone (included 2 microphone) .

1. Plug the microphone (see below figure) into the MIC 1 INPUT or MIC 2 INPUT of the KARAOKE MACHINE.
2. Slide the ON /OFF switch of MICROPHONE,
3. Use the MIC VOL dial to adjust the volume of audio sound from the microphone.

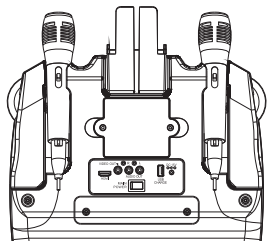

REAR VIEW OF MAIN UNIT

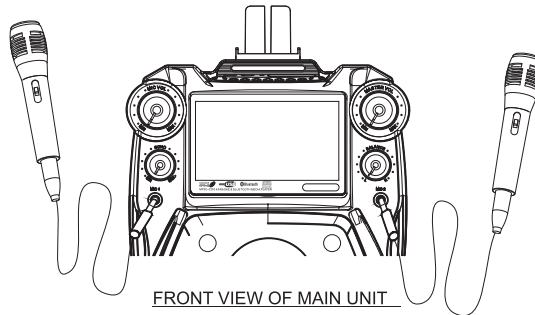 

FRONT VIEW OF MAIN UNIT


## Charging Your Mobile

 Connect USB cable (not included) for charging your smart device.

1. Plug the standard end of the USB cable into the USB port located on the rear of the KARAOKE MACHINE. Plug the small end of the USB cable into the device you wish to charge.
2. Observe the battery charge indicator on your device and the charging will start immediately.
3. Remove the charging cable when charging complete.

Notes:

- USB charging port supplies DC 5V output,
- USB charging port cannot support data transfer or connect to computer.
- Do not connect USB port of this unit to other external power charger USB ports or computer, it may damage both units and void the warranty.

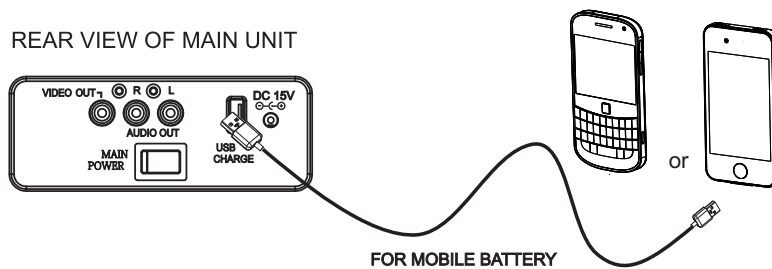


## Replace Built-in Battery

1. Push the POWER switch to OFF position.
2. Use screw driver to open the battery door
3. Move out the internal battery
4. Push in new battery pack into battery compartment.
5. Close the battery door.
6. Use screw driver to lock the battery door.

Notes:

- Batteries shall not be exposed to excessive heat such as sunshine, fire
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak.

 REAR VIEW OF MAIN UNIT

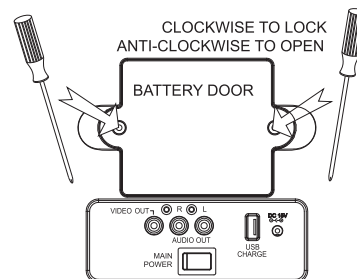


## Install Cradle

---

### INSTALL CRADLE INTO THE UNIT

 Install the cradle (included ) to hold the Mobile & Tablet onto unit.

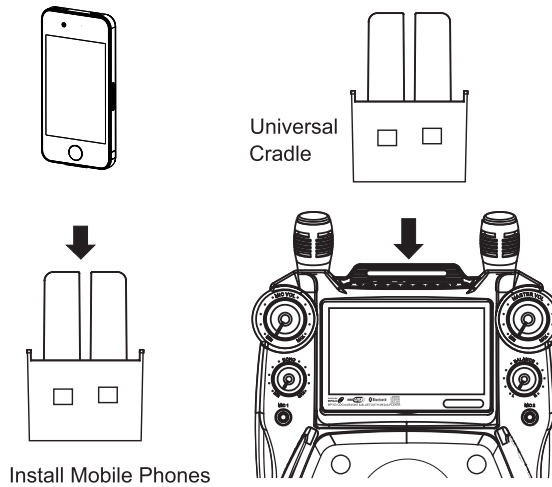


## Place Smart Device into Cradle

---


### PLACE EXTERNAL DEVICE

 Insert Personal Player / Mobile Phone / Tablet with cradle onto the unit.

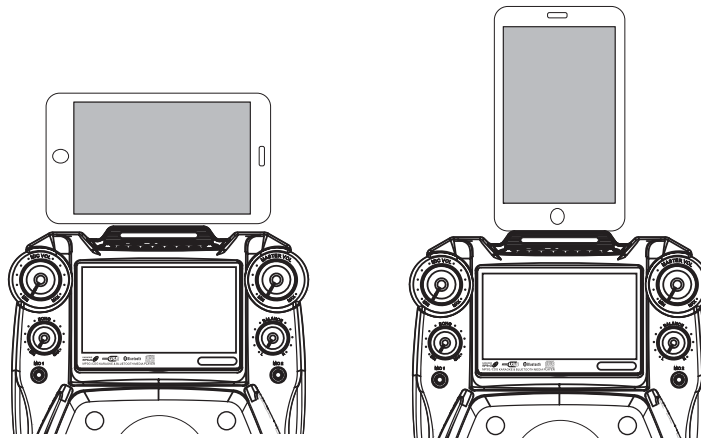



## Connecting to a Television / Ext. Device

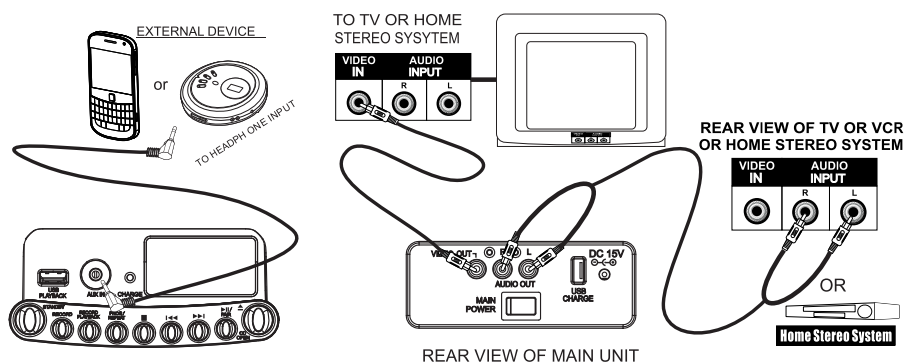 

### AUX IN ( AUDIO IN / LINE IN )

To connect a MP3 Player or other Audio Device you will need a 3.5mm Auxiliary Cable.

1. Connect a 3.5mm Auxiliary Cable to the AUX IN jack on top of unit and to the Audio Output or Phones on the audio device you wish to play.
2. Press SOURCE button to AUX mode.
3. Turn on both units.
4. After the connection, the external device will sound from speakers of your unit.

### COMPOSITE VIDEO OUTPUT

1. Require an RCA video cable and plug the included RCA audio/video cable into the VIDEO OUT of the KARAOKE MACHINE and a composite video input on a television.
2. Adjust the television to the correct input setting.
3. When playing a USB ( MP3+G ) or CDG disc that the KARAOKE MACHINE will output written lyrics / video / image to the connected television.

### RCA AUDIO OUTPUT

 
1. Require an RCA audio cable and plug the included RCA audio/video cable into the AUDIO OUT of the KARAOKE MACHINE and a RCA audio input on a television or stereo system.
2. Adjust the television or stereo system to the correct input setting.
3. When playing the USB / Disc / Bluetooth that the KARAOKE MACHINE will output audio to the connected television or stereo system. Use the external device to control the output sound level.

## Loading a Disc

---

1. Turn on POWER follow previous page CONNECT POWER ADAPTER
2. Press the CD DOOR OPEN AREA to open the CD DOOR.
3. Place a DISC into the CD compartment.
4. Close the CD DOOR.
5. Press the SOURCE button to select DISC mode.

Notes: This unit is designed to play CDs bearing these identification logos.

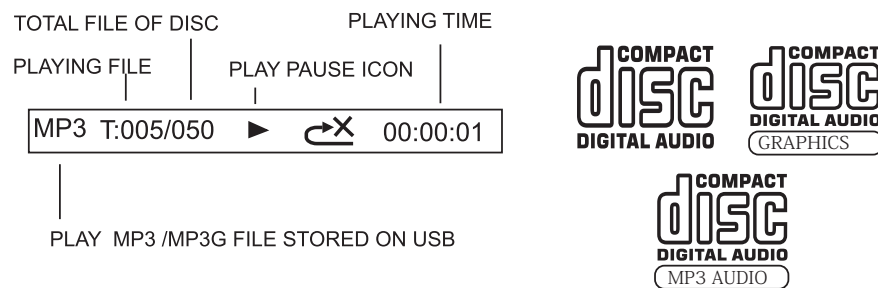

## Playing Disc Music

---

 
1. Turn on POWER and select DISC mode follow **LOADING A DISC** page.
2. Press ►|| the button to begin playing the loaded disc. The PLAY/PAUSE icon will light on display.
3. Rotate the MASTER VOLUME dial to select the sound level.
4. To temporarily stop playing, press the ►|| button once (PAUSE indicator will light ). To resume play, press the ►|| button one more.
5. Press ◀◀/▶▶ buttons to skip between next or previous tracks.
6. Hold the ◀◀/▶▶ buttons to fast search through the track.  
Note: The fast-forward / fast-rewind functions will not work for CDG discs.
7. Search Folder : In stop mode, press PAGE + / PAGE- button to search.
8. Key Control : In music playing, press PAGE + / PAGE- button to select different sound speed.
9. Connect the VIDEO OUT jack to TV, the lyrics text will show on TV.
10. Press ■ the button to stop playing.

## Install USB Memory Stick

---

1. Turn on POWER follow previous page CONNECT POWER ADAPTER
2. Plug the USB memory stick to USB input jack ( on top panel of main unit).
3. Press the SOURCE button to USB mode. The USB playback start.

Notes: The system is able to decode and playback MP3 OR MP3+G files which are stored in the memory media of your USB thumb drive.

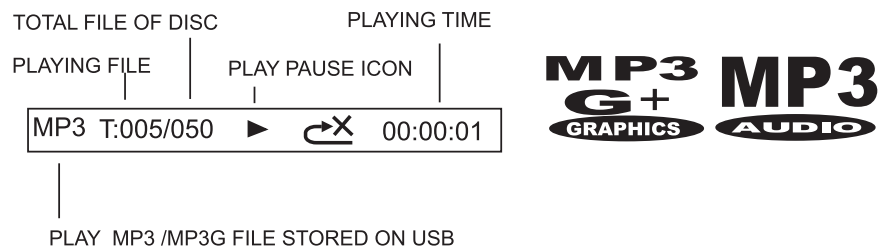

## Playing USB Music Files

---




1. Turn on POWER follow previous page **INSTALL USB MEMORY STICK**.
2. After install USB, the unit will be start play automatically.
3. If unit not start play, press the ►||PLAY/ PAUSE button to begin playing the loaded USB.  
Rotate the MASTER VOLUME dial to select sound level.
4. To temporarily stop playing, press the ►|| button once to pause mode. To resume play, press the ►|| button again.
5. Press ◀◀/▶▶ buttons to skip between next or previous tracks.
6. Hold the ◀◀/▶▶ buttons to fast search through the track.  
Note: The fast-forward / fast-rewind functions will not work for MP3G file.
7. Search Folder : In stop mode, press PAGE + / PAGE- button to search.
8. Key Control : In music playing, press PAGE + / PAGE- button to select different sound speed.
9. Connect the VIDEO OUT jack to TV, the lyrics text will show on TV.
10. Press ■ the button to stop playing.

 
## Using Repeat / Program

---

### REPEAT FUNCTION


 
 

When play music on USB / DISC mode of the KARAOKE MACHINE.


1. To repeat the current track: Press the REPEAT button until the  icon will show on the display. The track will continue to play .
2. To repeat all the tracks: Pressing the REPEAT button until the  icon show in the monitor. All the tracks on the disc will be played repeatedly.
3. To clear the repeat function: Press the REPEAT button until the  icon show in the monitor.

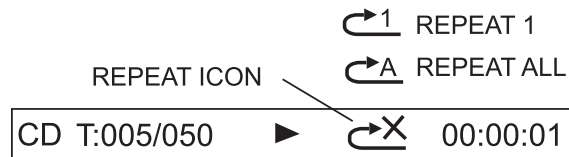

### PROGRAM FUNCTION

 When play music on USB / DISC mode of the KARAOKE MACHINE.

1. Press the  button once to stop playing / on stop mode.
2. Press the PROGRAM button. The PROGRAM (PROG) SET 01:01 will show in the monitor, the track number "- -" digits are flashing.
3. If necessary, press the PAGE+ / PAGE- button to select folder.
4. Press the  button to select a desired track.
5. Press PROGRAM button to confirm entry.
6. You can repeat the steps 3-5 up to a maximum of 20 tracks. When maximum of 20 tracks have been programmed, "PROG FULL" message appears briefly in the monitor.
7. When you have completed programming and press  button to start playing.
8. Press  button twice or open the CD DOOR to clear all the programmed entries.

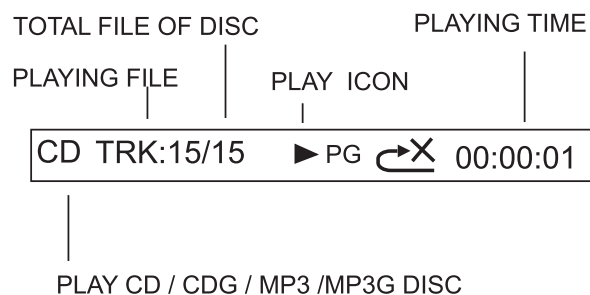

## Using Bluetooth

---

Connecting Bluetooth to your Smartphone / Tablet

1. Press the POWER button to turn on unit.
2. On your smartphone / Tablet, turn on Bluetooth and enable device scanning.
3. When GF920 shows on the Bluetooth scan, select it to connect it to your device.
4. When both devices are successfully connected, you are ready to play music wirelessly from your device.
5. Press the PLAY button of the KARAOKE MACHINE or external Bluetooth device to start music playback.
6. Press the I◀/▶I button of the KARAOKE MACHINE next / previous of external Bluetooth device to switch between music tracks.
7. Hold the PAIR button to reconnect other Bluetooth device.

Notes: When your unit playing mobile music by Bluetooth and receiving an incoming call on your mobile phone, the music will be stop and ring sound from your mobile phone. Just end the call that the music will sound automatic.

## Disco Light

---

When unit turn on, the disco light will show on speaker panel. Press the LIGHT button to turn on/off the disco light show.

## Using Echo

---

Turn on KARAOKE MACHINE and connect microphone. Adjust the ECHO knob of KARAOKE MACHINE to enhance your voice for a concert hall effect.

## Using Balance

---

Turn on the KARAOKE MACHINE and play the MP3G file / CDG disc music. Rotate the BALANCE knob to hear the music and vocals or to hear the music only.

NOTE: To use the BALANCE function, a CD+G disc MP3G file must be used. Otherwise it will operate as a standard BALANCE control.

## Record Feature Instructions

---

This unit can record the unit music sound to USB from DISC / BLUETOOTH / AUX mode.

1. Turn on POWER follow previous page INSTALL USB MEMORY STICK.
2. Follow below step to use recording.

### Using recording from CD, CD+G, MP3, MP3G:

- a. Place the CD/CD+G/MP3+G disc on CD compartment.
- b. Press SOURCE button to DISC mode.
- c. Press **◀▶** or PAGE + / PAGE- button to search special track.
- d. Press **▶||** the button to start play.
- e. Finally, press the RECORD button to start recording. Press the button again to stop the recording.

### Using recording from BLUETOOTH :

- a. Press SOURCE button to BLUETOOTH mode.
- b. Connect the Bluetooth to external device.
- c. Press the **▶||** button to start play.
- d. Finally, press the RECORD button to start recording. Press the button again to stop the recording.

### Using recording from AUX :

- a. Press SOURCE button to AUX mode.
- b. Start play the external device.
- c. Finally, press the RECORD button to start recording. Press the button again to stop the recording.

Note: Make sure the USB enough memory for all recording

### Recall the recording file from USB

Turn on POWER follow previous page **INSTALL USB MEMORY STICK**.

Press SOURCE button to select USB mode

Press RECORD PLAYBACK button to start playback recorded file.

If more file show on display, press **◀▶** button to select different file.

## Specification

---

AC/DC Power Adapter	Use included adapter AC Input : 120~240V , 50 / 60 Hz , DC Output : 15V , 2000 mA
Built-In battery	11.1V, 6000 mAh
USB Slot (Top)	Up to 32GB memory
USB Charger (Rear)	For Smart Devices Charging (5V/1000mA)
Music Format	Support CD / CDG / MP3+G/ MP3
Bluetooth	Support music share from mobile
Master Power Output	70W(RMS) /300W Peak Power
Mid-Range Speakers	45Hz-12KHz(5 inch,30W,6Ω) x 2
High-Range Speakers	17KHz-20KHz(1.5 inch,5W,6Ω) x 2

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.

# Karaoke USA

KARAOKE USA  
1185 GOODEN CROSSING  
LARGO, FL 33778 USA

TECH SUPPORT: [WWW.KARAOKEUSA.COM/CS](http://WWW.KARAOKEUSA.COM/CS)  
DOWNLOAD SONGS: [WWW.SINGTHEHITS.COM](http://WWW.SINGTHEHITS.COM)  
SALES DEPARTMENT: [SALES@KARAOKEUSA.COM](mailto:SALES@KARAOKEUSA.COM)

Printed in China