

HOW DOES IT WORK?

PROLENS™


CLEANER

ULTRA

- . Simply insert the Ultra ProLens™ Cleaner into the player with the graphics side facing up (disc should automatically play)
- · Follow the quick and easy audio instructions (includes English and French)
- · The 8-brush carbon fiber brushes eliminate harmful static and build up, protecting valuable media discs



WHAT TYPE OF DEVICES CAN IT CLEAN?

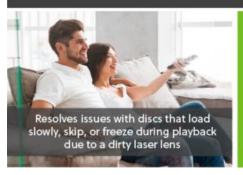

WORKS WITH:

- ☑ Car CD Players
- **CD Players**
- **DVD Players**
- XBox/XBox 360
- Playstation
- ✓ Playstation 2

NOT COMPATIBLE WITH:

- Blu-Ray
- XBox One
- Nintendo Wii/Wii U
- ✓ Playstation 3
- Playstation 4
- Multi-Disc Players



IT'S SAFE

The soft rotating brushes gently remove dirt and debris from your laser lens without harming the glass.



IT FIXES

Dust or dirt buildup on your laser lens can prevent the laser from properly reading the data on your disc. The Ultra ProLens Cleaner removes that dust and debris, bringing new life to your device.



8-BRUSH **TECHNOLOGY**

The 8-brush carbon fiber brushes remove dirt and dust build-up that can cause audio and video dropout and distortion.





We're happy to help. Feel free to contact us for assistance.