



www.canon.com/calcmannual

INSTRUCTIONS EN
INSTRUCCIONES ES

ENGLISH



BEFORE STARTING


- Read all instructions before use.
- Remove the insulation tape and press the [RESET] button at the back of the calculator before use.

GENERAL MAINTENANCE

- Do not use or leave the calculator under direct sunlight. Areas subject to rapid temperature changes, high humidity, dust and dirt should also be avoided.
- Use a dry cloth to clean the casing of the unit. Do not use water or detergents.
- Only use the printer when the paper roll is loaded.
- Avoid using the calculator in places where there are iron filings, as this may affect the electrical circuits of the calculator.
- Do not place anything on top of the machine, particularly on top of the printer mechanism.
- Turn the calculator off before removing the plug from the electrical outlet.
- In case of electrical fault (i.e. smoke), disconnect the plug from the electrical outlet immediately. The outlet should be installed near the equipment and should be easily accessible.


INSTALLING PRINTING PAPER

- 1) Lift up the paper arm (Figure ①).
- When inserting the paper, cut the edge of the paper as shown.
- 2) Place the new paper roll on the arm. The edge of the paper should be positioned as shown (Figure ②).
- Standard calculator paper – Width: 2-1/4" (57mm) / Diameter: 3-3/8" (86mm)
- 3) Insert the paper into the slit at the back of the machine as indicated. (Figure ③)
- 4) Turn the calculator on. Press the paper feed key [FEED] to advance the paper (Figure ④).

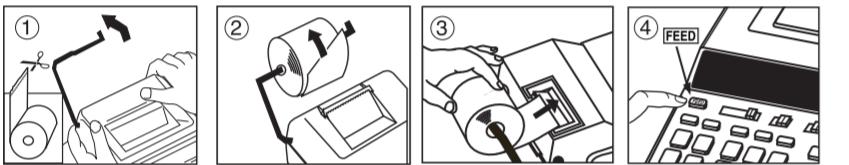

REPLACING THE INK ROLLER (CP-13)

- Note: Turn power switch off.
- 1) Remove the printer cover . (Figure ⑤)
 - 2) Hold the tab of the ink roller. Lift the ink roller out of the base. (Figure ⑥)
 - To maintain clear printing, change the ink roller after about 8 rolls of printing paper have been used.
 - 3) Insert the new ink roller into position. Push down on the center of the ink roller until it locks into place. (Figure ⑦)
 - 4) Replace the printer cover. (Figure ⑧)
 - Use only the Ink Roller CP-13.

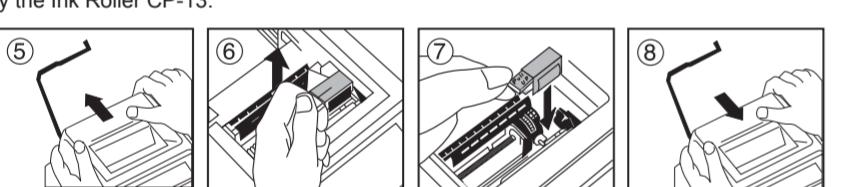

POWER ON/OFF / PRINT ON / ITEM COUNT / CURRENCY CONVERSION SELECTION SWITCH

- | | |
|-------------|--|
| OFF ON CONV | Turns calculator Off. |
| PRINT ITEM | Turns calculator On. Entries and results will appear on the display, but will not be printed out. |
| OFF ON CONV | Entries and results will appear on the display and will be printed out. |
| PRINT ITEM | Set the switch to "ITEM" to print the number of times the $\boxed{+}$ and $\boxed{-}$ keys have been pressed (up to 999). The item count will be printed on the left hand side of the paper roll when the $\boxed{\#}$, \boxed{X} , \boxed{M} or \boxed{MX} keys are pressed. |
| OFF ON CONV | Set the switch to "CONV" position to perform currency conversion calculation functions. Entries and result will appear on the display and printout. |
| PRINT ITEM | - Set the switch to \boxed{GT} and enter the currency conversion rate and press $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to store the current rate.
- Press $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to recall the stored currency conversion rate.
- Press \boxed{S} to convert currency figure displayed from $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to the $\boxed{\$}$.
- Press $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to convert displayed figure from $\boxed{\$}$ to $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$. |

- *1 Specifying the Number of Decimal Places for Intermediate US Dollar Amounts. When you convert from one national currency to another, the calculator internally converts the original currency to US dollars. This conversion result is the "intermediate US dollar amount". Next, the intermediate US dollar amount is converted to the target currency. The flow of the steps of the conversions will be shown on the printout. For such a calculation, you should use the following procedure to specify the number of decimal places for the intermediate US dollar amount. You can specify from 0 (") to 9 decimal places, for a floating decimal point (F). The intermediate US dollar amount is rounded off to the number of decimal places you specify. *2 0 is displayed when F (floating point) is set for the number of decimal places. F is the initial default setting. *3 For rates of 1 or greater, you can input up to six digits. For rates less than 1 you can input up to 8 digits, including 0 for the integer digit and leading zeros (though only six significant digits, counted from the left and starting with the first non-zero digit, can be specified).

DECIMAL POINT SELECTOR SWITCH

- Used for designating the decimal point position (0, 1, 2, 3, 4) for calculated results.
- + (Add-Mode) – Addition and subtraction functions are performed with an automatic 2-digit decimal. It is convenient for currency calculations.
- F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

ROUNDING SWITCH



Used for round-up [\uparrow], round-off [5/4], or round-down [\downarrow] to the pre-selected decimal digits in the result.

GRAND TOTAL / RATE SET SWITCH



OFF ON RATE SET

When the calculations are performed with the GT switch set to "ON", the totals are accumulated in the grand total memory. Each time \boxed{GT} is pressed, the subtotal number is printed with the symbols G+. When \boxed{GT} is pressed, the intermediate grand total is printed with the symbols G>. Press \boxed{GT} successively to get the grand total followed by the symbols G*.

RATE SET

Set switch to "RATE SET" for setting or recalling the tax and currency rate.

OVERFLOW FUNCTION

In the following cases, when "E" is displayed, a dotted line is printed, the keyboard is electronically locked, and further operation is impossible. Press $\boxed{C_E}$ to clear the overflow. The overflow occurs when:

- 1) The result or the memory content exceeds 12 digits to the left of the decimal point.
- 2) Dividing by "0".
- 3) The sequential operation speed is faster than the calculation processing speed. (Buffer Register Overflow)



Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, use the tip of a ball point pen (or similar sharp object) to press the [RESET] button at the back of the calculator. After resetting, be sure to set the calendar, clock, currency and tax rate again.



SPECIFICATIONS

Model name : P170-DH-3

Power Source: AC 120V, 60Hz

Operation Temperature: 32°F to 104°F (0°C to 40°C)

Calculating Capacity: 12 digits maximum

Dimensions: 10-15/32" (L) x 7-7/16" (W) x 2-7/16" (H) / 266mm (L) x 189mm (W) x 62mm (H)

Weight: 27.4 oz (810g) with backup battery

(Subject to change without notice)

REPLACING BACKUP BATTERY

Memory backup battery retains the tax rate, currency rate, clock and calendar setting, when the power is off or even when the AC cord is disconnected.


Battery : 1 Lithium battery (Type : CR2032)

Battery life : Backup time 2 years

After replacing the back-up battery, press the [RESET] button. After resetting be sure to set the tax rate, currency rate, clock and calendar setting again.



- CAUTION** • Risk of explosion if battery is replaced with an incorrect type. Dispose of used batteries according to the instruction.
• The socket-outlet should be installed near the equipment and should be easily accessible. In case of electrical fault (i.e. smoke), disconnect the plug from the electrical outlet immediately.

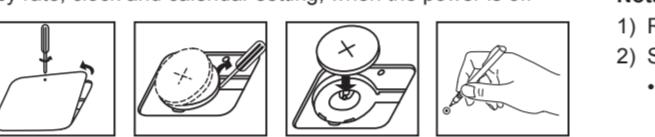

For CA, USA Only

included battery contains perchlorate material - special handling may apply. See <http://www.dtsc.ca.gov/hazardouswaste/perchlorate/> for detail.

CANON CONSUMER CALCULATOR LIMITED WARRANTY

The limited warranty set forth below is given by Canon U.S.A., Inc. (Canon U.S.A.) with respect to Calculators purchased and used in the United States respectively.

This limited warranty is only effective upon presentation of proof of purchase (bill of sale) to Canon U.S.A. Factory Service Center. Canon Calculators, when delivered to you in a new condition in the original container, are warranted against defective materials or workmanship as follows: for a period of one (1) year from the date of original purchase, defective parts or Calculators returned to a Canon U.S.A. Factory Service Center and proven to be defective upon inspection, will be exchanged at Canon U.S.A.'s sole option, for new or comparable rebuilt parts or calculators (of the same or similar model). Warranty for replacement shall not extend the original warranty period of the defective calculator.

When returning Calculators under this limited warranty, you must pre-pay the shipping charges, if any, and enclose a complete explanation of the problem. Calculators covered by this limited warranty will be repaired at Canon U.S.A.'s sole option, and returned to you without charge by any Canon U.S.A. Service Center. This warranty does not cover rechargeable batteries that may be supplied with the Calculator, as to which batteries there shall be no warranty or replacement.

Information Technology Services Center will refer you to the nearest Factory Service Center. Repairs not under warranty will be at such cost as Canon U.S.A. may from time to time generally establish.

This limited warranty covers all defects encountered in normal use of the calculators, and does not apply in the following cases:

- (a) Loss or damage to the Calculators due to abuse, mishandling, alteration, accident, electrical current fluctuations, failure to follow operating instructions, maintenance and environmental instructions prescribed in Canon U.S.A.'s instruction manual or service performed by other than a Canon U.S.A. Factory Service Center.
- (b) Use of parts (other than those distributed by Canon U.S.A.) which damage the Calculator or cause abnormally frequent service calls or service interruptions.
- (c) If any Calculator has had its serial numbers or dating altered or removed.

NO IMPLIED WARRANTY (OR CONDITION) INCLUDING ANY IMPLIED WARRANTY (OR CONDITION) OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THE CALCULATOR. FOR THE EXPLICIT LISTED OR EXPRESS WARRANTY STATEMENT ABOVE, NO OTHER EXPRESSED WARRANTY IS PROVIDED. EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS CALCULATOR SHALL BIND CANON U.S.A. (SOME STATES OR PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU) NEITHER CANON U.S.A. SHALL BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR FOR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE CALCULATOR, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON U.S.A. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON U.S.A. BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE CALCULATOR SOLD BY CANON U.S.A. DUE TO NEGLIGENCE, BREACH OF WARRANTY, OR OTHER CAUSES. YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE ANY CALCULATOR SOLD BY CANON U.S.A. OR CANON CANADA NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CANON U.S.A. OR CANON CANADA. (SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF ANY CALCULATOR OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT AND STATES YOUR EXCLUSIVE REMEDY.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Canon U.S.A., Inc.

One Canon Park, Melville, NY 11747

Customer Relations Division

1-800-828-4040

Set the switch to "ITEM" to print the number of times the $\boxed{+}$ and $\boxed{-}$ keys have been pressed (up to 999). The item count will be printed on the left hand side of the paper roll when the $\boxed{\#}$, \boxed{X} , \boxed{M} or \boxed{MX} keys are pressed.

Set the switch to "CONV" position to perform currency conversion calculation functions. Entries and result will appear on the display and printout.

- Set the switch to \boxed{GT} and enter the currency conversion rate and press $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to store the current rate.

- Press $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to recall the stored currency conversion rate.

- Press \boxed{S} to convert currency figure displayed from $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to the $\boxed{\$}$.

- Press $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$ to convert displayed figure from $\boxed{\$}$ to $\boxed{C_1}$, $\boxed{C_2}$ or $\boxed{C_3}$.

*1 Specifying the Number of Decimal Places for Intermediate US Dollar Amounts. When you convert from one national currency to another, the calculator internally converts the original currency to US dollars. This conversion result is the "intermediate US dollar amount". Next, the intermediate US dollar amount is converted to the target currency. The flow of the steps of the conversions will be shown on the printout. For such a calculation, you should use the following procedure to specify the number of decimal places for the intermediate US dollar amount. You can specify from 0 (") to 9 decimal places, for a floating decimal point (F). The intermediate US dollar amount is rounded off to the number of decimal places you specify. *2 0 is displayed when F (floating point) is set for the number of decimal places. F is the initial default setting. *3 For rates of 1 or greater, you can input up to six digits. For rates less than 1 you can input up to 8 digits, including 0 for the integer digit and leading zeros (though only six significant digits, counted from the left and starting with the first non-zero digit, can be specified).

FCC REGULATIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the problem by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Used for designating the decimal point position (0, 1, 2, 3, 4) for calculated results.

+ (Add-Mode) – Addition and subtraction functions are performed with an automatic 2-digit decimal. It is convenient for currency calculations.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

