

Backlight Operation

Use the **LIGHT** key, located on the left side of your remote control, to turn backlighting of keys on or off.

Manual TV code Setup

You will have to setup your new DIRECTV remote to control your TV, before it can be used to operate both the DIRECTV receiver and TV.

It is recommended you use the on-screen steps described on your Remote Guide to program and setup your remote if you have DIRECTV Genie™ HD DVRs (Model HR44 or above) and Genie™ Clients (Model C41 or above).

Programming Remote:

1. Turn on the TV manually or using the original TV remote.
2. Locate the 4-digit code for your TV from the list on the back of insert.
3. Press and hold the **MUTE** and **SELECT** keys at the same time until the green light on top of the remote flashes twice, then release both keys.
4. using the number key enter "1"; wait for the green light on top of the remote to flash twice.
5. Using the number keys enter the 4-digit code for your brand of TV. If performed correctly, the green light flashes twice.

6. Aim the remote at your TV and press the **PWR OFF** key once. Your TV should turn off. If it does not turn off, repeat steps above, trying each code for your brand until you find the correct code.

8. For future reference, write down the working code for your TV.



Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries!

1. On the back of the remote control, push down on the door (as shown), slide the battery cover off, and remove the used batteries.
2. Obtain two (2) new AA alkaline batteries. Match their + and - marks to the + and - marks in the battery case, then insert them.
3. Slide the cover back on until battery door clicks into place.

Federal Communication Commission Interference Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

TV Brand	Codes
Aiwa	11362
AOC	11365, 12402
Apex Digital	12397
Ario	12397
Audiovox	11564
Aventura	10171
Champion	11362
Coby	13478, 12306, 12314, 12315, 12344, 12348
Commercial Solutions	11447
Curtis	12397, 13382
Durabrand	10178, 10171
Dynex	12049
Element	11886
Emerson	11394, 11886, 10178, 10171
Envision	11365
ESA	10171
Favi	13382
Fisher	11362
Funai	11394, 10171
GE	11447, 10178
GFM	11886, 10171

GFM	11886, 10171
GoldStar	10178
Haier	12293, 13382
Hallmark	10178
Hisense	13382
Hitachi	11643
iLo	11394
Insignia	12049, 11423, 11564, 10171, 11517, 12751
iSymphony	13382
JVC	11601, 11774, 12321, 13650
LG	10178, 11423, 12358, 13941, 14017
LXI	10156, 10178
Magnavox	11867, 11454, 12372, 10171, 11365, 13623
Marantz	11454
Matsushita	10250
Megatron	10178
Memorex	10178
MGA	10178
Mitsubishi	11250, 10178, 11797
NAD	10156, 10178
Naxa	13382
NEC	11797, 12293

Nikko	10178
Norcent	11365
Optimus	10250
Panasonic	11480, 10250, 11291
Penney	10156, 10178
Philco	11394, 10171
Philips	11867, 11454, 12372, 11394, 10171, 10690, 11365
Pioneer	11457
Proscan	11447, 13382
Proton	10178
Quasar	10250, 11291
RadioShack	10178
RCA	11447, 12434, 12746, 13382
Realistic	10178
Samsung	10178, 12051
Sansui	10171
Sanyo	11142, 11362
Scotch	10178
Scott	10178
Sears	10156, 10178, 10171
Seiki	10178
Sharp	10818, 12402

Sony	10810
Soundesign	10178
Squareview	10171
Sylvania	11394, 11886, 10171
Symphonic	11394, 10171
TCL	12434
Technics	10250
TMK	10178
Toshiba	10156, 11524, 14048
Vidtech	10178
Viewsonic	12049, 11564, 10885, 11365
Viore	13382
VIZIO	11758, 12757, 10885
Wards	10156, 10178
Waycon	10156
Westinghouse	11712, 13579, 12397, 10885, 12195, 12293, 12499, 13382
Wyse	11365
Zenith	11423, 12358, 10178, 11365