

How to program your Genie® Remote using the On-Screen Guide

- › Make sure your TV is turned on.
- › On the remote, press **MENU**.
- › Select “**Settings & Help**.”
- › Select “**Settings**.”
- › Select “**Remote Control**.”
- › Select “**IR/RF Setup**.”
- › Press “**Select**” to highlight remote type.
- › Press the **DOWN ARROW** to highlight RF.
- › Press “**Select**.”
- › Select “**Continue**.”
- › Once RF setup is complete, select “**Program Remote**” to program to the TV.
- › Complete by following on-screen prompts.



Visit directv.com/genieremote for help programming your Genie Remote.

For use with Genie HD DVRs (model HR44 or above), Genie Minis (model C41 or above), Wireless Genie Minis (model C41W or above) and DIRECTV Ready TVs.

©2016 AT&T Intellectual Property. AT&T, Globe logo, and DIRECTV are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. All other trademarks and service marks are the property of their respective owners.

ON/OFF

Turns both receiver and TV ON or OFF at the same time. (Remote must be programmed for TV. HD DVR still records when off.)

GUIDE

Press once for On-Screen Guide. Press twice for programming grouped into categories.

RECORD

RECORD program now playing or highlighted in the On-Screen Guide. Press twice to record the entire series.

RED CIRCLE BUTTON

Press to delete recorded shows from your playlist.

MUTE

MUTE the sound.

REPLAY

REPLAY previous six seconds.

REWIND

REWIND at increasing speeds—press up to four times.

PLAY/PAUSE

PLAY current program. Press once while program is playing to PAUSE.

DASH

Press for Guide Options while viewing On-Screen Guide. Press for playlist options while viewing playlist.

Press to display last 6 digits of receiver ID, satellite signal type (SWiM or Multiswitch) and Internet status.

LIST

Display the LIST of your recorded programs.

EXIT

EXIT the menu and return to previous channel viewed. Stop playback while reviewing recorded content.

SELECT

SELECT item highlighted on screen.

INFO

Display INFORMATION about the program now playing or highlighted in the On-Screen Guide.

PREV

Return to PREVIOUS channel viewed.

ADVANCE

ADVANCE 30 seconds. Press and hold to jump ahead to the end of a recorded program.

FAST-FORWARD

FAST-FORWARD at increasing speeds—press up to four times.

ENTER

Press for Mini Guide while viewing your program and dismiss with EXIT.

ENTER also replaces TV INPUT button: to cycle through the equipment connected to your TV, press and hold for three seconds until LED light at top turns green. Then scroll through inputs by pressing ENTER again.

Additional functions vary. Look for on-screen prompts.

