

OPTIMUS

Instruction Manual and Owner's Guide

Digital Oscillating Stand Fan

Model: F-7508

IMPORTANT INSTRUCTIONS:

PLEASE READ AND SAVE THESE IMPORTANT SAFEGUARDS

Thank you for choosing an Optimus fan. To ensure the best performance from your Fan, please read and save the following instructions.

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

- Read all instructions before using this product.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to person, and may void the warranty.
- Always unplug the unit before assembling, disassembling or cleaning.
- Always unplug unit when not in use, when moving from one location to another and before cleaning.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
- Avoid contact with moving parts.
- DO NOT operate this fan with a damaged cord or plug, after a malfunction, or is dropped or damaged in any manner. Return the unit to Optimus Enterprise, Inc. for examination, electrical or mechanical adjustment, or repair.
- Do not operate this fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Extreme caution is necessary when fan is used by or near children or invalids and whenever the fan is left operating and unattended.
- This product is intended for household use only and not for commercial or industrial use. Do not use outdoors.
- Always use on a dry level surface.
- Do not operate if the fan housing is removed or damaged.
- A loose fit between the AC outlet and plug may cause over heating of the plug. Have a qualified electrician replace the outlet.
- DO NOT run cord under carpeting. Do not cover cord with throw rugs, runners or like. Arrange cord away from traffic area and where it could be tripped over.
- This fan is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug fits into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of polarized plug.
- NEVER connect the fan to any power sources other than a 120 volt alternating current polarized outlet.
- WARNING: To reduce the risk of electric shock. DO NOT use this fan with any solid-state speed control and DO NOT insert finger or any object into grill.

CLEANING/MAINTENANCE INSTRUCTIONS:

During Season Care:

- Before cleaning, be sure to turn off and unplug the unit.
- Keep the fan clean. Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor.
- DO NOT immerse the fan in water and never allow water to drip into the Motor Housing.

- Never use gasoline, benzene or thinner. This will damage the surface of the unit.
- After cleaning, be sure to completely dry the unit with a cloth or towel.

After Season Care:

- Your fan can be stored in the off-season.
- Before putting the fan in storage, clean it thoroughly, cover it with a vinyl bag, and store it in a cool and dry place. We recommend using the original (or appropriately sized) box.

User Servicing Instructions:

This plug is a safety feature. It contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged. To reduce the risk of fire, electric shock and personal injury, DO NOT remove, replace, repair or tamper with the originally supplied plug. If the fan does not function properly, it may be due to the safety device incorporated in this plug. If the fuse fails, it is generally due to a short circuit or circuit overload. Replace the fuse as per the instructions below. If the replacement fuse fails, immediately unplug the unit and contact our technical support department for assistance.

Fuse Replacement:

1. To replace the fuse, first turn the unit off and unplug it from the wall. Locate the door on top of the plug. Figure 1.
 2. Slide the door on top of the plug towards the blades. Figure 2.
 3. Carefully remove the fuse from the clips holding it on the top and bottom. Figure 3.
 4. Gently push the fuse back into the pins that will hold it in place.
- Note: If the fuse is not seated properly, the unit will not function.
5. Slide the door back over the fuse box in the plug.

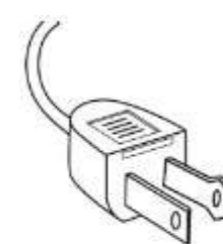 


Figure 1.



Figure 2.



Figure 3.

FAN ASSEMBLY:

1. Remove the L-shaped screw and metal ring from the telescopic pole by turning the L-shaped screw counter clockwise. (Figure 4)
2. Insert the telescopic pole into the top of the base. Install the L-shaped screw and metal ring back into the threaded hole at the bottom of the telescopic pole to secure the pole to the base. (Figure 4)
3. Turn the base back upright.
4. Grasp the telescopic pole firmly and loosen the height adjustment knob. (Figure 5)
5. Raise the inner pole to desired height and tighten the height adjustment knob. (Figure 5)
6. Remove the set screw near the bottom of the fan assembly, and slide the fan assembly onto the inner pole until it rests on the top of the pole, and then tighten back the set screw. (Figure 6)
7. Fix the remote control bracket onto the arm of the fan assembly. (Figure 7)

INFORMATION HOTLINE: If, after reading this owner's guide,

You have any questions or comments, please feel free to write us or call us at 1-888-672-5832. Our customer service representative will be happy to help you.

PLEASE READ AND SAVE THESE INSTRUCTIONS

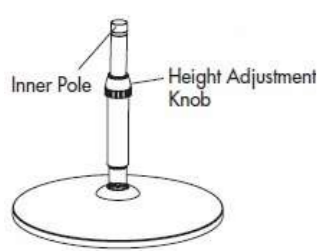 


Figure 5.

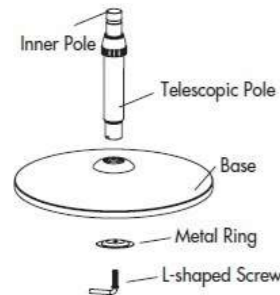 


Figure 4.

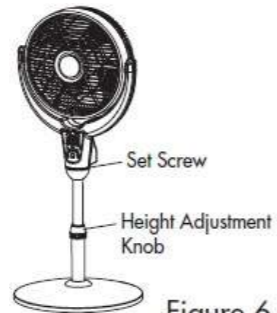 


Figure 6.

 
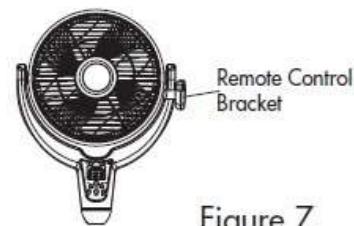 


Figure 7.

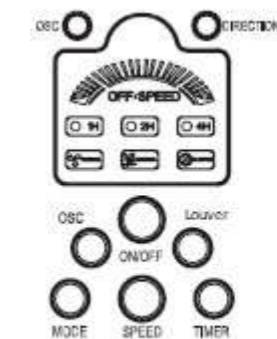

Control Panel

Figure 8.

OPERATING INSTRUCTIONS:

FAN OPERATION:

- Plug cord into any standard 120 volt AC outlet.
- The fan can be controlled by using the remote control or the buttons on the control panel on the fan body. (Figure 8)

FUNCTIONS OF THE KEYS AND SYMBOLS:

ON/OFF Button - Press the "ON/OFF" button once, the fan will start at low speed. Press again to switch the fan off.

Speed Button - Select the speed by pressing the "Speed" button which will adjust the fan speed to Low, Medium and High. The LED screen on the control panel will indicate the fan speed selected.

Timer Button - This fan is equipped with an automatic shut off feature. To select desired length of operation, press the "Timer" button a number of times until the LED indicates the desired operation time (from 1 hour to 7 hours, in 1-hour increments).

Mode Button - Press "Mode" button to choose the wind type, meanwhile the corresponding light will be lit.

"Normal": Wind blow based on Low/Medium/High speed.

"Natural": Imitates the natural fluctuations in speed of wind.

"Sleeping": If the current speed setting is at high speed, in the first half an hour, the fan runs at high speed, and then it changes to medium speed in the second half an hour. After that, it changes to low speed until the end of preset time. If the current speed setting is at medium speed, in the first half an hour, the fan runs at medium speed, and then it changes to low speed until the end of preset time. If

the current speed setting is at low speed, the fan will keep running at low speed until the end of preset time.

Osc Button - To activate the Left/Right oscillation feature of the fan assembly, press the "Osc" button once. Press again to cancel.

Louver Button - Press this button, the front grill of this fan will rotate. Press again to cancel.

REMOTE CONTROL (Figure 9)

The remote control must be directed at the infrared port on the fan body. If the remote control does not operate well, please check the inside batteries first, and change with new batteries if needed. Your remote control uses two (2) "AAA" batteries (not included) for operation.

Note: Change the batteries with new and same types if the remote control does not operate well, otherwise your remote control may not operate properly. Remove the batteries out of the remote control if you won't use the remote control for a long time. Remaining batteries may damage your remote control.

Note: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Battery Disposal - Please dispose of the used battery per municipal or provincial law.

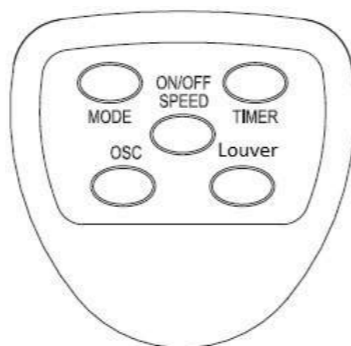 


Figure 9.

CARE AND MAINTENANCE:

- Always unplug the appliance before cleaning.
- Do not immerse the fan in water or other liquids and never allow water to drip onto the motor housing.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan.
- To clean the interior:
 - First, turn the cap counter-clockwise to remove the cap from the fan. (Figure 10)
 - Lightly push the bottom of the front guard and pull out the guard from the top. (Figure 11)
 - Wipe the blades and guard with a soft damp cloth and mild detergent.
 - Wipe all parts dry with a dry cloth.
 - Attach the front guard back to the fan head and tighten with the cap by turning the cap clockwise.

IMPORTANT: The front guard **MUST** be re-installed and tightened before operating the fan.

- To clean between grills, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.
- Do not use gasoline, paint thinner or any other corrosive cleaning solutions.
- If the fan will not be in use for an extended period of time, you may leave the fan assembled. Cover to protect from dust. Store in a cool, dry place.

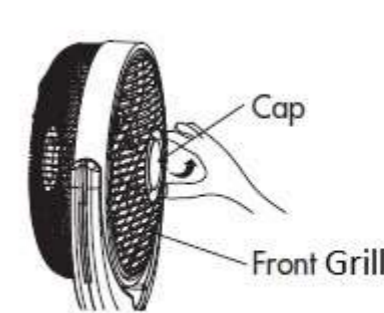 


Figure 10.



Figure 11.

SERVICE INSTRUCTIONS:

- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
- If you have any questions regarding this unit's operation or believe any repair is necessary, please call 1-888-672-5832 to speak with a Customer Service Representative. Or e-mail us at Service@optimusent.com. You will be able to get a faster response through email.
- If you need to exchange the unit, please return it, in its original carton with a sales receipt enclosed, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
- If you have any other questions or comments, feel free to write us:

Optimus Enterprise, Inc.
Customer Service Department
2201 E. Winston Road, Unit #J
Anaheim, CA 92806
Tel: (714) 956-1300
E-mail: Service@optimusent.com

WARRANTY

For your own records, staple or attach your sales receipt to this manual. Please also write the store name /location and date purchased below.

STORE NAME/LOCATION: _____

DATE PURCHASED: _____

ONE (1) YEAR LIMITED WARRANTY

(SAVE THIS WARRANTY INFORMATION)

Optimus Enterprise, Inc, warrants to its customers and /or consumer of this electric fan and the parts thereof will be free from defect in material and workmanship, under normal use, for a period of ONE (1) year from the date of initial purchase. The warranty does not apply to repairs necessitated by damage, misuse, abuse or alteration and to any repairs of merchandise not used within the United States unless otherwise prescribed by law.

Optimus Enterprise, Inc, shall not be liable for any personal injury, property damage or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alternation of this product. This warranty is the only warranty extended by Optimus Enterprise, Inc, to its original customers and /or consumers purchasing fan, Optimus Enterprise, Inc, disclaims all other warranties, expressed or implied, that arise by the operation of law, specifically including the implied warranties of merchantability and fitness for a particular purpose. Optimus Enterprise, Inc, shall not be liable for any incidental or consequential damage, which may have resulted from any alleged breach of warranty. Some states do not allow limitations on how long implied warranty lasts or the exclusion or limitation of consequential damage, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights you may also have other rights which vary from state to state.

Should the fan fail during the warranty period, the owner should:

- Within the first 30 days from date of purchase, the store from which you purchased your Optimus product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement).
- Within the first 12 months from date of purchase, Optimus Enterprise, Inc, will repair or replace the product if it is defective in material or workmanship providing it is returned to Optimus Enterprise, Inc. with freight prepaid, with evidence of purchase date (cash register receipt) together with **US\$45.00** CHECK OR MONEY ORDER for handling and return packaging/shipping charges.

IMPORTANT: ANY REPAIRS SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE. DO NOT ATTEMPT TO REPAIR THIS FAN YOURSELF. DOING SO MAY VOID YOUR WARRANTY.

PLEASE RETAIN THIS WARRANTY AND SALES RECEIPT TO INSURE YOUR PRODUCT WARRANTY.

IMPORTANT: RETURN INSTRUCTIONS:

Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:

- Carefully pack the fan in the original container or a suitable container to avoid damage in shipping.

- Seal the carton. Address an envelope as follows:

Optimus Enterprise, Inc.
2201 E. Winston Road, Unit #J
Anaheim, CA92806

- Inside the envelope, enclose your name, full address with zip code, daytime phone number, evidence of purchase date (cash register receipt) AND A CHECK OR MONEY ORDER for handling and return packaging/shipping charges. Please also include a brief explanation of the problem you are having with the unit.
- Optimus Enterprise, Inc. recommends you insure the package as damage in shipments is not covered by your warranty.
- All shipping charges must be prepaid by you (as noted as above).