

Nokia 2760 Flip

 
User Guide

Get started

Turn on your phone

Press and hold the power key.

Keys and parts

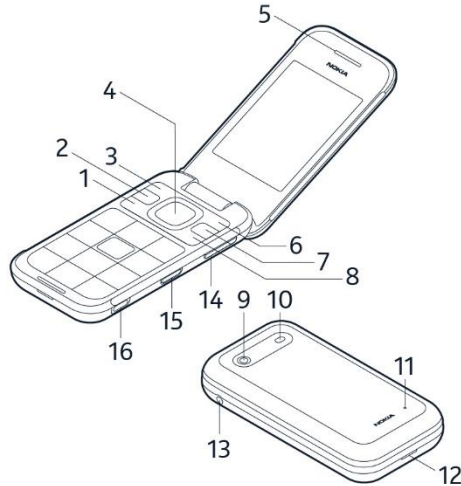

1. Call key
2. Shortcut key
3. Left selection key
4. Center key
5. Earpiece
6. Right selection key
7. Back key
8. Power/ End key
9. Camera
10. Flash

11. Microphone
12. Back cover opening slot
13. Headset connector
14. Volume keys
15. SOS call key
16. USB connector

 
SIM card

Note: Turn the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.


Your phone comes with the SIM card preinstalled.

To swap the SIM, follow the steps below:

1. Put your fingernail in the small slot at the bottom of the phone, lift and remove the cover.

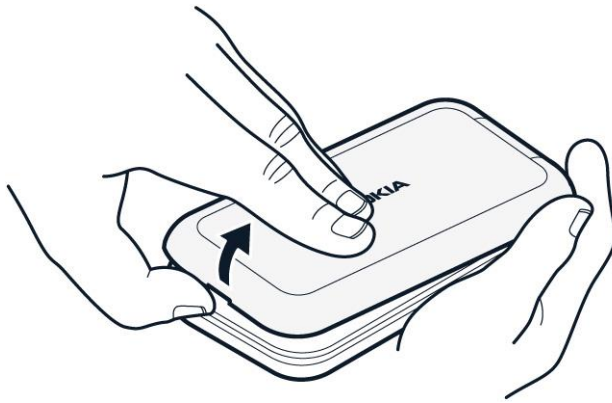

2. If the battery is in, lift it out.
3. Slide the SIM card holder to the left and open it up. Place the nano-SIM in the slot face down, close down the holder and slide it to the right to lock it in place.

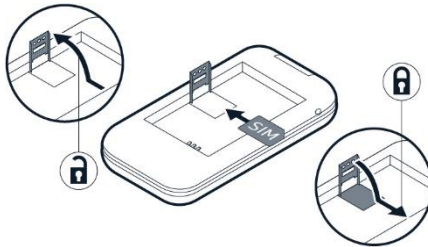

4. Put back the battery.
5. Put back the cover.

Charge your phone

1. Plug a compatible charger into a wall outlet.

2. Connect the cable to your phone.

Your phone supports the USB-C cable. You can also charge your phone from a computer with a USB cable, but it may take a longer time.

If the battery is completely drained, it may take several minutes before the charging indicator is displayed.


Basics

Explore your phone

To open the apps list, press the center key.

To open an app or select a feature, press the center key right, left, up, or down to scroll to the app or feature, and press the center key to select **SELECT**.

To go back to the previous view, press the back key.

To go back to the home screen, press .

CHANGE THE VOLUME

To change the volume during a call, or when listening to music, press the volume keys.

To change the volume of your media apps, ringtones, alerts, and alarms, press the center key, and select **Settings**. Scroll right to **Personalization**, and select **Sound > Volume**.

Protect your phone

LOCK THE KEYS AND SCREEN

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press and hold the * key, or close the fold.

UNLOCK THE KEYS AND SCREEN

To unlock the keys and screen, select **Unlock**.

SET A SCREEN LOCK

You can set the phone to ask for a screen lock code.

1. Press the center key and select **Settings**.
2. Scroll right to **Privacy & Security**.
3. Select **Screen Lock > Screen lock > On**, and create a four-digit code. Note, however, that you need to remember the code you created, as Tracfone is not able to open or bypass it.

Write text

Press a key repeatedly until the letter is shown.

To type in a space, press 0.

To type in a special character or punctuation mark, press *.

To switch between character cases, press # repeatedly.

To type in a number, press and hold a number key.

CHANGE THE TEXT SIZE

Do you want to read bigger text on the display?

1. Press the center key and select **Settings**.
2. Scroll right to **Device**, and select **Accessibility > Large text > On**.

Accessibility mode

With the accessibility mode, the text on the phone display is bigger and the alerts louder. To switch on the accessibility mode, press the center key, and select **Settings > Device > Accessibility Mode > On**.


ADD YOUR ICE DETAILS

To be able to make SOS calls, you need to add your ICE (In Case of Emergency) details. To add your personal details, press the center key, and select **Settings > Device > ICE information**.

To define the contacts to whom the SOS call is made, press the center key, and select **Settings > Device > ICE information > Options > Create ICE contacts**.

MAKE AN SOS CALL

Once you have the accessibility mode turned on and added an ICE contact, you can make SOS calls. To make the call, press and hold the SOS call key for three seconds, or press the SOS call key quickly twice. The phone calls your first ICE contact. If the

contact doesn't answer in 25 seconds, the phone calls the next contact, and keeps calling your contacts 10 times until one of them answers the call, or you press .

Note: When the SOS call is answered, the phone goes to handsfree mode. Do not hold the phone close to your ear, as the volume may be very loud.

SEND AN SOS MESSAGE

You can select to send an SOS message if no one answers your SOS call. Press the center key and select **Settings > Device > Accessibility Mode > On > SOS Call > SOS Message > On**.

To edit the pre-defined message, select **SOS Message > Edit**.

Tip: If you want to keep the accessibility mode on, but don't want to make SOS calls, press the center key, and select **Settings > Device > Accessibility Mode > SOS Call > Off**.

Battery life

To save power:



- Always charge the battery fully.
- Mute unnecessary sounds, such as keypad sounds.
- Use wired headphones, rather than the loudspeaker.

- Set the phone screen to turn off after a short time.
- Lower the screen brightness.
- When applicable, use network connections, such as Bluetooth, selectively: turn the connections on only when you are using them.

Connect with your friends and family

Calls

MAKE A CALL

1. Type in the phone number. To type in the + character, used for international calls, press * twice.
2. Press .
3. To end the call, press .

ANSWER A CALL

When the phone rings, press .


REJECT A CALL

To reject a call, press .

REAL-TIME TEXT (RTT)

To set real-time text on, press the center key, and select **Settings > Device > Accessibility > RTT**. Select **Visible during calls** to see RTT functions during phone calls or **Always visible** to be able to

select whether to make a phone call or an RTT call in Messages, Contacts and Call log applications.

When you receive a phone call, press  and then select **Options > RTT view** to be able to start writing.

Contacts

Save and organize your friends' and family members' phone numbers.

ADD A CONTACT

1. Press the center key and select **Contacts**.
2. Select **New**.
3. Enter the contact details.
4. Select **SAVE**.

TRANSFER CONTACTS FROM YOUR OLD PHONE

To add contacts from your Gmail or Outlook account to your new phone, press the center key, and select **Contacts > Options > Settings > Import Contacts** and the relevant option.


To add contacts from your old phone using Bluetooth:

1. On your new phone, press the center key, and select **Settings > Network & Connectivity > Bluetooth > On**.
2. Turn on Bluetooth on your old phone and send the needed contacts to your new phone using Bluetooth.

3. On your new phone, accept the transfer request.
4. On the home screen, select **Notices > Files received > Import**.

CALL A CONTACT

You can call a contact directly from the contacts list.

1. Press the center key, and select **Contacts**.
2. Scroll to a contact and press .

Send messages

SEND A MESSAGE

1. Press the center key, and select **Messages > New**.
2. In the To field, press # until you are able to enter numbers and then type in a phone number, or select **Contacts** to add a contact from your contacts list.
3. Write your message. If you need to remove a character, press the back key.
4. Select **SEND**.

Mail

ADD A MAIL ACCOUNT

When you use the E-mail app for the first time, you are asked to set up your email account.

1. Press the center key, and select **E-Mail**.
2. Select **Next** and type in your name and e-mail address.
3. Select **Next** and type in your password.

SEND MAIL

1. Press the center key and select **E-Mail**.
2. Select **Compose**.
3. In the To field, type in an e-mail address.
4. Type in the message subject and the mail.
5. Select **Send**.

Personalize your phone

CHANGE YOUR RINGTONE

1. Press the center key, and select **Settings**.
2. Scroll right to **Personalization** and select **Sound > Tones > Ringtones**.
3. Scroll to a ringtone and press the center key.

CHANGE THE LOOK OF YOUR HOME SCREEN

You can change the look of your phone with wallpapers.

1. Press the center key, and select **Settings**.
2. Scroll right to **Personalization** and select **Display > Wallpaper**.
3. Select **Camera** to take a new photo for the wallpaper, **Gallery** to choose a wallpaper from the photos on your phone, or **Wallpaper** to select from pre-defined wallpapers.

PERSONALIZE THE SHORTCUT KEY

To set which app opens when you press the shortcut key, press the key, scroll to the app, and select **SELECT**.

To change the app later:

1. Press the center key, and select **Settings**.
2. Scroll right to **Personalization** and select **Shortcuts**.
3. Scroll to the app, and select **SELECT**.

Camera

TAKE A PHOTO

1. To turn the camera on, press the center key, and select **Camera**.
2. To take a photo, press the center key.

TAKE PHOTOS WITH A TIMER

Want to have time to get in the shot too? Try out the timer.

1. Press the center key, and select **Camera**.
2. Select **Options**, scroll right to **Self Timer**, and select the time.
3. Press the center key to take the photo.

VIEW A PHOTO YOU HAVE TAKEN

To view the photo right after taking it, select **Preview**.

To view the photo later, on the home screen, press the center key, and select **Gallery**.

RECORD A VIDEO

1. Press the center key, and select **Camera**.
2. To start recording, scroll right and press the center key.

3. To stop recording, press the center key.

WATCH THE RECORDED VIDEO

To view the video right after recording, select **Preview**.

To watch the video later, on the home screen, press the center key and select **Video**.

Internet and connections

Browse the web

CONNECT TO THE INTERNET

1. Press the center key, and select **Internet**.
2. Select **Search Internet**.
3. Write a web address, and select **GO**.
4. Use the center key to move the mouse cursor in the browser.

Bluetooth®

TURN ON BLUETOOTH

1. Press the center key, and select **Settings** > **Network & Connectivity** > **Bluetooth**.
2. Turn **Bluetooth** to **On**.
3. Select **Nearby devices** to find a new device or **Paired devices** to find a device you have paired your phone with previously.

Wi-Fi

TURN ON WI-FI

1. Press the center key and select **Settings** > **Network & Connectivity** > **Wi-Fi**.
2. Turn **Wi-Fi** to **On**.
3. Select **Available networks** and the network you want, enter a password if needed, and select **Connect**.

ENABLE WI-FI CALLS

1. Press the center key and select **Settings** > **Network & Connectivity** > **VoLTE/VoWiFi**.
2. Turn **Wi-Fi calling** to **On**.

You can now make calls over a Wi-Fi connection if mobile network is not available.

Music and videos

Music player

You can listen to your MP3 music files with the music player.

LISTEN TO MUSIC

1. Press the center key and select **Music**.
2. Select whether you want to view your playlists, artists, albums, or songs.
3. Scroll to a song, and press the center key.

Tip: To set a song as ringtone, scroll right to **Songs**, scroll to the song you want, and select **Options** > **Save as ringtone**.

Video player

PLAY A VIDEO

1. Press the center key, and select **Video**.
2. Scroll to the video you want to watch and press the center key.
3. Press the center key to pause and resume playback while watching the video.

To watch the video in full screen, select **Full Screen**.

To adjust the volume, press the volume keys.

To share the video with a friend, select **Options > Share**, and select to share using e-mail, messaging, or Bluetooth, for example.

Recorder

RECORD A SOUND CLIP

1. Press the center key, and select **Recorder**.
2. To record, select **New** and press the center key.

To stop recording, select **Done**.

Organize your day

Clock

SET AN ALARM

1. Press the center key, and select **Clock**.
2. Select **New > Time**, use the center key to set the time, and select **SAVE**.

3. If needed, set the alarm to repeat or give the alarm a name.
4. Select **Save**.

If you often need an alarm at the same time, but don't want to set in on repeat, just scroll to the alarm and select **TURN ON**. The alarm sounds at the time you have specified.

COUNTDOWN TIMER

If you need an alarm but don't want to create one in the alarm clock, use the countdown timer.

1. Press the center key, and select **Clock**.
2. Scroll right to **Timer**.
3. Select **SET**, and use the center key to set the needed time.
4. Select **START**.

STOPWATCH

1. Press the center key, and select **Clock**.
2. Scroll right to **Stopwatch** and select **START**.
3. Select **Lap** when a lap has been completed.
4. To stop the stopwatch, select **PAUSE > Reset**.

Calendar

Add a calendar reminder

1. Press the center key and select **Calendar > CALENDAR**.
2. Scroll to the date you want and select **Add**.

3. Enter the event details.
4. Select whether to add a reminder to the event.
5. Select **Save**.

Calculator

MAKE A CALCULATION

1. Press the center key, and select **Calculator**.
2. Enter the first factor of your calculation, use the center key to select the operation, and enter the second factor.
3. Press the center key to get the result of the calculation.

Copy content and check the memory

Copy content

COPY CONTENT BETWEEN YOUR PHONE AND COMPUTER

1. Press the center key, and select **Settings**.
2. Scroll right to **Storage** and set **USB storage** to **Enabled**.
3. Connect your phone to a compatible computer with a compatible USB cable.
4. On your computer, open a file manager, and browse to your phone. You can see the content stored on your phone.
5. Drag and drop items between your phone and computer.

File manager

FIND YOUR FILES

To find your files quickly, press the center key, and select **File Manager**. To find items on your phone, select **Internal**.

Memory

CHECK THE AMOUNT OF FREE MEMORY

1. Press the center key, and select **Settings**.
2. Scroll right to **Storage** and check **Media and Application data** to see how much memory is consumed and how much is available.

Security and privacy

Security settings

CHECK YOUR APPS' PERMISSIONS

1. Press the center key, and select **Settings**.
2. Scroll right to **Privacy & Security** and select **App permissions**.
3. Select an app to see what kind of permissions it requests. You can grant or deny permissions.

MANAGE YOUR INTERNET PRIVACY SETTINGS

1. Press the center key, and select **Settings**.
2. Scroll right to **Privacy & Security** and select **Do not track**.
3. Select whether you want to allow websites to track your browsing.

Product safety information

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector.

Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or

income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.nokia.com/phones/privacy>, applies to your use of the device.

©2022 HMD Global Oy. All rights reserved.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

Google and other related marks and logos are trademarks of Google LLC.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.