

CARBON STEEL BAKEWARE

CARE AND USE INSTRUCTIONS

- Before using your new bakeware, wash thoroughly in hot soapy water using a soft cloth or sponge. Dry completely.
- For best baking results, lightly grease the pan before use.
- For easy removal of baked goods, cool 5 to 10 minutes before taking out of pan.
- Never cut anything on the bakeware or use utensils with sharp edges, to avoid piercing the non-stick surface. Always use nylon, silicone, or wooden kitchen tools.
- \bullet This bakeware is oven safe up to 230 °C / 450 °F. Always use oven mitts when handling.
- Never use metal scouring pads to clean the non-stick surface.
- Hand wash only. Dry thoroughly before storing.