



User Manual

Toaster

MODEL: CCT2201B

1. READ these instructions carefully before installing and operating the appliance. Keep them for further reference.
2. Record in the space below the "SERIAL/MODEL NUMBER" found on the back or bottom of your appliance and retain this information for future reference.

SERIAL NUMBER:

MODEL NUMBER:

DATE OF PURCHASE:

Save and staple your sales receipt to your manual for warranty coverage.

CONTENTS

SAFETY INFORMATION

Important Safety Instructions.....	3
Electric Requirements	4
Power Supply Cord.....	4

SET UP & USE

Parts & Features	5
Installation Guide	6
Operation Guide.....	6-7

CLEANING & CARE.....	8-9
---------------------------------	------------

TROUBLE SHOOTING & WARRANTY

Before You Call For Service	10
Customer Service	10
Troubleshooting	10
Limited Warranty.....	11

SAFETY INFORMATION

DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death

WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death

CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, basic safety precautions should always be followed including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electric shock, do not immerse toaster, or cord, or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to an authorized service facility for examination, repair, or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury and voids warranty.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, turn any control to "off," then remove plug from outlet.
12. Do not use appliance for anything other than its intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster because they may involve a risk of a fire or electrical shock.
14. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.
15. Failure to clean crumb tray may result in a fire hazard.
16. Do not attempt to dislodge food when toaster is plugged in.

SAFETY INFORMATION

17. Do not place pastry items with runny-type frosting or open filling in toaster.
18. When heating toaster pastries, always use the lightest toast color setting
19. To protect against risk of fire, do not put rice cakes in this toaster.
20. Do not leave appliance unattended while in use.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

ELECTRICAL REQUIREMENTS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

POWER SUPPLY CORD


A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

SET UP & USE

PARTS & FEATURES

 CCT2201B

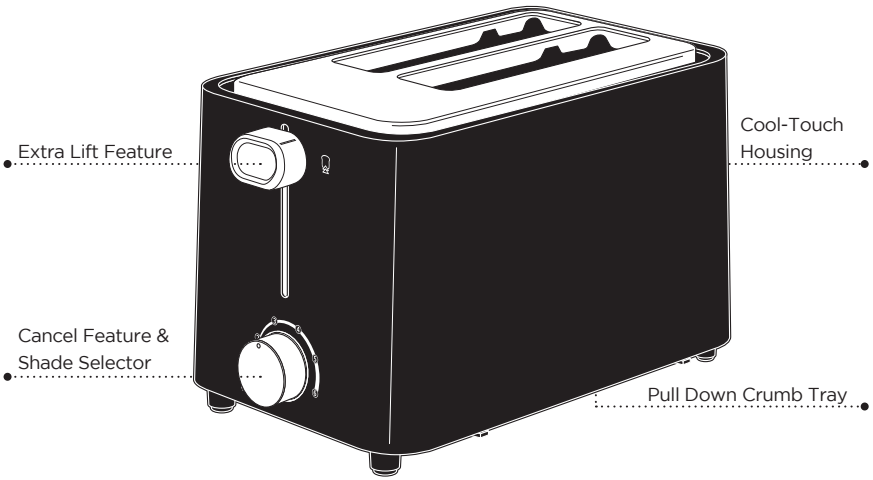

SET UP & USE

INSTALLATION GUIDE

1. Carefully unpack the toaster oven.
2. Remove all labels and tags from the products.
3. Wipe the exterior of the toaster with a clean, damp cloth. Allow to dry thoroughly. Do not use harsh detergents or abrasive cleansers on any part of the toaster oven.

NOTE: Do not immerse the toaster, cord or plug housing in water or any other liquid.

 
OPERATION INSTRUCTIONS

SELECTING TOAST COLOR

1. The Shade Selector Dial is located at one end of your Toaster. Simply turn the Dial to the desired toast colour, (1) for light toasting, (6) for dark toasting.
2. For your first toasting, it is best to position the Shade Selector Dial at the lowest setting and then adjust each subsequent toasting to your preference.

TOASTING


1. Place your Toaster on a flat, level surface. Insert one slice of bread into each slot.
2. Press the Toasting Lever located on one end of your Toaster downward until it locks into place. This will lower the bread into position and automatically begin toasting. The toast will pop up when it has reached the selected colour. (For best results, allow toaster to cool for one or two minutes between toasting cycles.)
3. The Toaster will be ready to toast again when the toasting lever locks into place when pushed downward.
4. Should you desire to stop the toasting before reaching the selected colour, turn the Shade Selector Dial to the Cancel () function, and the toast will pop up.
5. When you press the Toasting Lever down at the start of the toasting cycle, or when you use the Cancel Function to raise the toast, you may notice a small flash of light in the toast slot at the end opposite the toasting control. This flash of light, caused when the power switch opens and closes, is normal with any high-wattage appliance.

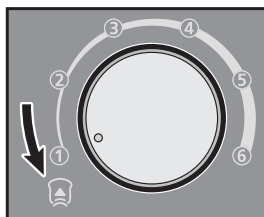

SET UP & USE

EXTRA LIFT FEATURE

 To remove smaller breads and bagels, or items such as crumpets or English muffins, lift the carriage control lever approximately 20mm above the resting position.

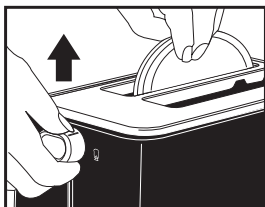

PASTRY

For best results, follow the instructions printed on the pastry package. If the package does not have instructions, position the Shade Selector Dial at the lowest setting.. Some pastries may require a second toasting cycle.

WARNING: Do not place pastry items with runny-type frosting or open filling in toaster.

To protect against risk of fire, do not put rice cakes in this Toaster.

CARE AND CLEANING

CLEANING YOUR TOASTER

Be sure the Toaster is unplugged before cleaning. Wipe the Toaster exterior with a clean, damp cloth. Do not use abrasive cleansers. Do not put Toaster, or cord, or plug in water or any other liquid.

Pull down the Crumb Tray located on the bottom of your Toaster by pinching the tab. The Crumb Tray can be wiped clean with a dry cloth, or wiped with a damp cloth, thoroughly dried and replaced. Crumbs that accumulate in the Crumb Tray could catch fire if not removed periodically.

WARNING: Never operate the Toaster without the Crumb Tray properly locked into place.

REMOVING LODGED TOAST

If a piece of toast becomes lodged in the Toaster, unplug the Toaster and allow to cool. Press the Toasting Lever down. Turn the Toaster upside down, and gently shake the toast loose.

CAUTION: Never use a fork or sharp-edged utensil to remove toast because it may damage the heating element or cause injury.

CARE AND CLEANING

CLEANING AND MAINTENANCE

Warning: To avoid electric shock always unplug your product before cleaning. Ignoring this warning may result in death or injury.

Caution: Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

General:

- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution to wipe down your product.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrate detergents, solvents or metal scouring pads. SOME of these chemicals may dissolve, damage and / or discolor your product.

Power Interruptions

Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, replugin power cord to AC outlet.

Moving Care

Unplug the product, empty contents from product and clean the product and door gaskets according to "General Cleaning" section. Prop doors open, so air can circulate inside. When moving always move the product vertically. Do not move the product lying on its side.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE PRODUCT FAILS TO OPERATE:

- A) Check to make sure that the product is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 1-855-855-0294.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE**

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the product still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customer must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Appliance does not turn on	Appliance is not plugged in	Check that appliance is plugged into a working outlet

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Commercial Chef brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service.**

W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured toaster oven equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On toasters that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and other accessory items that are included with the toaster.
12. Transportation and shipping costs associated with the replacement of the toaster.
13. Food loss for loss due to product failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your toaster oven.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **1-855-855-0294**.

W Appliance Co.,
New York, NY 10018



© 2018 Commercial Chef is a W Appliance Company.
All Rights Reserved.