

How do I set up and use my solar votive?

Setting up your solar votive is easy! Turn the solar panel switch to “on”, and then set or hang your votive in direct sunlight (6 hours for best results) with the solar panel facing up toward the sun. Once the sun goes down and it gets dark enough, the included photosensor will turn the votive on automatically!

Can my solar lantern be left outside year-round?

Yes, Allsop Home & Garden Lanterns are designed so that they can survive in the outdoors! Our fabrics are tough and we use stainless steel and other materials that can handle the weather. While we expect that you will get multiple years of service from your lanterns, over time they will experience normal wear from being outside. Some consumers take their lanterns down in winter, especially in areas with snow and ice.