MIGHTICAN Can Opener

Use:

Open handles and place on top of can to self-locate on the edge of the ring. Close handles.

Turn the knob until the lid is detached.

With the handles closed, lift the lid. No need to touch.

Open the handles to release the cover.

Caution:

The rim of the can is sharp Avoid contact and dispose of carefully Do not re-use can for storage

Care:

It is important to clean your can opener regularly. Use warm soapy water.