Starfrit DIGITAL BAKING KITCHEN SCALE



INSTRUCTIONS FOR USE

SPECIFICATIONS

- Can be used with or without bowl
- Stainless steel weighing platform and bowl
- Also measures volume of milk and water
- Unit conversion feature
- Weight: grams, pounds and ounces
- Volume: milliliter and fluid ounces
- Automatic conversion feature imperial / metric
- Zero and tare functions
- Low battery and overload indicators
- Auto-off after two minutes or manual-off
- Scale capacity: 11 lb / 5 kg
- Bowl capacity: 47 oz / 1.4 L
- Accuracy: 0.1 oz / 1 g

BATTERIES



- Requires 3 AAA batteries (included).

TO REPLACE BATTERIES

- Open battery case cover underneath the scale.
- Take out the used batteries and install new ones. Make sure to respect the polarity.
- Close battery case cover.

LED SCREEN

fl'oz Volume

BUTTONS



M Milk mode

Tare function Q Weight

ml Volume

weighing object

WEIGHING MODE

Place the scale on a solid and flat surface. • Press Obutton to turn on the scale. Wait until LED shows "0" to start weighing

 
• Press O button to turn on the scale.

milk volume mode when LED shows "0".

• Press (UNIT) button to convert the mode to water or

Place a bowl or container on the weighing platform.

LED screen indicates the weight of the bowl or



show the weight reading.

ZERO AND TARE FUNCTIONS

The zero and tare functions allow you to weigh items consecutively without having to remove the article already on the platform. For example, if you are using a bowl, these functions allow you to weigh the content of the bowl without counting the weight of the bowl. Press (to use these functions.



the LED will show "O g" each time (button is pressed. Icon "o" will show on left of LED, indicating zero function is activated. The maximum capacity of the scale will not be reduced by the stated weight if it is 7 oz (200 g) or less.



Tare function

 
When sum of all loads on scale is over 7 oz (200 g), the LED will show "O g" each time (button is pressed. Icon "T" will show on left upper corner of LED, indicating tare function is activated. Maximum weight capacity is reduced by tare amount.

Under this condition, if you press (button, you will see

Zero function

When sum of all loads on scale is less than 7 oz (200 q).

AUTO SHUT OFF & MANUALLY SHUT OFF



5. DO NOT use chemical or abrasive cleaning agents. off manually the scale. Press (button for 3 6. Not for commercial use. seconds and the scale will turn off.

LOW BATTERY & OVERLOAD INDICATORS

2. Overload

1. Low battery power

Please replace batteries

Remove item to avoid damage

Maximum capacity for this scale is 11 lb / 5 kg.

Starfrit.com

3. Avoid contact with water. DO NOT immerse the scale in water.

4. All plastic parts should be cleaned immediately after contact with fats.

spices, vinegar and strongly flavored/colored food. Avoid contact with

ADVISE FOR USE & CARE

acid citrus iuices.

1. Always use the scale on a hard flat surface.

 
2. Clean the scale with a slightly damp cloth.



SUBSCRIBE TO THE NEWSLETTER TO LEARN MORE ABOUT OUR PROMOTIONS

PRINTED IN CHINA FOR: ATLANTIC PROMOTIONS INC. LONGUEUIL (QUÉBEC) J4G 1V6
CUSTOMER SERVICE: STARFRIT.COM/EN/CONTACT-US

VOLUME WEIGHING MODE Place the scale on a solid and flat surface.



Press the circle button to turn on the scale.

Button in power "OFF" status Press circle button to turn on the scale.

> Button in power "ON" status Turn OFF / Zero and tare functions.



(UNIT) Mode and unit conversion

Press 🖲 button to reset the LED screen at "0". Put a liquid ' Q M

 Pour liquid (water or milk) into the bowl or container LED screen indicates the volume of the liquid (water