



lumoday™

User Guide

**Sleep & Charge**

CA-14WD

HELLO,

Thank you for choosing Lumoday. We sincerely hope that enjoy your new Sleep & Charge clock.

If you have any questions or need a hand setting up and using your new clock, we're here to help. Just contact us at:

**[support@lumoday.com](mailto:support@lumoday.com)**

## **Installation**

---

Plug in the AC/DC power adapter to an AC wall outlet and then plug its DC jack into the back of the clock. Your clock will turn on and is now ready to use.

## **Setting Backup Battery Installation**

---

The backup batteries will save the time and alarm settings if the clock is unplugged or if there is a power loss. When power is restored, the time and alarm settings will be restored.

NOTE: The clock must be plugged in to work. It will not operate on battery power.

1. Slide to remove the battery cover on the bottom of the clock.
2. Insert 2 new AAA batteries (not included) with "+" and "-" ends of battery aligned as indicated (the "-" side of the battery touches the contact spring on your clock).
3. Replace the battery cover.

NOTE: Do not mix old and new batteries. Do not mix alkaline, standard and rechargeable batteries. Alkaline batteries are recommended

## **Setting Time**

1. Press and hold 🕒 button down until the hour digit starts to flash, then release the button.
2. Press the HR and MIN buttons to adjust the time. As you cycle through 1-12 the hours will change from AM to PM.
3. Press 🕒 button to exit the setup (or if no key pressed for about 10 seconds it will automatically exit the setup).

## **USB Charging Mobile Devices**

Connect the charging cable of your 5V devices to the USB ports at the front of the clock, then connect the other end to your device. Your clock supplies 2A of power and will charge you phone or other devices automatically.




NOTE: Charging cables for your device are not included.

## **Adjusting the Display Brightness**

Tap **SNOOZE** to adjust the brightness of the display.

## Setting the Alarm






---

1. Press and hold  button down until the hour digit starts to flash, then release the button.
2. Press the HR and MIN buttons to adjust the alarm time. As you cycle through 1-12 the hours will change from AM to PM.
3. Press  button again, the snooze time "05" will flash. Then press MIN button to set snooze duration from 5-60 minutes.
5. Press  button to exit the setup (or if no key pressed for about 10 seconds it will automatically exit the setup).

Repeat the same procedure using  button to set Alarm 2.

## Using the Alarm

---

1. Press  button once to activate Alarm 1 and the  icon will show on the display.
  2. Press  button again to turn Alarm 1 off and the  icon will disappear from the display.
- Repeat the same procedure using  button to set Alarm 2.

 
Note: The snooze duration is set during the alarm setup.

## When the Alarm Sounds

---

To snooze the alarm press the **SNOOZE** button. The Snooze duration is set during the alarm setup.

To stop the alarm and reset it to sound again tomorrow, press any button on the top of your clock (besides the Snooze button). The alarm will stop buzzing and will be set to sound again tomorrow.

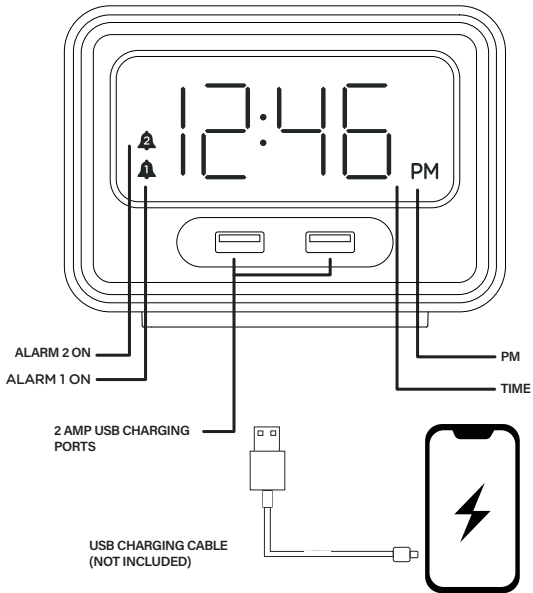


ALARM 1  
ON-OFF/SET

ALARM 2  
ON-OFF/SET


TIME

HR ADJUST

 MIN ADJUST

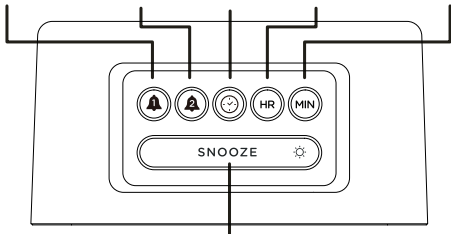

SNOOZE / BRIGHTNESS ADJUST

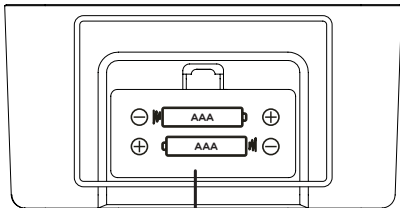 

SETTINGS BACKUP BATTERY COVER  
(BATTERIES NOT INCLUDED)



## **Troubleshooting**

If your clock is not functioning properly, it may be caused by electro-static discharge or other interference.

Unplug the AC/DC jack and remove backup batteries, plug the AC/DC jack to the clock. Reinstall the backup batteries after 10 seconds.

Your clock will reset to default settings and you will need to set it again.

## **Specifications**

Alarm duration: 60 minutes (buzzer)

Snooze duration: 5-60 minutes (buzzer)

Defaults: Time - 12:00AM ; Alarm 1 & 2 - 6:00AM Snooze - 5 minutes

Power: The output of the provided AC/DC adapter is 5V/4A



## Limited 90 Day Warranty Information

---

Koda Electronics (HK) Co., Ltd warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owners manual from our website for reference or email us at [clocks@hellocapello.com](mailto:clocks@hellocapello.com) for additional troubleshooting assistance. Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, Koda will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. The product must include proof of purchase, including date of purchase.

### **Before returning this product for service:**

1. Contact customer service to receive a Return Authorization number (RA#).
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of original date of purchase, if within the warranty period.
4. Write issued RA# on the top of shipping box.
5. Ship the package from shipping company of your choice, prepaid and insured, to the Koda Service Center address supplied by the Customer Service Representative. Be sure to save your tracking number

### **Disclaimer of Warranty**

This warranty is valid only if the product is used for the purpose for which it was designed. It does NOT cover:

- (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons;
- (ii) cracked or broken cabinets, or units damaged by excessive heat;
- (iii) damage to digital media players;
- (iv) the cost of shipping this product to the Consumer Repair Department.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will Koda or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your Capello product.

---

**For customer support, please e-mail us at: [clocks@hellocapello.com](mailto:clocks@hellocapello.com)**

**Questions? Visit [www.hellocapello.com](http://www.hellocapello.com)**

# Important Safety Instructions

1. Read these Instructions.
  2. Keep these Instructions.
  3. Heed all Warnings.
  4. Follow all instructions.
  5. Do not use this apparatus near water.
  6. Clean only with a dry cloth.
  7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  9. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  11. Only use attachments / accessories specified by the manufacturer.
  12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
  13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel.
- Service is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be accessible.



"Sharp edges" or equivalent text

"Do not touch" or equivalent text

## **Product Care**

1. Place your clock away from areas with direct sunlight, excessive heat or moisture.
2. Protect your furniture when placing your clock on a natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
3. Clean your clock with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzine, thinner or similar materials can damage the surface of the unit.
4. Do not use old or used battery in your clock.
5. If the clock is not to be used for over a month or longer, remove the battery to prevent possible corrosion. If the battery compartment become corroded or dirty, clean the compartment and replace with new battery.

## **Supplier's Declaration of Conformity**

Product Name: Sleep & Charge

Model: LMD14WDWHT / LMD14BLK

Responsible party: BIA Electronics, LLC. 107E Beacon Street, Ste. A  
Alhambra, CA 91801 email: [support@lumoday.com](mailto:support@lumoday.com)

## **FCC Disclaimer**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

---



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

---



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

---

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

**ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.**

---

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**