

# **QUICK START GUIDE**



### What's in the box




















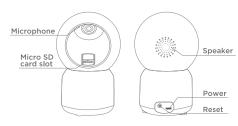

### Description

DC 5V 1A

Power

Status light solid on: the camera is offline

linking red light: awaiting WiFi connection (faster blinking)

Blue light solids on: camera running correctly

Blinking blue light: currently connecting (faster blinking)

Micro SD Supports local Micro SD card storage (Max.128G)
card slot

Reset Press and hold for 5 seconds with processet the camera.


### Install



1 Use the included mounting bracket to fix the camera to a clean and flat surface.



2 Or, put the camera on a flat surface.

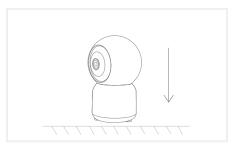

### Connect



#### Download

Home Zone App is available for both iOS and Android OS. Search the name 'Home Zone' in the App Store or Android Market.





#### Set up Router

This device on stop orts 2.4GHz frequency and does not support 5GHz. Please ensure that is set for 2.4GHz band before connecting your device to router.

Placing your mobile device and camera close to the router during setup can speed up the configuration process.



## **Registration process**



**Step 1** Open the Home Zone App, click "Register", read the "Privacy Policy" and click "Agree".



Step 2 Input a legal and valid Mobile number or Email address and click "Continue". Input Verification Code, then log in the App.



# **QR Code Configuration**



#### Getting Started

- Please follow the instructions and make sure the passwords are inputted correctly.
- 2. If the device has already been added to an account, be sure the device is removed from the previous account first before pairing to the new account.

#### Process

- Step 1 Open the App, click "+" on the top right corner, or "Add Device".
- Step 2 Select "Smart Camera". Power the device on and make sure the red light indications lashing quickly.

If the red light indice with the need lashing quickly, reset the device using the last ed pin.



# Step 3 Input WiFi password and click "Confirm". Be sure chosen network is 2.4GHz record and click "Continue".

Face QR code in front of the camer you hear a prompt tone. You may have to adjust the distance between QR code and camera if prompt tone is not heard.




Step 4 Click "I heard the prompt" when the device makes the prompt noise and wait for the connection to complete. The independent on the camera will be solid blue once pairing is considered.



Step 5 Once complete, you can edit the device name on the App and access the device menu.



### **FCC**

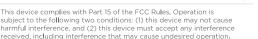

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### FAO



- Q: The device cannot be previewed properly.
- A: Check whether the network is normal and place the camera closer to the router. Reset the device and add again if problem persists.
- Q: Why is it still in the list of devices after resetting?
- A: Resetting the device only resets the network configuration of the camera. Remove the device through the App menu to remove device from App account.
- Q: How do you connect the camera to another router?
- A: First remove the device on the App. Reset the device by pressing the reset button with the pin and then configure the device again by the App.
- Q: Why doesn't the device identify the Micro SD card?
- A: It is recommended to insert the Micro SD card when the device is powered off. Check whether the Micro SD card format is FAT32 and if the card can be recognized by another device.
- Q: Why can't I receive App notifications on my mobile device?
- A: Please confirm that the App is running properly on the phone and the notifications have been enabled for the App on the mobile device.

### **Functions**



Screenshot	Save screenshots of live view to mobie device
Record	Save recordings of live view to mobile device
<b>Q</b> Talk	Enable microphone for one-way or two-way talk
S911 Emerge	Dial 911 for emergencies
Event Hi	View saved recordings on local storage (Requires Micro SD Card)
- <u>O</u> - Alarm Setting	Customize activity detection settings.
Direction	Control pan/tilt direction for camera head.
Cloud Sto	Subscribe to cloud storage package.
0	wors with alexa
•••	works with Hey Google



#### Scan below for link:



homezonesecurity.com support@homezone-usa.com US: +1 888-303-7647

# Why Register?

- · Receive your extended warranty
- · Get professional warranty support
- · Be the first to hear the latest product news.
- Get exclusive deals delivered to you email.

# Get exclusive offers and deals when you subscribe!

Thank you for choosing Home Zone Security! We are here to support you every step of the way.

Please be sure to contact our customer support for troubleshooting and register your product for additional benefits. Products must be sold by an authorized reseller or distributor to be valid.

Distributed by Horizon Marketing Group, LLC 5805-C Peachtree Corners East Norcross, GA 3000 Made in China