



www.qfxusa.com

Follow Us



QFXUSA.COM



R-37

User Manual for the R-37 Portable Speaker



R-37

1. TELESCOPIC ANTENNA
2. BAND SWITCH
3. TUNING KNOB
4. VOLUME CONTROL
5. LIGHT ON/OFF BUTTON
6. BATTERY COMPARTMENT
7. HEADPHONES JACK
8. SOLAR PANEL
9. DC 5V INPUT / CHARGE
10. CHARGE INDICATOR LIGHT
11. POWER INDICATOR LIGHT
12. USB SLOT
13. TF SLOT
14. PREV/REW BUTTON
15. NEXT/F.F BUTTON
16. PLAY/PAUSE BUTTON
17. REPEAT BUTTON
18. LED LIGHT
19. SPEAKER
20. HAND STRAP
21. USB 5V OUTPUT JACK
22. DC 5V INPUT/ CHARGE

1. ANTENNE TÉLESCOPIQUE
2. INTERRUPTEUR DE BANDE
3. BOUTON DE RÉGLAGE
4. CONTRÔLE DU VOLUME
5. BOUTON LUMIÈRE ON / OFF
6. COMPARTIMENT DE BATTERIES
7. PRISE DE CASQUE
8. SOLAIRE
9. ENTRÉE / CHARGE DC 5V
10. VOYANT INDICATEUR DE CHARGE
11. VOYANT INDICATEUR DE PUISSANCE
12. FENTE USB
13. FENTE TF
14. BOUTON PREV / REW
15. BOUTON SUIVANT / F.F
16. TOUCHE PLAY / PAUSE
17. BOUTON DE RÉPÉTITION
18. LUMIÈRE LED
19. ORATEUR
20. SANGLE MAIN
21. PRISE DE SORTIE USB 5V
22. ENTRÉE / CHARGE DC 5V

1. ANTENA TELESCÓPICA
2. INTERRUPTOR DE BANDA
3. MANDO DE SINTONIZACIÓN
4. CONTROL DE VOLUMEN
5. BOTÓN DE ENCENDIDO / APAGADO DE LUZ
6. COMPARTIMIENTO DE BATERÍA
7. ENCHUFE DE AUDÍFONOS
8. PANEL SOLAR
9. DC 5V ENTRADA / CARGA
10. LUZ INDICADORA DE CARGA
11. LUZ INDICADORA DE POTENCIA
12. RANURA USB
13. TF SLOT
14. BOTÓN PREV / REW
15. BOTÓN SIGUIENTE /F.F
16. BOTÓN PLAY / PAUSA
17. BOTÓN DE REPETICIÓN
18. LUZ LED
19. ALTAVOZ
20. CORREA DE MANO
21. TOMA DE SALIDA USB 5V
22. DC 5V ENTRADA / CARGA

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth.

Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.

Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

**ATTENTION**

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.

Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

Questions? Comments? Contact Us Anytime

Preguntas? Comentarios? Contáctenos en cualquier momento
Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

Controls

- Slide the function switch (2), and then turn the tuning knob (3) to receive different stations from AM/FM/SW1-4.
- When listening to the FM stations, please pull out the antenna and change the length to make the listening clear.
- When listening to the AM stations, please change the radio's position until you receive the best signal.

USB or TF Playback

- Set the function selector to "MP3/BT" (2)
- Insert a USB flash drive or a TF card with MP3 format music, the unit will play automatically.
- Press PAUSE/PLAY button (16) to hold the playback, press it again to continue the playback. Press the REPEAT button (17) to repeat the song playing, press again to cancel repeat function. Press the REWIND button (14) to select the previous song. Press the FORWARD button (15) to play the next song.

Bluetooth Play Instructions

- 1.Slide the function switch to MP3/BT (2) position
- 2.After listening to the bluetooth "beep" sound;
- 3.Open the mobile device's Bluetooth settings to search and connect "R-37", when successfully connected a "ding dong" sound will play.
- 4.After the success of the mobile device pairing, open and play the music directly from your mobile device.

Charge your Mobile Device

- The charge time varies based on the mobile device variety.
- If using USB 5V Output Jack (21), to charge your mobile device, you must switch to Output (5).
 - Charging can also be properly done with the DC 5V Output Jack (21).

Note

- This model includes built in rechargeable battery.
- In order to prolong battery life and product normal use, charging time please charge for 6-8 hours.
- Put 18650 battery into battery compartment (6) paying careful attention to the polarity.



1. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

2. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

3. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

4. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable

5. No naked flame sources, such as lighted candles, should be placed on the apparatus.

6. Attention should be drawn to environmental aspects of battery disposal.
CURRENT 1600mA POWER 6W

Controles

- Resbale el interruptor de función (2) y luego gire el botón de sintonización (3) para recibir diferentes estaciones de AM / FM / SW1-4.
- Cuando escuche las estaciones de FM, extraiga la antena y cambie la longitud para que la escucha sea clara.
- Cuando escuche las estaciones de AM, cambie la posición de la radio hasta que reciba la mejor señal.

Reproducción USB o TF

- Ajuste el selector de funciones a "MP3 / BT" (2)
- Inserte una unidad flash USB o una tarjeta TF con música en formato MP3, la unidad se reproducirá automáticamente.
- Presione el botón PAUSE / PLAY (16) para mantener la reproducción, presiónelo nuevamente para continuar la reproducción. Presione el botón de REPETICIÓN (17) para repetir la reproducción de la canción, y para cancelar la función de repetición presione el botón otra vez.
- Presione el botón REBOBINAR (14) para seleccionar la canción anterior. Presione el botón de AVANCE (15) para reproducir la siguiente canción.

Instrucciones de Reproducción de Bluetooth

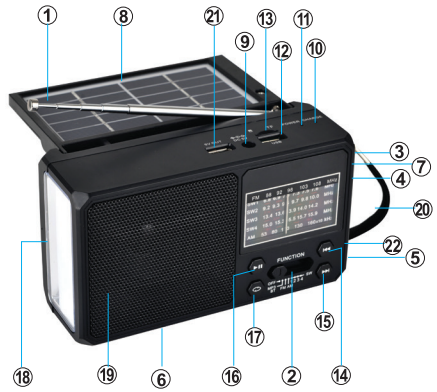 
1. Resbale el interruptor de función a la posición MP3 / BT (2)
2. Resbale de escuchar el sonido "bip" del bluetooth;
3. Abra la configuración de Bluetooth del dispositivo móvil para buscar y conectar "R-37", cuando se conecte con éxito se reproducirá un sonido "ding dong".
4. Después del éxito del emparejamiento del dispositivo móvil, abra y reproduzca la música directamente desde su dispositivo móvil.

Cargue su Dispositivo Móvil

- El tiempo de carga varía según la variedad de dispositivos móviles.
- Si utiliza un conector de salida USB 5V (21), para cargar su dispositivo móvil, debe cambiar a Salida (5).
- La carga también se puede realizar correctamente con un conector de salida DC 5V (21).

Nota

- Este modelo incluye una batería recargable incorporada.
- Para prolongar la vida útil de la batería y el uso normal del producto, el tiempo de carga se carga durante 6-8 horas.
- Batería 18650 en el compartimento de la batería (6)



1. No instale este equipo en un espacio cerrado o empotrado, como una estantería para libros o una unidad similar, y sigue siendo un pozo de condiciones de ventilación en un sitio abierto. La ventilación no debe impedirse cubriendo el aberturas de ventilación con elementos como periódicos, manteles, cortinas, etc.

2. ADVERTENCIA: Para reducir el riesgo de incendio o descarga eléctrica, no exponga este aparato a la lluvia ni a la humedad. El aparato no debe exponerse a goteos o salpicaduras y a que los objetos llenos de líquido, como jarrones, no deben colocarse sobre aparatos.

3. ADVERTENCIA: La batería (batería o baterías o paquete de baterías) no debe exponerse a calor excesivo como la luz del sol, el fuego o similares.

4. ADVERTENCIA: El enchufe de red se utiliza como dispositivo de desconexión, el dispositivo de desconexión debe permanecer fácilmente operable

5. No se deben colocar sobre el aparato fuentes de llamas vivas, como velas encendidas.

6. Se debe prestar atención a los aspectos ambientales de la eliminación de baterías.
CORRIENTE 1600mA POTENCIA 6W

Contrôles

- Faites glisser le commutateur de fonctions (2), puis tournez le bouton de syntonisation (3) pour recevoir différentes stations de AM / FM / SW1-4.
- Lors de l'écoute des stations FM, veuillez retirer l'antenne et modifier la longueur pour rendre l'écoute claire.
- Lorsque vous écoutez les stations AM, veuillez modifier la position de la radio jusqu'à ce que vous receviez le meilleur signal.

Lecture USB ou TF

- Réglez le sélecteur de fonction sur "MP3 / BT" (2)
- Insérez une clé USB ou une carte TF avec de la musique au format MP3, l'appareil jouera automatiquement.
- Appuyez sur le bouton PAUSE / PLAY (16) pour maintenir la lecture, appuyez à nouveau pour continuer la lecture. Appuyez sur le bouton REPEAT (17) pour répéter la lecture du morceau, appuyez à nouveau pour annuler la fonction de répétition. Appuyez sur le bouton REWIND (14) pour sélectionner le morceau précédent. Appuyez sur le bouton FORWARD (15) pour lire la chanson suivante.

Instructions de lecture Bluetooth

1. Faites glisser le sélecteur de fonction en position MP3 / BT (2)
2. Après avoir écouté le "bip" bluetooth;
3. Ouvrez les paramètres Bluetooth de l'appareil mobile pour rechercher et connecter le "R-37". Une fois connecté, un son "ding dong" sera lu.
4. Après le succès de l'appairage des appareils mobiles, ouvrez et écoutez la musique directement depuis votre appareil mobile.

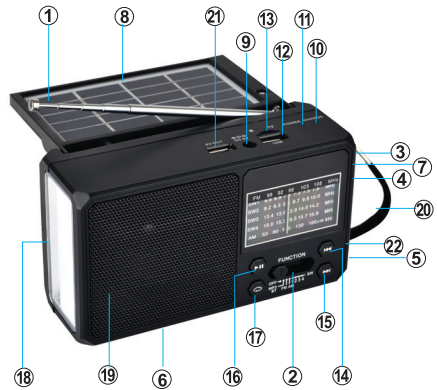 
Rechargez votre appareil mobile

Le temps de charge varie en fonction de la variété d'appareils mobiles.

- Si vous utilisez la prise de sortie USB 5V (21), pour charger votre appareil mobile, vous devez basculer sur la sortie (5).
- La charge peut également être effectuée correctement avec une prise de sortie DC 5V (21).

Remarque

- Ce modèle comprend une batterie rechargeable intégrée.
- Afin de prolonger la durée de vie de la batterie et l'utilisation normale du produit, le temps de charge doit être chargé pendant 6 à 8 heures.
- Placez la batterie 18650 dans le compartiment à piles (6) en faisant très attention à la polarité.



1. N'installez pas cet équipement dans un espace confiné ou encastré tel qu'une bibliothèque ou une unité similaire, et restez des conditions de ventilation bien en site ouvert. La ventilation ne doit pas être entravée en recouvrant les ouvertures de ventilation avec des articles tels que journaux, nappes, rideaux, etc.

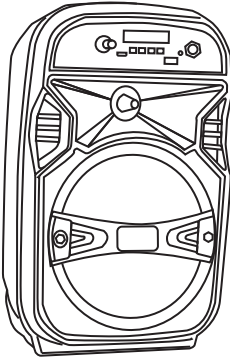 
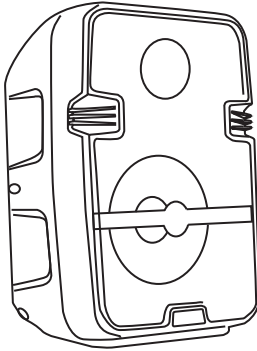 
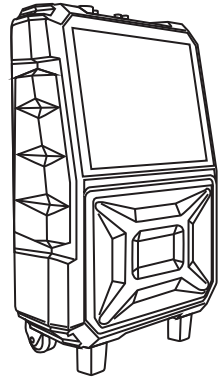 
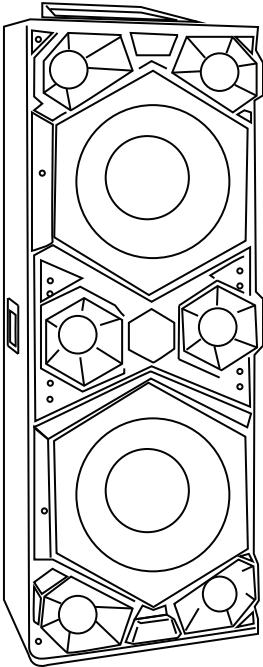 
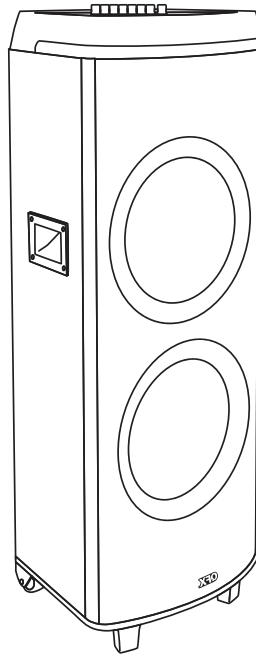 
2. AVERTISSEMENT : Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie ou à l'humidité. L'appareil ne doit pas être exposé à des gouttes ou des éclaboussures et que des objets remplis de liquides, tels que les vases ne doivent pas être placés sur des appareils.

3. AVERTISSEMENT: La batterie (batterie ou batteries ou bloc-batterie) ne doit pas être exposée à une chaleur excessive comme le soleil, le feu ou autre.

4. AVERTISSEMENT: La fiche secteur est utilisée comme dispositif de déconnexion, le dispositif de déconnexion doit rester facilement opérable

5. Aucune source de flamme nue, telle que des bougies allumées, ne doit être placée sur l'appareil.

6. L'attention doit être attirée sur les aspects environnementaux de l'élimination des batteries. PUISSANCE ACTUELLE 1600mA 6W

BT-60**BT-65****KAR-927****E-1500****LCS-120**

**IF YOU
ENJOY
YOUR
PBX-146
CHECK OUT
THESE
OTHER
MODELS!**



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your R-37 Journey!
Tag us **@QFXUSA** to share your stories.