

5280387

### High Capacity Kitchen Scale with Container and Lid

Thank you for purchasing a Taylor® digital kitchen scale. Your Taylor® scale is an example of superior design and craftsmanship. Please read this instruction manual carefully before use. Keep these instructions handy for future reference.

#### Battery Installation

1. Use 3 AAA batteries (included). Remove any plastic wrap from the batteries before proceeding). Always replace all batteries at the same time; do not combine old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries. Do not dispose of batteries in fire, as batteries may explode or leak. Remove the batteries if the scale will not be used for a long period of time.
2. Remove the battery compartment cover on the bottom of the scale.
3. Place the batteries into the battery compartments according to the "+" and "-" polarity symbols in the battery compartment.
4. Replace the battery compartment cover.

**NOTE:** Please recycle or dispose of batteries per local regulations.

**WARNING:** Batteries may pose a choking hazard. As with all small items, do not let children handle batteries. If swallowed, seek medical attention immediately.

**PRECAUTION:** Do not dispose of batteries in fire. Batteries may explode or leak. Remove the batteries if the scale will not be used for a long period of time.

#### Low Battery

Your Taylor® scale is equipped with a low battery indicator. "Lo" will appear on the screen when the batteries need to be replaced.

#### General Weighing Operation

1. Place the scale on a hard, level surface.
2. Press the "TARE/⏻" knob to turn the scale on. The display will turn on and then show zero when it is ready for use.
3. Your scale weighs in pounds/ounces (lb oz), grams (g), fluid ounces (fl.oz), and milliliters (mL). Turn the knob to change the units of measurement.
4. Place the item to be weighed on the center of the platform. The weight will display. As you add weight, the weight displayed increases.
5. To turn the scale off, press and hold the "TARE/⏻" button until the scale turns off.

#### Tare Operation

You may wish to weigh ingredients in the included container. In this case, you will need to tare, or offset, the weight of the container so that only the weight of the ingredients is displayed.

1. Use the included container or choose one that will safely balance on the platform without tipping or falling. Do not use a heavy container, as this might reduce the maximum capacity of the scale.
2. While the scale is off, place the empty container on the scale platform. Turn the scale on. The display will turn on and then show zero. The weight of the container has been zeroed out.
3. Add the ingredient to be weighed. The weight of the ingredient alone will display.
4. The weight of additional ingredients may be tared out as well. For example, if a recipe calls for ½ lb rice and ½ lb beans, place the rice into the container. Once the correct amount of rice is weighed, press "TARE/⏻" to reset the display to zero. Add the ½ lb of beans. Both ingredients have been accurately weighed in the same container.
5. When weights have been tared out, the display will show a negative number when the items are removed from the scale. To reset the scale back to zero for a new measurement, press "TARE/⏻" to reset the display to zero.

### HOLD Function

This scale also has a **HOLD** feature that will lock the currently displayed weight onto the display even after the food or container is removed. To activate, place item to be weighed on the platform and then press the "**HOLD**" button. The "**HOLD**" icon will appear on the display and the weight will be locked. The item can now be removed from the platform and the weight will remain displayed. Press the "**HOLD**" button again to unlock the weight and reset the display to zero.

### Multipurpose Container with Lid

This scale includes a premium, straight-sided 304 stainless steel container that is extra-durable with rolled edges and a 0.6mm thickness. The container is refrigerator, freezer, oven and top rack dishwasher safe. The snap fit lid can be easily cleaned in the top rack of the dishwasher.

### Precautions

1. Clean exposed scale parts with a soft, slightly damp cloth. To remove stains, use a mild soap. Never use detergents, excess water, treated cloths, harsh cleaning agents, or sprays. Avoid contact with acids, such as citrus juices. DO NOT immerse the electronic scale in water or wash in a dishwasher. Note: The stainless steel container and lid are both top rack dishwasher safe.
2. Do not tamper with the scale's internal components. Doing so will invalidate the warranty on this unit and may cause damage. The scale contains no user-serviceable parts.
3. Although your scale is designed to be maintenance-free, it contains sensitive electronic parts. Avoid rough treatment. Treat it with care to ensure the best performance.
4. This scale is intended for home/consumer use only. It is not intended for commercial or medical use.
5. This scale is designed to read weights up to 22lb x 0.1oz / 10000g x 1g, 352floz x 0.1floz / 10000mL x 1 mL. To prevent damage, do not place more than 22lb x 0.1oz / 10000g x 1g / 352 floz x 0.1floz / 10000mL x 1mL on it.
6. Do not store scale where you store cleaning chemicals. The vapors from some household products may affect the electronic components of your scale. Do not store scale on its side.
7. This scale is an extremely sensitive weighing device. In order to prevent run down of the batteries, do not store anything on the scale.
8. Do not dispose of batteries in fire. Batteries may explode or leak. Do not mix old and new batteries. Do not mix Alkaline, carbon-zinc (standard) or Nickel-Cadmium (rechargeable) batteries. Remove the batteries if the scale will not be used for a long period of time.
9. "UnSt" = Unstable Warning. Should "UnSt" appear on the display, this indicates the scale is unstable. Place the scale on a hard, level surface during use.
10. Should "O-Ld" appear on the display during a weighing, this indicates that the maximum weighing capacity has been exceeded. Remove the weight immediately; otherwise, permanent damage could occur.

**Party issuing Supplier's Declaration of Conformity & Responsible party – U.S. Contact information:**

Taylor Precision Products  
2311 W. 22<sup>nd</sup> Street, Suite 200  
Oak Brook, IL 60523 USA

**Equipment:**

**Product Name:** Kitchen Scale

**Model No.:** 5280387

**Trade Name:** Taylor

We declare under our sole responsibility that the above referenced product has been tested according to FCC requirements and this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **One (1) Year Limited Warranty**

Taylor® warrants this product to be free from defects in material or workmanship (excluding batteries) for one (1) year for the original purchaser from date of retail purchase. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair. If service is required, do not return to retailer. Should this product require service (or replacement at our option), please pack the item carefully and return it prepaid, along with store receipt showing the date of purchase and a note explaining reason for return to:

**Taylor Precision Products  
2220 Entrada Del Sol, Suite A  
Las Cruces, New Mexico 88001 USA  
[www.taylorusa.com](http://www.taylorusa.com)  
Email: [taylorusa@lifetimebrands.com](mailto:taylorusa@lifetimebrands.com)**

There are no expressed warranties except as listed above. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For additional product information, or warranty information outside the USA, please contact us through [www.taylorusa.com](http://www.taylorusa.com).

© 2021 Taylor Precision Products, a division of Lifetime Brands Inc. All rights reserved.

Made to our exact specifications in China.  
Not legal for trade.