

HOW TO USE:

1. Press 'MIN' button to set minutes and 'SEC' button to set seconds.
2. Press 'START/STOP' to start countdown.
3. The time can be paused and restarted by pressing 'START/STOP'.
4. The alarm beeps when time is up, silence the timer by pressing the 'START/STOP' button. The alarm will reset to the last programmed time.
5. Press 'MIN' and 'SEC' together to reset the time to 00:00.
6. To count up: When the display is at 00:00 press 'START/STOP' to begin timing.

NOTE:

A plastic strip used to prevent battery drain during shipping. Pull gently to remove before use. There is also a cling over the digital display, remove before use.

BATTERY PRECAUTIONS:

1. Batteries may pose a choking hazard, do not let children handle batteries.
2. Do not dispose of batteries in fire, they may explode or leak.
3. Remove batteries if product will not be used for a long period of time.
4. Always replace all batteries at the same time; do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.
5. Recycle or dispose of batteries per local regulations.

BATTERY REPLACEMENT:

Using a coin, turn the battery cover counterclockwise to open. Remove battery and replace with a new battery '+' side up. Replace battery cover.

CLEANING AND CARE:

Handwash only. Do not immerse in water or put in dishwasher.

ONE (1) YEAR WARRANTY (EXCLUDING BATTERIES)



BATTERY
INCLUDED



MERCURY FREE
BATTERY

