

MINI DIGITAL CLOCK

 


Model: 513-148 / 513-55657

DC: 122822

POWER UP

1. Insert 1 “AAA” battery into your Clock.
2. Enter the Settings Menu to adjust Time & Temperature settings.
3. Position on a wall, cabinet, or desktop.

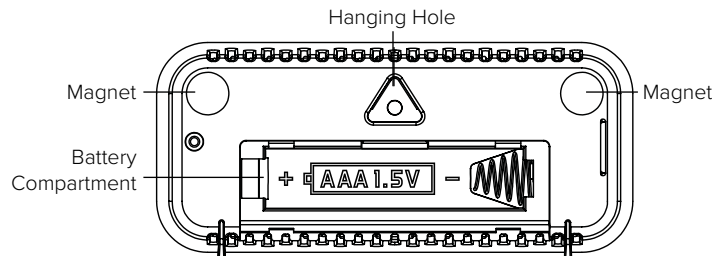

SETTINGS MENU

Important: Press and release or hold than release one button at a time when setting your clock.

1. Press the button so the Time is displayed.
2. Hold the button to enter the Settings Menu.
3. Press the button to adjust the flashing values. Hold to adjust quickly.
4. Press the button to confirm adjustments and move to the next item or exit.

Settings Menu Order:

12/24 Format • Hour • Minutes • Fahrenheit / Celsius •
Comfort Indicator ON/OFF

COMFORT INDICATOR

Using the humidity reading, your Comfort Indicator will quickly let you know if your home is too wet, too dry, or comfortable. This can be turned off in the Settings Menu.



1% to 35%

36% to 55%

56% to 75%

76% to 99%

CUSTOM DISPLAY MODES

Press and release the button to display what is important to you: Time, Alarm Time, or Temperature and Humidity.

 


HI/LO READINGS





The HI/LO Readings are daily values that reset automatically at midnight each day.

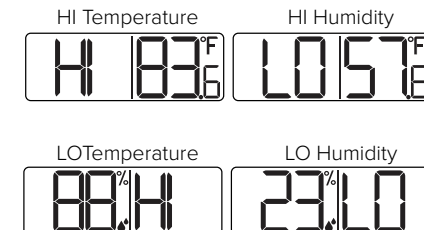Press the button to view your HI/LO Readings.

- HI Temperature
- LO Temperature
- HI Humidity
- LO Humidity.







 
TIME ALARM

1. Press the  button so Alarm Time shows. There will be an “A” in the lower right corner.
2. Hold the  button to enter the Alarm Settings Menu.
3. Press the  button to adjust the flashing values. Hold to adjust quickly.
4. Press the  button to confirm adjustments and move to the next item or exit.

Note: Alarm will be active when set.


Activate/Deactivate Alarm:

1. Press the  button so Alarm Time shows.
2. Press the  button to activate or deactivate the alarm.
The Alarm Icon  will show when alarm is active.
3. Press the  button to return to time or temperature display.

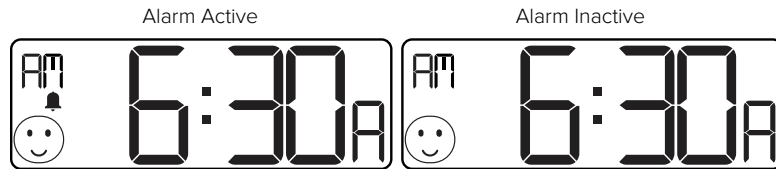

Note: Press any button to stop a sounding alarm for 24 hours. If no buttons are pressed, the alarm sound will turn off automatically after 2 minutes.

LOW BATTERY INDICATOR

When the Battery Indicator  shows above the Comfort Icon, replace the clock’s battery.

SPECIFICATIONS

Temperature Range: 32°F to 99°F (0°C to 37°C)

Humidity Range: 10% to 99% RH

Power Requirements: 1 “AAA” LR3 Battery (not included)

Battery Life: Over 12 months with reputable battery

Dimensions: 3.30” L x 0.90” W x 1.49” H (8.39cm L x 2.42cm W x 3.79cm H)

WE’RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based in La Crosse, WI. Our associates are available Mon-Fri: 8am-6pm CST.

Phone: 1.608.782.1610

Email: bit.ly/contact_techsupport

Self-Help: bit.ly/513-148_support



JOIN THE CONVERSATION

Ask questions, watch setup videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Facebook, Instagram, YouTube and Twitter.



CA WARNING:

This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to: www.P65Warnings.ca.gov

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.
La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty

CARE + MAINTENANCE

Battery replacement instruction:

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.