



Atari Gamestation Pro Firmware Update Instructions

NOTE: Please follow each step of the below instructions carefully to ensure a successful firmware update.


- Download the latest firmware update package.
- Unzip the downloaded zip file (files must be unzipped or extracted after downloading).
NOTE: You will need a program such as [WinZip](#) or [7-Zip](#) to extract the Zip file.
- Open the “1. Driver” folder.
- Double click on the “DriverInstall – Click Me” application. If you get any popups asking for permission, allow them.
- The driver installer window will pop up.

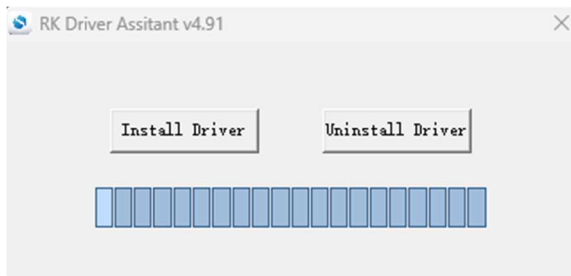


- Click on Install Driver.
- Once completed, press OK and exit out of the program.
- Next, open the “2. Firmware Updater” folder.
- Double click on “Firmware Updater – Click Me”. If you get any popups asking for permission, allow them.
- A program box labeled RKDevTool v2.72 will open.

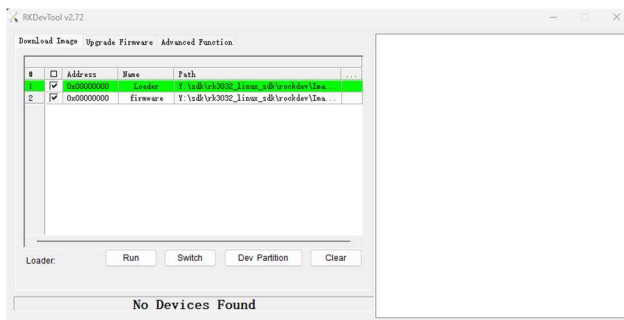

- Click on the small box to the right of the filename of the default loader.

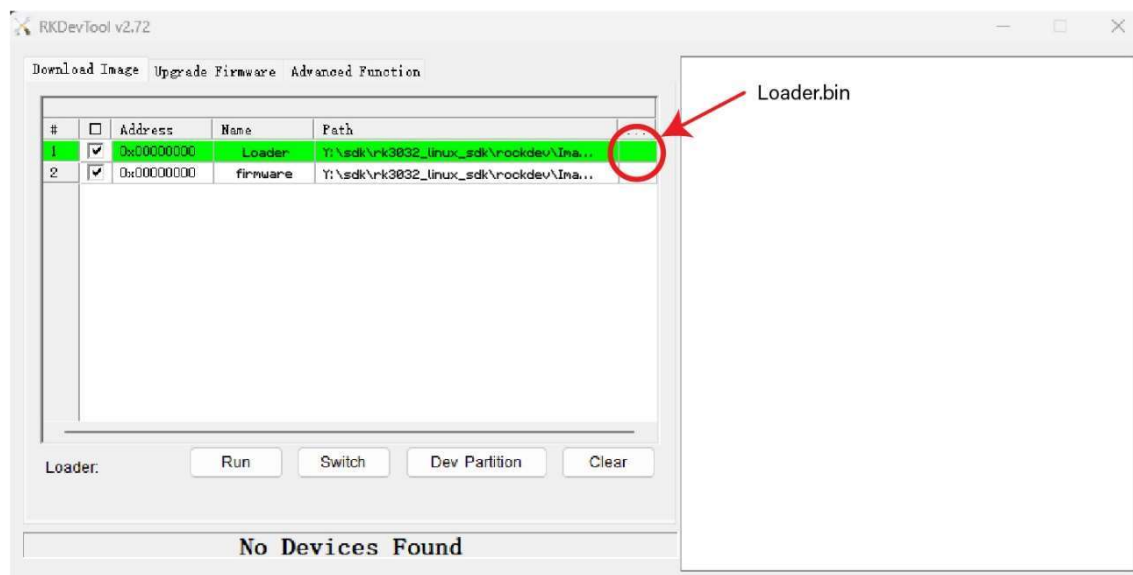


- A window will open, find the “3. Firmware” folder and choose the “Loader.bin” file.
- Click on the small box to the right of the filename of the default firmware.

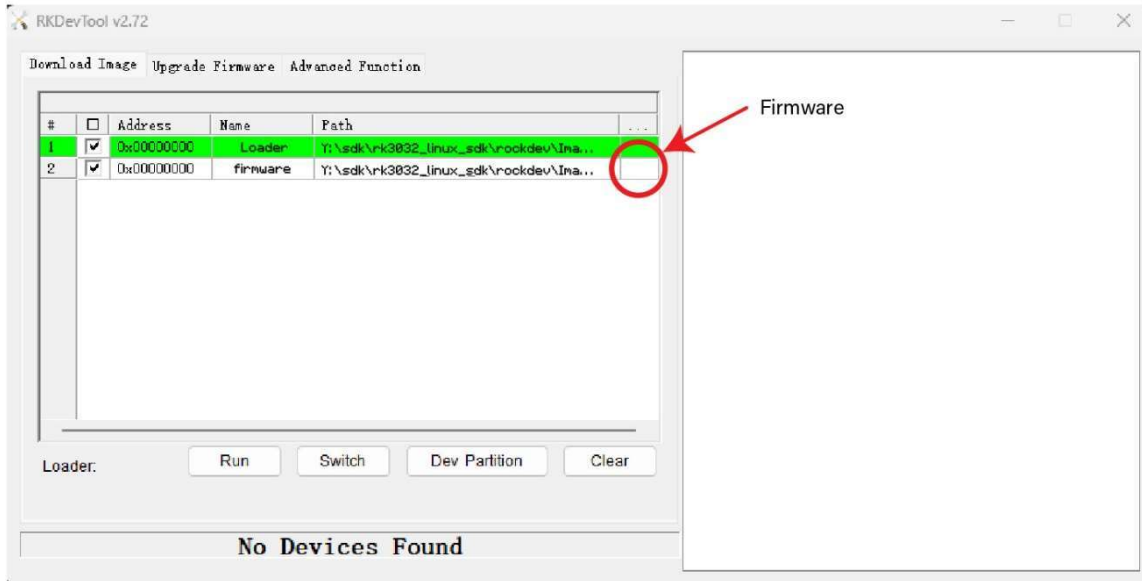


- A window will open, find the “3. Firmware” folder and choose the Firmware file. **NOTE: Make sure you choose the Firmware file to load and not the Loader.bin file.**
- Plug one end of a USB-C cable into your computer and the other end into the 5V IN power port on the back of your Atari Gamestation Pro console.
NOTE: Make sure that the USB-C cable has data support. The included USB-C cable does not have data support.
- Make sure that the console is turned off.
- The RESET and power buttons on the console must be pushed simultaneously until “Found One MASKROM Device” shows up at the bottom of the program box:
 - a. Insert a paper clip or pin into the RESET port, push lightly until you hear a click, continue to hold it down.



- b. While you are doing that, press and hold the power button until “Found One MASKROM Device” shows up at the bottom of the program box.

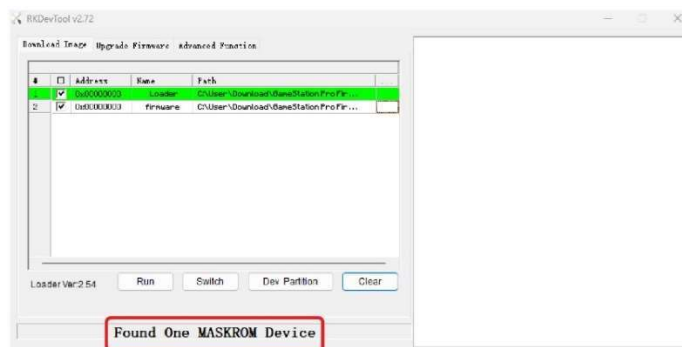

- RESET and power buttons can be released.
- Press Run.
- The update will start to run, and you can see the percentage of completion on the right side of the program box. **NOTE: Do not power off or unplug the console while the update is running.** Once the download is completed, you will see the following message on the program box.

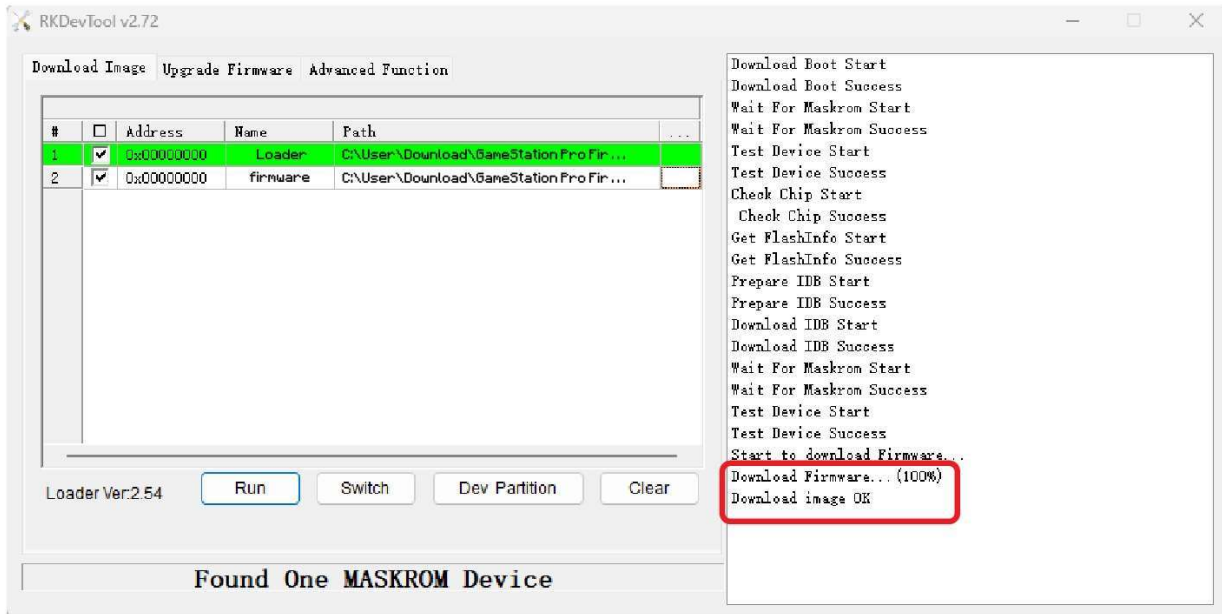

- Turn off the power on the console, unplug and enjoy your new update!

Troubleshooting

Q: Why is the “Found One MASKROM Device” not showing on the bottom of the program box?

A: Try the following:

- Use a different cable.
- Make sure the RESET and power buttons are pressed and held down simultaneously until “Found One MASKROM Device” shows.
- Make sure the console is powered off.

Q: Why can I not run the downloaded files?

A: Try the following:

- Make sure you unzip the downloaded file before running.
- Make sure you are using a PC with Windows 10 or above (Mac is not supported).