

4.1 Duplicate Mode to Extend Mode for Windows

-Right click on your desktop while Duex Float Is connected and choose "Display Setting"

Then you should either see this screen or the one at

If you have a duplicate screen and want to change it to tend mode, click on the "Duplicate these displays"



-Then click "Apply"

-Now you are in Extend Mode



4.2 Duplicate Mode to Extend Mode for Mac OS

- Click on system preference and go to Displays



Checking the "Mirror Displays" box will switch etween duplicate and extend mode for Duex Float



4.3 Rotate Display and Layout set up for Windows

If you are already in "Extend mode" and want to use Duex Float on the left

1. First click on the 2nd screen icon

change it from "Landscape" to "Landscape" (flipped)"; Choose "Portrait" for Portrait Mode"



Now your screen is upside down and ready on the left with 1 extra step

Move the 2nd display icon from the righ the 1st display by simply "Drag and Drop

-Click "Apply" to finish the setting of the lay



4.4 Rotate Display and Layout set up for Mac OS

To position the display on either left or right, simply drad



To rotate the display, go to the Duex Float display dow and choose the suitable "Rotation" options.



4.5 Change Display Settings to Adjust Content Size for Windows

1. To adjust content size on Duex Float monitor, first click on the number "2" monitor under Display setting.

Scroll down and look for "scale and layout" options



3. Default size of text is set at 125% and user can increase it up to 175% or reduce back to 100% base on user preference.



4.6 Change Display Settings to Adjust Content Size for Mac OS

1. Click System Preferences



2. Click Displays








Center Outside Panel

Technical Information

Model	DUEX FLOAT
Size	15.6 ln
Weight	4 Lbs
Thickness	0.8 ln
Hybrid Signals	Yes
Eye-Care Mode	yes
Auto-Rotation	Yes
Nintendo Switch	Yes
Android Phones	Yes
*Specifications are subject to change without notice.	

DUEX®FLOAT

Portable Laptop Monitor

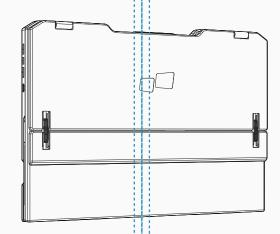



User Guide ▶

5.2 Safety and Handling

entation before setting up the DUEX FLOAT. If any broken or damaged, do not try to open DUEX or attempt to fix it yourself, please contact the ailer, a qualified service technician or email us directly ppropriate conditions, avoid exposure to extreme heat. on a stable surface and keep your DUEX FLOAT in

y cleaner on the screen to avoid an electric transfer on the screen to avoid an electric transfer on the screen to avoid an electric transfer on the screen transfer of the screen tran

when you reverse the position of DUEX FLOAT, decouple ne DUEX FLOAT from the backplane of your laptop, rotate About a vector normal to the backplane, and couple to the backplane of the laptop computer.

UEX FLOAT and accessories contain small parts that nay present a choking hazard to small children, please ep them out of reach from small children.

contain components and radios that emit

FCC COMPLIANCE STATEMENT

Operation is subject to the following two conditions: found to comply with the limits for a Class B digits

and on the user is encouraged to try to cor receiver, 3. Connect the equipment into an outlet on circuit different from that to which the receiver connected. 4 Consult the dealer or an experienradio/TV technician for help

year upon the original date of purchase. Product of

CONTACT@MOBILEPIXELS.US