



MILWAUKEE

VDTS-4400

Desktop CD Stereo System



Instruction Manual

Please read carefully before use and keep for future reference

WARNING

| | | |
|--|--|---|
|  <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product is enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p> | <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> |  <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p> |
|--|--|---|

CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
16. The use of the equipment in moderate climate.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. Do not place open flame sources, such as lighted candles, on the apparatus.
19. The symbol with ~ indicates AC voltage.
20. **CAUTION,** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

| | | |
|---|--|---|
|  | <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> |  |
| <p>AVERTISSEMENT: RISQUE DE CHOC ÉLECTRIQUE-NE PAS OUVRIR.</p> | | |

TABLE OF CONTENTS

| | |
|----------------------------|----|
| FEATURES | 3 |
| SPECIFICATIONS | 3 |
| PRODUCT OVERVIEW | 4 |
| REMOTE CONTROL | 5 |
| SETUP & BASIC OPERATION | 7 |
| USING THE CD PLAYER | 8 |
| CONNECTING TO BLUETOOTH® | 9 |
| USING THE FM RADIO | 10 |
| USING THE AUX IN (LINE IN) | 10 |
| CARE & MAINTENANCE | 11 |
| TROUBLESHOOTING GUIDE | 12 |
| FCC NOTICE | 13 |
| CAUTION ON MODIFICATION | 14 |
| SUPPORT | 14 |

FEATURES

The Milwaukee Desktop Stereo System delivers powerful music playback with a retro style reminiscent of past Stereo Systems. Packed with features including CD & Bluetooth Playback, 25X2 Watts of Power, Fully Functioning VU Meters, and detached Speakers with removable covers, the Milwaukee delivers!

- Built-in CD Player and full function remote control
- Bluetooth In connectivity allows you to stream music from another source up to 33 feet away
- 25 X 2 Watts of Dynamic Stereo Sound
- Digital FM Radio with a backlit display; Wired FM antenna is included
- Fully functioning VU Meters provide a great retro style
- Includes a 3.5mm Aux input and Headphone Jack for additional playback options
- Detached Speakers with removable grills allow for different

 
 
SPECIFICATIONS

| | |
|----------------------------------|--|
| Product Name | MILWAUKEE (Desktop CD Stereo System) |
| FM Frequency Range | 87.5 – 108 MHz |
| FM Station Memory | Up to 20 |
| Bluetooth® Version | V5.1 |
| Bluetooth® Transmission Distance | Up to 33 Feet (10 Meters)* |
| Rated Frequency | 2.4GHz |
| Input | Aux In |
| Output | Headphone x 1 |
| Built-in Speaker | (4"+2"+2") x 2 |
| Power Output | 25W x 2 |
| Power Source | AC/DC 100-240V 50-60Hz 15V/3A |
| Accessories Included | UL Approved Adaptor, Remote Control, User Manual, Quick Set Up Guide |

**Distance may vary depending on any objects or interference between devices.*

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE


PRODUCT OVERVIEW

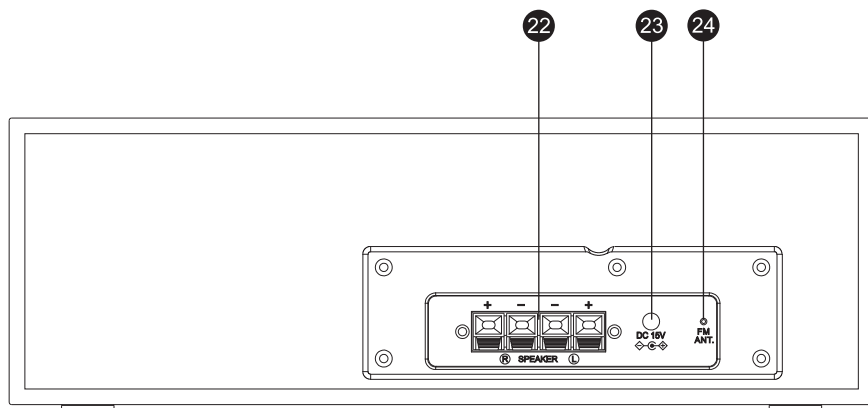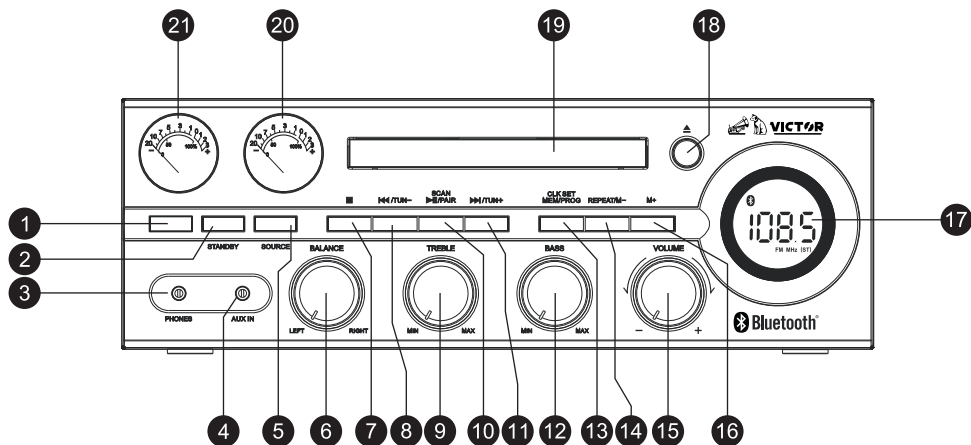

- | | | |
|---------------------|------------------------------|-----------------------|
| 1. IR | 9. TREBLE KNOB | 17. LCD DISPLAY |
| 2. STANDBY | 10. SCAN / ►► / PAIR BUTTON | 18. OPEN/CLOSE BUTTON |
| 3. PHONES JACK | 11. ►► / TUN+ BUTTON | 19. CD COMPARTMENT |
| 4. AUX IN JACK | 12. BASS KNOB | 20. VOLUME (VU) METER |
| 5. SOURCE BUTTON | 13. CLK SET, MEM/PROG BUTTON | 21. VOLUME (VU) METER |
| 6. BALANCE KNOB | 14. REPEAT / M- BUTTON | 22. SPEAKER SOCKET |
| 7. STOP BUTTON | 15. VOLUME KNOB | 23. DC JACK |
| 8. ◀◀ / TUN- BUTTON | 16. M+ BUTTON | 24. FM ANTENNA |

REMOTE CONTROL

 1. FM BUTTON: Set the unit to FM radio mode
2. STANDBY BUTTON: Set the unit to ON/STANDBY
3. CD BUTTON: Set the unit to CD mode
4. PROG BUTTON: CD program playback
5. MEM BUTTON: Radio memory
6. REPEAT BUTTON: Set playback to repeat.
7. TUN- / ◀◀ : Adjust the frequency in FM mode. Skip tracks backward in CD mode.
8. VOL- : Adjust the volume level down
9. CLK SET BUTTON: Set clock timer
10. BT BUTTON: Set the unit to Bluetooth mode.
11. MUTE BUTTON: Mute the unit sound
12. AUX BUTTON: Set the unit to AUX mode.
13. MEM+ BUTTON: Choose the preset location for the corresponding station.
14. MEM- BUTTON: Choose the preset location for the corresponding station.
15. OPEN/CLOSE BUTTON: In CD mode, open and close CD tray.
16. SCAN BUTTON: Scan available FM radio station and store in memory.
17. PLAY / PAUSE: Pause and resume playback
18. TUN+ / ▶▶ : Adjust the frequency in FM mode. Skip tracks forward in CD mode.
19. STOP BUTTON: Stop playback
20. VOL+ : Adjust the volume level up
21. NUMERIC BUTTONS: Direct key in the CD play track no.
22. PAIR BUTTON: Pairing Bluetooth device

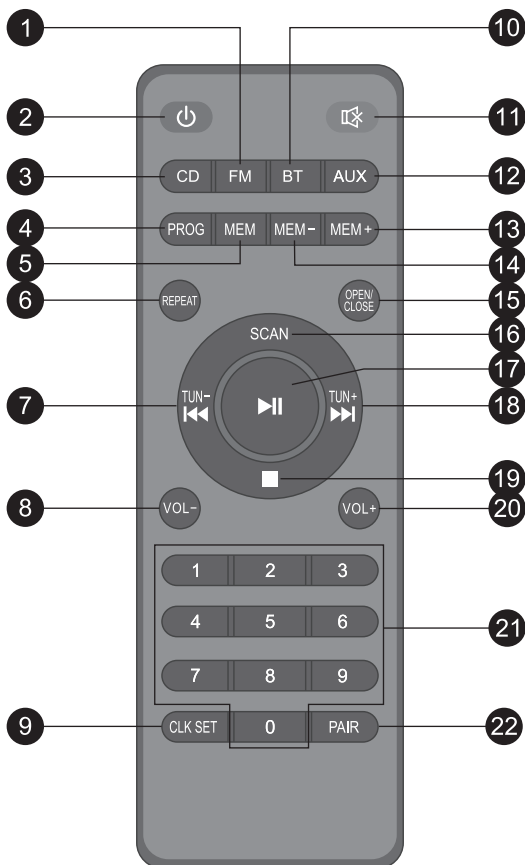

Using the Remote Control

The Remote-Control Unit can operate the unit from about 24 feet. When operating the remote-control unit, point it (30 degrees horizontal and vertical) towards the front panel of the unit.

 
- Even if the remote-control unit is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote-control unit is operated near other appliances which generate infrared rays, or if other remote-control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other appliances may operate incorrectly.

Battery Replacement

If the distance required between the remote-control unit and main unit decreases, the battery is exhausted. In this case, please replace the battery with a new one.

To Replace With a New Battery:

1. Remove the battery compartment cover as per the illustration on the right.
2. Observe the correct polarity and install two AAA size battery.
3. Close the cover.

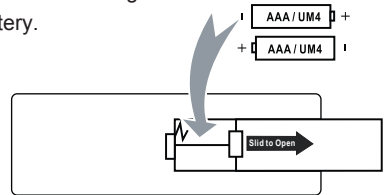

Battery Precautions

- Be sure to insert the battery with correct positive + and negative - polarities.
- Refer to the precautions on the battery labels.
- When the remote-control unit is not to be used for long periods of time (more than a month), remove the battery from the remote control unit to prevent it from leaking. If it leaks, carefully wipe away the liquid inside the battery compartment and replace the battery with a new one.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them into a fire.
- Do not mix old and new batteries.
- Use only the same type of batteries.
- Do not dispose of the batteries in fire, battery may explode or leak.
- Do not recharge a non-rechargeable battery.

SETUP & BASIC OPERATION

Connect to Power Source

1. Plug the small end of the power cord into the POWER Input on the back of the unit, and the large plug into a standard wall power outlet.
2. Press the Power **STANDBY** button to turn on the unit

Powering On the Unit

1. Press the STANDBY button on the unit or remote-control to turn the unit ON.
2. Press the STANDBY button again on the unit or remote-control to turn the unit OFF.

Volume Adjustment

Turn the VOLUME KNOB to adjust the volume. The volume level will be shown in the LCD Display in the top right corner of the unit.

Note: Depending on the type of music/audio output from the unit, the 2 Volume (VU) Meters might not move at lower volumes. In some cases, the volume must be around "#8 or higher" to see very active movement.

Balance Adjustment

Turn the BALANCE KNOB to adjust the volume between the left speaker and the right speaker. The volume of the left speaker and right speaker is equal when the BALANCE knob is in middle.

Treble and Bass Adjustment

Turn the TREBLE KNOB and BASS KNOB to adjust the treble and bass levels.

Connecting the External Speakers

The speaker output sockets are located at the back of the main unit. Speaker input sockets are located at the back of speaker box.

1. Unwrap the included speaker cord, plug one end into the left (L) speaker box and plug the other end into the left (L) speaker socket on the main unit.
2. Unwrap the included speaker cord, plug one end into the right (R) speaker box and plug the other end into the right (R) speaker socket on the main unit.
3. Make sure the speaker cords are not run in areas where they could cause danger.

Note: When leaving the unit unattended for long periods (such as vacations), please disconnect the power plug from the power socket.

FM Antenna

Unwrap the FM antenna and extend it fully. You may need to adjust the position of the antenna to get optimum reception.

Clock Setup

1. Connect a power source, press and hold the **CLK SET** button (Main Unit or Remote Control) more than 2 seconds, the hour digits will blink on the LCD display.
2. Repeatedly press the **◀◀ / TUN-** button or **▶▶ / TUN+** button to set the hour. Press and hold the buttons for fast advance/reverse setting. Note: The PM icon of the LCD DISPLAY will light when the hour is set to PM and AM icon will light when the hour is set to AM
3. Press the **CLK SET** button to confirm and the minute digits will blink.
4. Repeatedly press the **◀◀ / TUN-** button or **▶▶ / TUN+** button to set the minute. Press and hold the buttons for fast advance/reverse setting
5. Press the **CLK SET** button to confirm and complete the setting. The display will stop blinking.

Note: The unit will automatically save the settings and exit the time set mode if you do not press the CLK SET button within 10 seconds.

USING THE CD PLAYER

Using the CD Player

1. Press **SOURCE** button until the display reads "CD" or press CD button on the remote.
2. Press the **OPEN/CLOSE** button to open the CD door.
3. Place a CD onto the CD tray with the printed label facing up (towards you). To close the CD door, press **OPEN/CLOSE** button again.

Note: Remember to remove the CD when you are finished listening.

- To Play a CD When Stopped: Press the **▶II / PAIR** button. The disc will play from track 1 and play indicator appears on the display.
- To Pause a CD While Playing: Press the **▶II / PAIR** button. The disc will pause and play indicator will blink on the display. Press the **▶II / PAIR** button again to resume playback.
- To Stop a CD While Playing: Press the **STOP** button.
- To Change Tracks: Press **◀◀ / TUN-** button or **▶▶ / TUN+** button.
- To Search During Playback: Press and hold the **◀◀ / TUN-** button or **▶▶ / TUN+** button until the desired section is located. While searching, sound will be played at a distorted speed. Playback returns to normal when the button is released.

Repeating Playback of a Track or CD

Press the REPEAT button on the main unit or remote control to circle the play mode:

- Repeat 1: Press the **REPEAT** button on the main unit or remote control once and the current track will be played continuously
- Repeat All: Press the **REPEAT** button again and ALL tracks on the current disc will be played continuously.
- Normal playback: Press **REPEAT** button again to resume normal playback.

Note: Pressing the **STOP** button will stop playback and the play mode will be cleared.

Program Play

Program play must be set when the CD is stopped. You can program up to 20 tracks in any order.

1. Press **■ STOP** button and then press MEM/PROG button on the main unit or press **PROG** button on the remote control.
2. Press **◀◀ / TUN-** button or **▶▶ / TUN+** button to select a track. The display shows the selected track.
3. Press the **MEM/PROG** button on the main unit or press **PROG** button on the remote control to add the track into the program list.
4. Repeat steps 2 and 3 until you complete the programming. You can program up to 20 tracks.
5. To Start the Program Play: Press **▶II / PAIR** button.
6. To Pause or Stop a Program Play: Press **/PAIR** or **■ STOP** button.
7. To Replay a Program: Press **▶II / PAIR** button.
8. To Clear the Program: Press **■ STOP** button twice or open and close the CD door.

CONNECTING TO BLUETOOTH®

External devices that have a built-in Bluetooth® feature can connect wirelessly to the Desktop CD Stereo System.

Getting Connected

1. Press the SOURCE button until the Bluetooth® indicator shows on LCD Display with blink or press the BT button on the remote.
2. Set the Bluetooth® function of your external device to **ON** and begin searching for devices. Note: The effective distance between your external device and this apparatus is 33 Feet (10 meters).
3. Once "**VICTOR VDTS-4400**" appears on the paired devices list of your external device select it.
4. If you are asked for a password, enter "**0000**".
5. A tone will be heard and Bluetooth® indicator light steadily that indicates a connection has been established.
6. A few seconds later your Bluetooth® connection should be ready to use.
7. If you want Desktop CD Stereo System change to pair with another Bluetooth® device, press and hold the PAIR button, the Bluetooth® indicator will flash on LCD Display. The unit will go into pairing mode.

Playing Music from an External Bluetooth® Device

1. Follow the "GETTING CONNECTED" steps above to pair your external device.
2. Play music on your external device. Normally, you can control music playback with the ►II / PAIR, I◄◄ / TUN- button, and ►►I / TUN+ buttons on the Bluetooth® 50 Watt CD Shelf System.

Note: Some function buttons may not work with all devices.

USING THE FM RADIO

1. Press the **SOURCE** button to switch to the **FM RADIO** or press the **FM** button on the remote. The display will show a radio station.
2. Tune to a desired radio station. The frequency is indicated on the display.
 - a. **MANUAL TUNING:** Press the **TUN+** or **TUN-** button briefly and the frequency will tune up or down.
 - b. **AUTO SEARCHING:** Press and hold the **TUN+** or **TUN-** button for more than 2 seconds, the radio frequency will start to change on the display. Once a station is found, the radio will stop searching and start to broadcast immediately.
 - c. **AUTO STORE:** Press **SCAN** button for more than 2 seconds, the unit will auto scan available stations in FM band and store it in the memory.
3. Re-position the antenna if necessary.

Setting FM Radio Presets

The Desktop CD Stereo System can store up to 20 radio station presets.

To Manually Set Presets:

1. Find the radio station you would like to save.
2. Press the **MEM/PROG** button on the main unit or **MEM** button on the remote control.
3. Press **◀◀ / TUN-** button or **▶▶ / TUN+** buttons to select the preferred Preset Number. The display will show "P01, P02, etc..."
4. Press the **MEM/PROG** button on the main unit or press **MEM** button on remote control again to save the station.
5. Repeat steps 1-4 until you have finished saving your presets.
6. To navigate through the stored presets, press the **MEM+** or **MEM-** buttons.

USING THE AUX IN (LINE IN)

External (auxiliary) audio sources such as tablets, smartphones or MP3 players, can connect to the Desktop CD Stereo System via aux-in.

1. Press **STANDBY** button to turn the unit ON and then press **SOURCE** button to select "AUX" or press **AUX** button on the remote.
2. Set the volume to the minimum level with the **VOLUME KNOB**.
3. Plug in an AUX-IN cable (not included) into the AUX-IN jack on the front of the unit.
4. Plug the other end of the cable into the headphone or Line-Out jack of the external source.
5. Turn on the external audio device and set it to play. Turn the external audio device's volume up to 2/3. If necessary, adjust the volume on the main unit by turning the **VOLUME KNOB**

CARE & MAINTENANCE

Depending on the quality of the disc, and the condition of the recording, some CD-R/CD-RW discs may not be playable.



How to remove the disc

 


How to hold the disc



How to clean the disc

3. Always place the CD in the disc tray with the label facing upward. (CDs can be played only on one side).
4. To move a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
5. If the disc becomes dirty, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.
6. Never use harmful chemicals such as record spray, antistatic sprays or fluid, benzene or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
7. Discs should be returned to their cases after use to avoid serious scratches that could cause the laser pick up to skip.
8. Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the discs.
9. Printable CD-R and CD-RW discs are not recommended, as the label side might be sticky and damage the unit.
10. Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.
11. Do not use CDs with an irregular shape (octagonal, heart-shaped, business card size, etc). CDs of this sort can damage the unit.

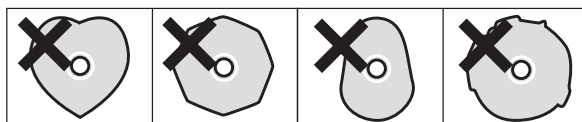

12. If you have any doubts of using CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

TROUBLESHOOTING GUIDE

In case of trouble with the unit, please look through the problems below and see if you can solve them yourself before calling your dealer.

| | PROBLEM | CAUSE | SOLUTION |
|------------|---|--|---|
| WHOLE UNIT | Unit does not turn ON when STANDBY is pressed. | <ul style="list-style-type: none"> Unit is unplugged | <ul style="list-style-type: none"> Connect unit to AC power supply |
| | No sound comes out of the speakers. | <ul style="list-style-type: none"> The external speakers are disconnected. The volume is turned down (to MIN). The input selector does not match the playback source. | <ul style="list-style-type: none"> Connect the external speakers. Adjust the volume. Re-select the desired input source. |
| | The sound is noisy. | <ul style="list-style-type: none"> The unit is too close to a TV set or another similar appliance. | <ul style="list-style-type: none"> Turn off the TV or other appliance, and relocate the unit. |
| | The unit does not act as expected, or respond. | <ul style="list-style-type: none"> External factors such as ESD (Electro-static discharge) affect the unit. | <ul style="list-style-type: none"> Remove the power cord and all power supply devices. Then re-plug the unit after one minute. |
| RADIO UNIT | Cannot listen to any station, or signal appears weak. | <ul style="list-style-type: none"> The station is not tuned-in properly. A TV set is being used nearby and is interfering with the radio reception. | <ul style="list-style-type: none"> Properly tune-in the desired station. Turn-off the interfering TV set. |
| | The sound is distorted. | <ul style="list-style-type: none"> The antenna is not positioned properly. The antenna wire is not fully extend. | <ul style="list-style-type: none"> Re-position the antenna until reception improves. Fully extend the antenna wire. |
| CD PLAYER | CD stops immediately after starting, or unit pauses or stops during play. | <ul style="list-style-type: none"> The CD is inserted upside down. The CD is dusty or dirty or there is condensation on the CD. | <ul style="list-style-type: none"> Insert the CD with the printed side right-side up. Carefully clean and dry the CD. |
| | No sound. | <ul style="list-style-type: none"> The CD player is paused. | <ul style="list-style-type: none"> Press the PLAY/PAUSE button. |
| | Specific CD is noisy, or playback stops or skips. | <ul style="list-style-type: none"> The CD is scratched, damaged or warped. The disc is very dirty. | <ul style="list-style-type: none"> The CD should be changed. Carefully clean the CD. |
| BLUETOOTH | Bluetooth No Sound | <ul style="list-style-type: none"> Unit is not linked with your Bluetooth enabled device. | <ul style="list-style-type: none"> Go through BT pairing process to the unit. |
| | | <ul style="list-style-type: none"> Unit placement out of range. | <ul style="list-style-type: none"> Relocate the unit within Bluetooth operating range (32 feet) |
| | | <ul style="list-style-type: none"> Your Bluetooth enabled device Volume set too low. | <ul style="list-style-type: none"> Increase Volume level of your Bluetooth enabled device. |

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be colocated or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

IC STATEMENT

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence.

Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate this equipment. Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly. Electric and electronic equipment is marked with the crossed-out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste but should be disposed of separately. All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.



CALIFORNIA PROP 65 WARNING

“WARNING” This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, visit the following website address: <http://www.oehha.ca.gov/prop65.html>

SUPPORT

We do our best to offer high quality products to our customers. If you experience any issues or problems with your product, please contact customer support as many issues can be quickly resolved.

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

Naxa Technical Support

2320 East 49th St.

Vernon, CA 90058

(866) 411-6292

<http://www.naxa.com/supportcenter>

**This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC.*

VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC.

Further information at www.victor-brand.com.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.