

 


# 7" Bluetooth® DVD Boombox with TV EDL-2870

## QUICK START GUIDE

### IMPORTANT


For your safety and proper performance this product has a polarized power plug. It will not operate if the power cord is incorrectly attached to the external AC socket.

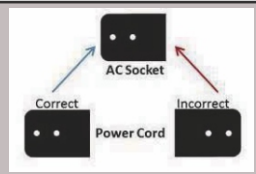

### DIGITAL TV FACTS

Digital TV differs greatly from older analog TV. When all is right, digital TV provides a clear, ghost-free, highly saturated color picture. However, it is possible that even when a strong signal is available you may not receive a picture at all. Old fashioned analog TV will nearly always display a picture, but sometimes it will be full of static, blurry, and may have multiple "ghost" images. *Digital TV is like a light switch—it is either ON or OFF.*

 If after the initial setup you do not receive one or more of your favorite TV channels, try placing the external TV antenna in another area and re-scan your TV. Should you still be unable to receive a particular channel, try using a better antenna or connecting your unit to cable TV and then re-scan again.

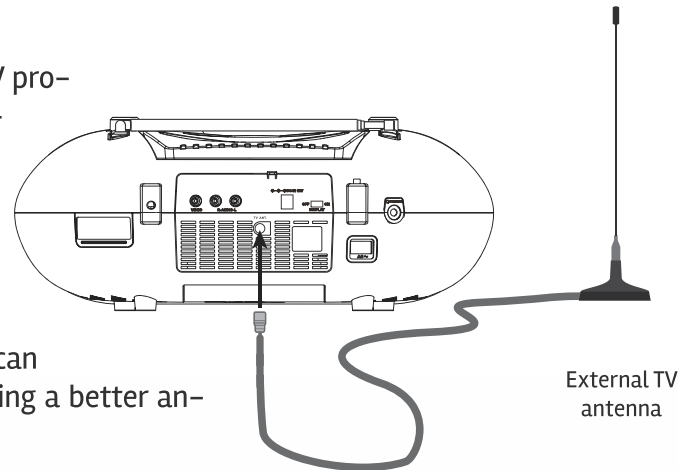

### About TV Sound

Try setting the Sound Mode to "Movie" for better TV dialog recognition.

 
 
 
Press **BASS BOOST** to enjoy richer sound.

### Let's Watch TV

Be sure the included TV antenna is connected to the set properly and that the rear display switch is set to ON.

Power on the unit. Set the FUNCTION switch to the **TV/DVD/BT/AUX** position. Press **MODE/TV MENU** to switch to TV mode (or press MODE on the remote).

1. Press the GOTO/SEARCH key on the remote control to auto search the TV programs.
2. Press and hold **MODE/TV MENU** to enter the TV setup menu to adjust the options for the TV.

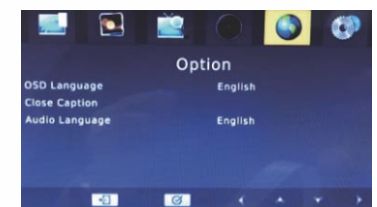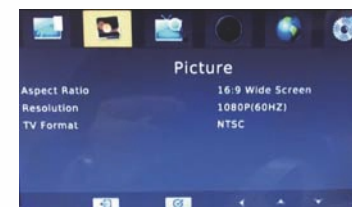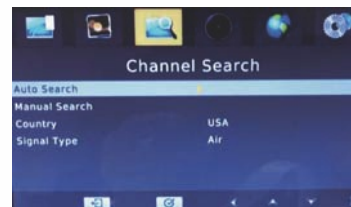

## TO PLAY A DVD

Power on the unit. Set the FUNCTION switch to the **TV/DVD/BT/AUX** position.

*Note: Sometimes you may need to press **MODE/TV MENU** to switch to DVD mode. Press the **MODE/TV MENU** button to switch between DVD, TV, and BT modes.*

1. Lift the disc compartment cover to reveal the disc tray.
2. Place a disc onto the tray. Make sure that the center hole of the disc fits over the spindle and then push down gently to lock the disc into place.
3. Lower the disc compartment cover to close it. The system will automatically attempt to read the disc. (If necessary, press **PLAY/PAUSE/ENTER/PAIR** to start playback.)
4. When a menu screen appears on the LCD screen, use the **FWD/UP, REV/DOWN, PREV/LEFT** or **NEXT/RIGHT** buttons to browse menu items; press **PLAY/PAUSE/ENTER/PAIR** to select a menu item. You may also use the numeric keypad on the remote control to enter a track number.

## ENJOY AM/FM RADIO

Power on the unit. Set the FUNCTION switch to the **RADIO** position.



*To optimize reception when listening to stations on the FM band, extend the telescopic antenna to its full length. To optimize reception for AM band stations, gently move the unit around, or position the unit in an open place.*

1. Select the band.
  - Set the BAND switch to **AM** to tune to AM radio frequencies (kHz).
  - Set the BAND switch to **FM** to tune to FM radio frequencies (MHz).
2. Tune to a station by turning the TUNING dial. Turn the dial slowly as you approach the desired frequency. You may need to turn the dial back and forth a little to lock onto the strongest signal.



*The FM ST/PAIR indicator will light red when the tuner is locked onto an FM stereo broadcast.*

3. Turn the VOLUME dial to adjust the volume level to a comfortable listening level.

## ENJOY BLUETOOTH MODE

Power on the unit. Set the FUNCTION switch to the **TV/DVD/BT/AUX** position. Press **MODE/TV MENU** to switch to BT mode. The FM ST/PAIR indicator will light up blue.

Before using a wireless device with Bluetooth, you will need to pair it with the system. Once a device is paired, the system will automatically detect and connect to it.

1. When you switch to Bluetooth mode and the system does not detect a paired device, it will automatically enter pairing mode. The FM ST/PAIR indicator will flash blue when the system is in pairing mode.
2. On your Bluetooth device, go to its Bluetooth settings menu.
3. Have your Bluetooth device “search for devices”. Select the system (EMERSON EDL-2870) when it is found. Enter **0000** as a passkey if the device asks for one.
4. When pairing is complete, the system will emit a soft tone and the FM ST/PAIR indicator will light a steady blue. The system will automatically connect to your Bluetooth device next time as long as it has Bluetooth enabled, is within range, and is set to be visible to paired devices.
5. Control playback from your Bluetooth device. Basic playback (such as play/pause, next, previous) may also be controlled by the system and its remote control if your Bluetooth device supports it.



*There are many different Bluetooth enabled devices; we cannot provide instructions for all of them. Please refer to your device manufacturer's instructions or website to learn more about connecting with Bluetooth.*

### **FOR TECHNICAL SUPPORT**

If you have questions regarding this product, call 866-411-6292 or 323-583-8883 Mon.-Fri. from 10:00AM-5:00PM PST (CA) and ask for our product specialists. You may get help by email us at [support@emersonaudio.com](mailto:support@emersonaudio.com).

See many more products on the Internet!