

INSTRUCTION

1. THIS UNIT HAS RECHARGEABLE BATTERY, WHEN THE BATTERY POWER IS FINISH, KINDLY PLUG THE SWITCH TO ELECTRIC SOCKET ACCORDING TO INPUT VOLTAGE(90-240V).
2. PLEASE NOTE IF VOLTMEETER IS GOING BELOW 12V WHICH SHOWS BATTERY IS GETTING LOW, WHEN CHARGING THE BATTERY IT WILL SHOW RED LIGHT, ONCE THE BATTERY IS CHARGED UNIT WILL SHOW GREEN LIGHT, WHEN CHARGING THE BATTERY MAKE SURE AC/DC SWITCH SHOULD BE ON, ONCE UNIT IS CHARGE PLS UNPLUG THE SOCKET FROM ELECTRICITY, YOU HAVE TO CHARGE THE BATTERY FOR 10 TO 12 HOURS FOR THE FIRST USE, NEXT TIME ONWARD YOU HAVE TO RECHARGE THE BATTERY FOR 8 TO 10 HOURS.
BATTERY NORMAL WORKING TIME IS 5 TO 6 HOURS ACCORDING TO THE VOLUME OF SPEAKER.
STANDBY: 10DAYS.
3. WHEN CHANGE THE FUSE, PLEASE USE ONLY 10AMP FUSE.

ATTENTION

1. IN ORDER TO KEEP BATTERY LIFE LONGER, KINDLY CHARGE THE BATTERY EVERY TIME AFTER THE BATTERY POWER IS FINISH, OR IT WILL DAMAGE THE BATTERY IF YOU KEEP IT LONG TIME WITHOUT CHARGE OR NOT USING IT FOR LONG PERIOD OF TIME, SO KINDLY USE IT AFTER REGULAR INTERVAL OF TIME.
2. OUR COMPANY RESERVE RIGHT TO BRING CHANGES IN PRODUCT WITHOUT ANY NOTICE.
3. IF ANY ISSUE WITH THE PRODUCT KINDLY CONTACT THE PROFESSIONAL PERSON TO HANDLE AS THIS UNIT IS HIGH POWER, SO PLS DON'T OPEN THE UNIT.
4. KEEP IT AWAY FROM CHILDREN.

INSTRUCTION MANUAL

 
 
QFX[®]

MODEL NO.: SBX-61081BT

Portable Speaker


Carefully read operating manual to operate this unit properly, and keep this manual for further reference.

PANEL FUNCTION DECLARATION

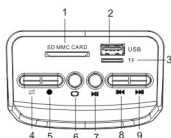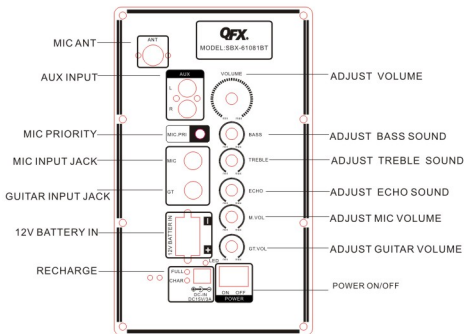

1. SD/MMC CARD SLOT.
2. USB SLOT.
3. TF SLOT.
4. ◀ LONG PRESS TO TURN ON/OFF THE VOICE BROADCAST.
5. ◀ LONG PRESS TO RECORDER / SHORT PRESS TO PLAY RECORDER.
6. ◀ LONG PRESS TO DELETE RECORDER / RECYCLE PLAY MUSIC.
7. ▶ PRESS TO PREVIOUS SONG.
8. ▶ LONG PRESS TO CHANGE LANGUAGE BROADCAST / SHORT PRESS TO PAUSE.
9. ▶ PRESS TO NEXT SONG.

 REMOTE FUNCTION DECLARATION



1. LONG PRESS TO DELETE RECORDER / RECYCLE PLAY MUSIC.
2. PRESS FOR MUTE.
3. 0-3 PRESS FOR CHOOSING SONGS
4. MODE: PRESS INTO ANOTHER MODE(AUX/USB/SDFM/BLUETOOTH)
5. USB/SD PLAY
6. ADJUST THE VOLUME TO MAX.
7. NEXT SONG.
8. LONG PRESS TO CHANGE LANGUAGE BROADCAST / SHORT PRESS TO PAUSE.
9. ADJUST THE VOLUME TO MIN.
10. ADJUST AUTO EQ.
11. AUX INPUT
12. PREVIOUS SONG.
13. REPLAY SONG.
14. PRESS TO RECORDER / LONG PRESS TO PLAY RECORDER.

BLUETOOTH USE GUIDE Bluetooth SPEAKER

STEP 1

PRESS THE MODE BUTTON TO LAUNCH THE BLUETOOTH APPLICATION. THEN YOU WILL SEE THAT BLUETOOTH'S LOGO SHOW UP.

STEP 2

SLIDE THE "BLUETOOTH" SWITCH TO "ON." ON YOUR OTHERS DEVICES WITH BLUETOOTH FUNCTION, LIKE CELLPHONE, COMPUTER OR OTHERS. THEN IT AUTOMATICALLY BEGINS SCANNING FOR NEARBY BLUETOOTH DEVICES.

STEP 3

TAP THE ENTRY FOR THE BLUETOOTH ACCESSORY WHEN IT'S DETECTED BY THE CELLPHONE OR COMPUTER AND DISPLAYED ON THE SCREEN. IF THE ACCESSORY REQUIRES YOU TO ENTER A PASSWORD TO COMPLETE THE CONNECTION, ENTER THE NUMBER WHEN PROMPTED BY THE CELLPHONE OR COMPUTER. THEN IT CAN NOW USE BLUETOOTH TO OPERATE IN CONJUNCTION WITH THE ACCESSORY.