



**STEAM IRON**

**MPI-60**



**Operating and Safety Instructions**

**-FOR INDOOR HOUSEHOLD USE ONLY-**

# IMPORTANT SAFEGUARDS

When using this or any other electrical appliance, always follow these basic safety precautions, especially when children are present.



## READ ALL INSTRUCTIONS BEFORE USE

**⚠ WARNING-- To reduce the risk of fire, electric shock, serious personal injury and property damage please note the following:**

- This product is not intended for use by children. Keep the product out of the reach of children and pets. Extra caution is necessary when using this appliance near children.
- Always ensure the product is unplugged from the electrical outlet and allowed to cool before assembling, disassembling, relocating, or cleaning it.
- Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when not in use.
- Do not immerse the Base, Power Cord, or Plug of this product in or expose the Power Cord or Plug to water or other liquids.
- Do not touch hot surfaces. Use handles or knobs when handling product. Use protective oven mitts or gloves when removing the Lid or handling hot containers to avoid burns or personal injury.
- Take proper precautions to prevent burns, fire, or personal or property damage as this appliance generates heat and steam during use.
- Do not use attachments not recommended or sold by the product manufacturer. Attachments, when furnished, may become hot during use. Allow any attachments to cool before handling them.
- Do not place on or near a hot gas or electric burner, in a heated oven, or other heated surfaces.
- Use extreme caution when moving an appliance containing hot food, water, or other liquids.
- Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.
- Use appliance on a table or flat surface.
- Keep the product away from curtains, wall coverings, clothing, dishtowels, or other flammable materials.
- Do not plug or unplug the product from the electrical outlet with a wet hand.
- This product is intended solely for non-commercial, non-industrial, household use in cooking of food for human consumption; do not use the product outdoors or for any other purpose.
- Do not operate the product empty.
- Do not let cord hang over edge of table or counter where it may be tripped over or pulled. Do not allow cord to touch hot surfaces.

- Do not operate the product if it has a damaged or cut Power Cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the Motor Housing is dropped in or exposed to water.
- This product has no user-serviceable parts.
- Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing; take the product to the appliance repair shop of your choice for inspection and repair.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.

## SPECIAL INSTRUCTIONS:

- The Iron should always be turned to “MIN” before plugging or unplugging from outlet.
- Always disconnect Iron from electrical outlet when filling with water, emptying or when not in use.
- Burns can occur from touching hot metal parts, hot water or hot steam. Use caution when you turn the Steam Iron upside down as there still be hot water in the reservoir.
- Never immerse the iron, cable or plug in any liquid.
- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord is not recommended for use with this product, but if one must be used:
  - The marked electrical rating must be at least as great as that of the product;
  - If the product is of a 3-prong grounding type, the extension cord must be a grounding-type 3-wire cord.
  - Arrange the extension cord so that it will not drape over the countertop or tabletop where it can be tripped over or pulled.


**WARNING:** This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.



**SAVE THESE INSTRUCTIONS  
FOR FUTURE REFERENCE**

## **Parts:**

1. Temperature Control
2. Steam Button
3. Spray Button
4. Spray Nozzle
5. Water Inlet
6. Power Indicator Light
7. Steam Control Knob
8. Sole Plate
9. Body
10. Water Tank
11. Rear Cover

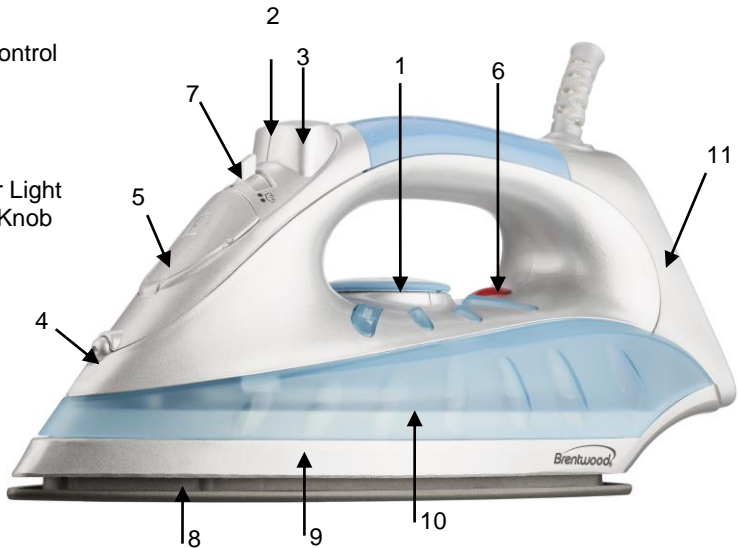

## **Before First Use**

**IMPORTANT:** Please check all packaging material carefully before discarding as there may be accessory parts contained within the packaging material.

1. Use the lowest temperatures with fabrics that have unusual finishes such as sequins, embroidery, flush, etc.
2. We recommend passing the iron over an ordinary cloth before using it for the first time.
3. If the fabric is mixed, set the thermostat to the temperature of the fiber requiring the lower temperature.
4. If you do not know the composition of the fabric, try testing on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature.
5. Never iron areas with traces of perspiration or other marks. The heat of the plate fixes the stains on the fabric making them irremovable.

## **Using Your Steam Iron:**

### **STEAM IRONING**





**Attention:** First use may cause a slight odor or small smoking upon heating, it is normal. This is a result of the heating element chemical reaction. It quickly goes away.

### **Filling the Reservoir:**

1. Set the steam control knob(7) to "0" and the temperature control dial (1) to "OFF"
2. Unplug the iron from the wall outlet and wait for iron to cool down.
3. Pour water into the water inlet and fill to the "MAX" level of the water tank.

### Selecting the Temperature:

NOTE: Always check garment label for ironing instructions before ironing garment. If the instructions are missing, then use the table below.

IRONING LABEL	KIND OF TEXTILE	FABRICS
	Synthetic	Acrylic Polypropylene Polyurethane
	Synthetic	Acetate Triacetate
	Synthetic	Polyamide (Nylon) Polyester Viscose(Rayon)
	Silk	Silk
	Wool	Wool
	Cotton	Cotton
	Linen	Linen

1. Insert the plug into the wall outlet and stand Iron upright
2. Turn the temperature control dial (1) to the desired temperature.
3. The power indicator light will turn off once temperature has been reached.

Note: The light will turn on and off indicating that the selected temperature is being maintained.

### Selecting the Steam:

#### Selecting Shot-Steam and Steam when Ironing Vertically:

1. Press the shot-steam button (F) to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing again [Fig. 4].
2. By pressing the shot-steam button at intervals you can also iron vertically (curtains, hung garments, etc.) [Fig. 6].

**Warning:** the shot-steam function can only be used at high temperatures. Stop the emission when the power light comes on, and then start ironing again only after the light has gone off.

### DRY IRONING






To iron without steam, follow the instructions in section “Steam Ironing”, leaving the steam selector (D) on position “O”.

#### SPRAY FUNCTION

1. Make sure that there is water in the reservoir.
2. Press the spray button (E) slowly (for a dense spray) or quickly (for a vaporized spray) [Fig. 2].

**Warning:** for delicate fabrics, we recommend moistening the fabric

beforehand using the spray function, or putting a damp cloth between the iron and the fabric. To avoid staining, do not use the spray on silk or synthetic fabrics.

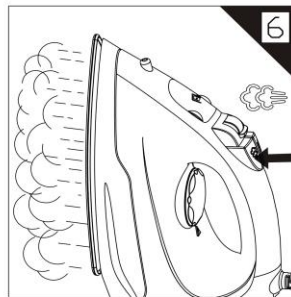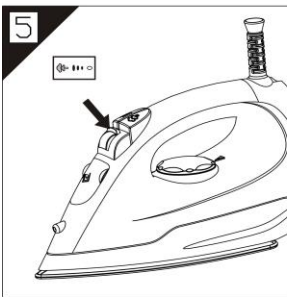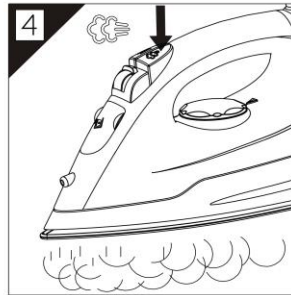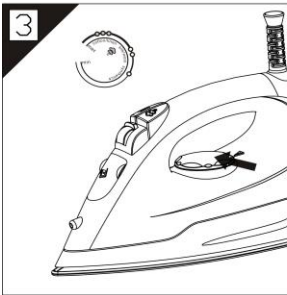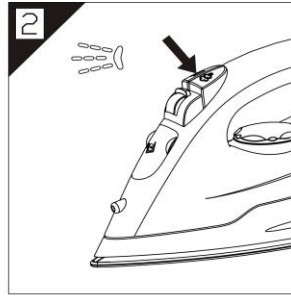

### **Storing your Steam Iron:**

**WARNING:** Always unplug the product and allow it to cool before cleaning or storing it.

- When ironing is complete, turn the Steam Dial to the "O" position. When there is no steam, turn the Temperature Dial to "MIN" point. Unplug the product from the electrical outlet.

**NOTICE:** Always unplug the product from the electrical outlet when it is not in use or will be left unattended.

- Empty the reservoir by turning the Iron Upside down and gently shaking it. Please be very careful as contents might still be hot.
- Leave iron vertically to cool down completely.
- Always store iron in vertical position.
- Dry all part thoroughly before storing or using again.

### **ONE-YEAR LIMITED WARRANTY**

FOR ONE YEAR FROM THE DATE OF PURCHASE, WHEN THIS APPLIANCE IS OPERATED AND MAINTAINED PER INSTRUCTIONS FURNISHED WITH THE PRODUCT, BRENTWOOD APPLIANCES, INC. WILL REPLACE THE PRODUCT WITH AN EQUIVALENT UNIT OR A NEW UNIT, SOLEY AT OUR OPTION.

#### **TO OBTAIN WARRANTY SERVICE AND TROUBLESHOOTING INFORMATION:**

Call Customer Service at 1-888-903-0060 in the U.S.

#### **BRENTWOOD will not pay for:**

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace house fuses or correct house wiring, or to replace light bulbs.
2. Repairs when your appliance is used in other than normal, single-family household use.
3. Pickup and delivery
4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, improper installation, acts of God, or use of products not approved by Brentwood Appliances.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Service or warranty support for units located and/or operated outside the United States.

**NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY FOR A PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. MANUFACTURER FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS PRODUCTS SHALL BE BINDING ON BRENTWOOD APPLIANCES, INC. REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY OF THE CONSUMER. BRENTWOOD APPLIANCES, INC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. NOT WITHSTANDING THE FOREGOING CONSUMERS RECOVERY AGAINST BRENTWOOD SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY BRENTWOOD. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.**

Some states or provinces do not allow the exclusion or limitation of incidental or consequential damage or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to province. **Outside the 50 United States, this**

warranty does not apply. Contact you authorized Brentwood Dealer to determine if another warranty applies.

**Keep this Warranty and your sales slip together for future references. You must provide proof of purchase for in-warranty service.**

Write down the following information about your appliance to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and number label / plate.

**CUSTOMER RECORD**

Date of Purchase \_\_\_\_\_ Store/Dealer \_\_\_\_\_

Model No: \_\_\_\_\_ Serial No.: \_\_\_\_\_



**PLANCHA DE VAPOR**



# MPI-54



---

## Instrucciones de Operación y Seguridad

**-SOLO PARA USO DOMESTICO -**

# PRECAUCIONES IMPORTANTES

Al usar este o cualquier otro electrodoméstico, siga las precauciones básicas de seguridad, especialmente cuando niños están presentes.



## LEA TODAS LAS INSTRUCCIONES ANTES DE USAR

**⚠ ADVERTENCIA--** Para reducir el riesgo de incendio, choque eléctrico, lesiones personales graves y daños a la propiedad, por favor tenga en cuenta lo siguiente:

- Este producto no está destinado para su uso por los niños. Mantenga el producto fuera del alcance de los niños y las mascotas. Precaución adicional es necesario cuando se utiliza este aparato cerca de niños.
  - Asegúrese siempre de que el producto está desenchufado de la toma de corriente y se deja enfriar antes de montar, desmontar, trasladar o limpiar.
  - No deje el producto desatendido mientras está en uso. Siempre desenchufe el producto de la toma de corriente cuando no esté en uso.
  - No sumerja la base, el cable de alimentación o el enchufe de este producto ni exponga el cable o el enchufe al agua u otros líquidos.
  - No toque las superficies calientes. Use las asas o las perillas al manipular el producto. Use guantes protectores o guantes de horno al retirar la tapa o el manejo de contenedores calientes para evitar quemaduras o lesiones personales.
  - Tome las debidas precauciones para evitar quemaduras, incendios o daños personales o materiales como este aparato genera calor y vapor de agua durante el uso.
  - No utilice accesorios no recomendados o vendidos por el fabricante del producto. Adjuntos, cuando amueblada, pueden calentarse durante el uso. Permita que los productos s que se enfríen antes de manipularlos.
  - No coloque electrodoméstico sobre o cerca de una hornilla de gas o eléctrica, en un horno caliente, u otras superficies calientes.

- Tenga mucho cuidado cuando mueva un aparato que contiene alimentos, agua u otros líquidos.
- Utilice el producto en un área bien ventilada. Mantenga por lo menos 4-6 pulgadas de espacio en todos los lados del producto para permitir la circulación de aire adecuada.
- Utilizar aparato sobre una mesa o superficie plana.
- Mantenga el producto lejos de cortinas, revestimientos de paredes, ropa, paños de cocina, u otros materiales inflamables.
- No enchufe ni desenchufe el producto de la toma de corriente con las manos mojadas.
- Este producto está destinado exclusivamente para el uso no comercial, no industrial, hogar de cocción de los alimentos para el consumo humano, no use el producto en exteriores o para cualquier otro propósito.
- No utilice el producto vacío.
- No permita que el cable cuelgue del borde de la mesa o mostrador donde se puede tropezar con él ni tirar. No permita que el cable toque superficies calientes.
- No utilice el producto si tiene un cable de alimentación dañado o cortado o el enchufe, si los cables están expuestos, en caso de mal funcionamiento, si se ha caído o dañado, o si la armadura del motor se ha caído o este expuesto al agua.
- Este producto no tiene piezas que el usuario pueda reparar.
- No trate de examinar o reparar este producto usted mismo. Sólo el personal de servicio cualificado realice reparaciones, lleve el producto a la tienda de reparación de electrodomésticos de su elección para su inspección y reparación.
- No ponga presión sobre el cable de alimentación que se conecta al producto, ya que el cable de alimentación podría desgastarse y se rompa.

## **INSTRUCCIONES ESPECIALES:**

- La plancha debe estar siempre en la posición " MIN" antes de enchufar o desenchufar la toma de corriente.
- Siempre desconecte la plancha del tomacorriente cuando la llene de agua, vaciado o cuando no esté en uso.
- Pueden ocurrir quemaduras al tocar partes metálicas calientes, agua caliente o vapor caliente. Tenga cuidado al encender la plancha de vapor ya que todavía haya agua caliente en el depósito.
- Nunca sumerja la plancha, el cable o el enchufe en ningún líquido.


- Un cable de suministro eléctrico corto para reducir el riesgo de enredarse o tropezarse con un cable más largo. Un cable de extensión no se recomienda para su uso con este producto, pero si se debe utilizar:
  - El voltaje eléctrico debe ser al menos tan grande como la del producto
  - Si el producto es de un tipo de conexión a tierra de 3 patas , el cable de extensión debe ser un cable de toma de tierra de 3 hilos
  - Organice el cable de extensión de manera que no cuelgue del mostrador o de la mesa donde alguien se pueda tropezar con él ni tirar.

**ADVERTENCIA:** Este producto está equipado con un enchufe polarizado (una pata es más ancha que la otra) para reducir el riesgo de descarga eléctrica. Esta es una característica de seguridad . El enchufe encajará en un tomacorriente polarizado de una sola manera. Si no puede insertar el enchufe en la toma de corriente , intente invertir el enchufe. Si aún así no encaja, comuníquese con un electricista calificado. No utilice nunca el enchufe con un cable de extensión a menos que pueda insertar completamente el enchufe en el cable de extensión. No altere el enchufe. No intente anular la característica de seguridad del enchufe polarizado.



**GUARDE ESTAS  
INSTRUCCIONES COMO  
REFERENCIA**

## Partes:

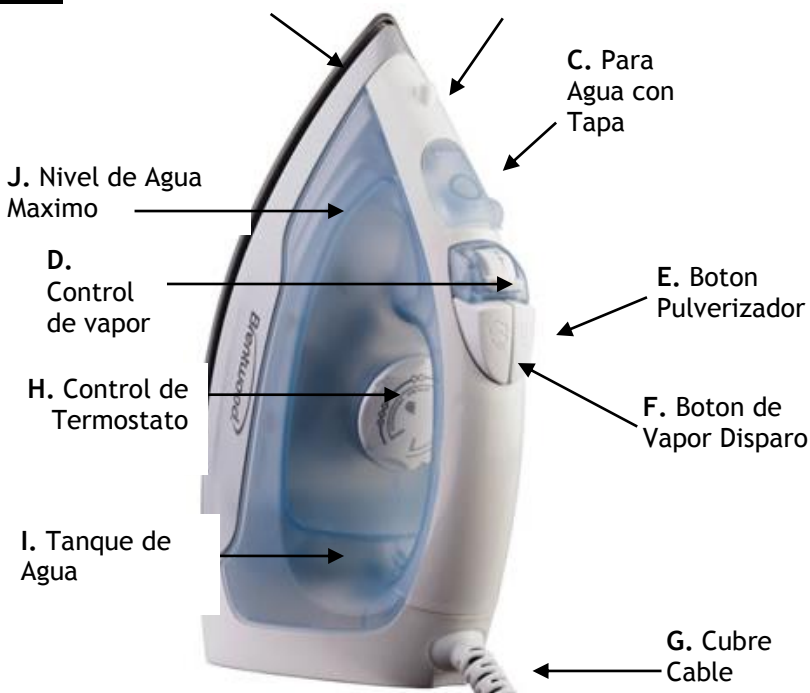





## Antes del Primer Uso:

**IMPORTANTE:** Compruebe por favor que todo el material de empaque con cuidado antes de descartar ya que puede haber partes o accesorios contenidas en el material del empaque. Use the lowest temperatures with fabrics that have unusual finishes such as sequins, embroidery, flush, etc...

1. Use las temperaturas más bajas con telas que tienen acabados poco habituales como lentejuelas, bordado, color, etc.
2. Se recomienda pasar la plancha sobre un paño ordinario antes de usarlo por primera vez.
3. Si el tejido se mezcla, ajuste el termostato a la temperatura de la fibra que requiere la menor temperatura.
4. Si usted no conoce la composición del tejido, trate de planchar en un rincón escondido de la prenda. Comience con una temperatura baja y aumentar gradualmente hasta que alcanza la temperatura ideal.
5. Nunca planche zonas con restos de sudor u otras marcas. El calor de la placa fija las manchas en el tejido haciéndolos inamovibles.

**Atención:** El primer uso puede causar un ligero olor o pequeño fumar tras el calentamiento, es normal. Este es un resultado de la reacción química elemento de calentamiento. Rápidamente se va.

### **Identificando su tipo de Ropa:**

<b>ETIQUETA</b>	<b>TYPO DE MATERIAL</b>	<b>TEMPERATURA</b>
	Sintético	● Bajo Temperatura
	Lana - Seda	●● Media Temperatura
	Algodón - Lino	●●● Alta Temperatura
	Tela no debe ser planchada	

### **Usando Su Plancha de Vapor:**

#### ***PLANCHADO CON VAPOR***

##### Llenando el Deposito:

1. Compruebe que el enchufe esté desconectado de la toma de corriente.
2. Mueva el mando de vapor *D* "O" [Fig. 5].
3. Abra la Tapa (C).
4. Con la punta del hierro para ayudar a que el agua ingrese a la apertura sin desbordarse. [Fig. 1].
5. Lentamente vierta el agua en el depósito utilizando la medida especial y teniendo cuidado de no ir por encima del nivel máximo (aproximadamente 170 ml) indicado por "MAX" del depósito..
6. Cierre la Tapa (C).

##### Selección de la Temperatura :

1. Coloque la plancha en posición vertical.
2. Enchufe el aparato a la toma de corriente.
3. Ajuste el mando de la temperatura (H) de acuerdo con el símbolo internacional sobre la etiqueta de la prenda [Fig. 3]. La luz de encendido indica con una luz roja que la plancha se está calentando. Espere hasta que el indicador de alimentación se ilumina en verde antes de planchar.

**Advertencia:** durante el planchado, el indicador de alimentación se enciende a intervalos, lo que indica que se mantiene la temperatura seleccionada. Si se baja la temperatura seleccionada después de planchar a una temperatura alta, no empieces tabla hasta que la luz de alimentación se enciende de nuevo.

##### Selección del Vapor:

1. La cantidad de vapor de agua está regulado por el mando de vapor (D).
2. Girar el mando de vapor a una posición entre el mínimo y máximo en

función de la cantidad de vapor de agua requerida y la temperatura seleccionada [Fig. 5].

**Advertencia:** el hierro emite vapor de forma continua si se mantiene la plancha en posición horizontal. Puede detener el vapor continuo mediante la colocación de la plancha en posición vertical o moviendo el mando de vapor en "O". Como se indica en el mando del vapor (D) y en el cuadro inicial, sólo se puede usar vapor a las temperaturas más altas. Si la temperatura seleccionada es demasiado baja, el agua puede gotear sobre la placa.

#### Selección de Disparo- Vapor y Vapor en el Planchado Vertical:

1. Presione el botón de disparo (*F*) para generar una potente ráfaga de vapor de agua que puede penetrar en los tejidos y alisar las arrugas más difíciles y resistente. Espere unos segundos antes de pulsar de nuevo [Fig. 4].
2. Al pulsar el botón de disparo de vapor en intervalos también se puede planchar verticalmente (cortinas, prendas colgadas, et.) [Fig. 6].

**Advertencia:** la función de disparo Vapor sólo se puede utilizar a altas temperaturas. Apague la fuente de energía cuando la luz se enciende, y luego empezar a planchar de nuevo sólo después de que la luz se ha apagado.






### **PLANCHADO EN SECO**

Para planchar sin vapor, siga las instrucciones de la sección "Tabla de Vapor", dejando el selector de vapor (*D*) en la posición "O".

### **SPRAY FUNCTION**

1. Asegúrese de que haya agua en el depósito.
2. Presione la tecla de pulverización (*D*) poco a poco (para un aerosol denso) o rápido (para un aerosol vaporizado) [Fig. 6].

**Advertencia:** para tejidos delicados, se recomienda humedecer la tela de antemano utilizando la función de pulverización, o poniendo un paño húmedo entre la plancha y el tejido. Para evitar manchas, no usar el spray en tejidos de seda o sintéticos

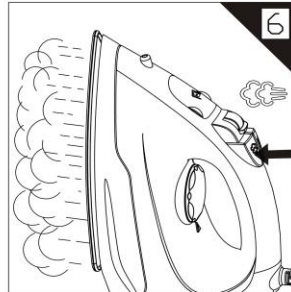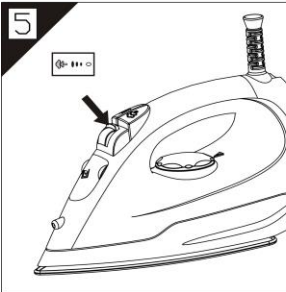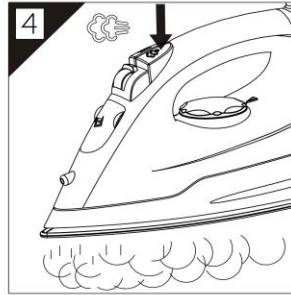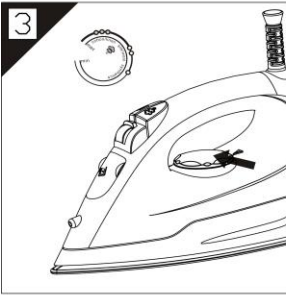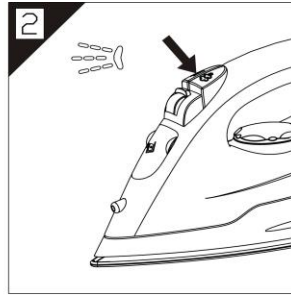

### **Almacenamiento su Plancha de Vapor:**

**ADVERTENCIA:** Desconecte siempre el producto y deje que se enfríe antes de limpiarlo o guardarlo.

- Cuando la tabla esté completa, gire el control de vapor en la posición "O". Cuando no hay vapor, gire el control de temperatura a punto de "MIN". Desenchufe el producto de la toma de corriente.

**AVISO:** Siempre desenchufe el producto de la toma de corriente cuando no esté en uso o se dejará sin vigilancia.

- Vaciar el depósito girando el hierro hacia abajo y sacudiendo suavemente. Tenga mucho cuidado ya que los contenidos pueden estar calientes.
- Deje de hierro vertical que se enfríe por completo.



- Siempre guarde plancha en posición vertical.
- Seque toda la parte completamente antes de guardarla y utilizarla de nuevo.