

MAGIC POWER BANK STAND



QUICK START GUIDE

GUIDE DE DÉMARRAGE RAPIDE

GUÍA DE INICIO RÁPIDO



PRODUCT DETAIL PART

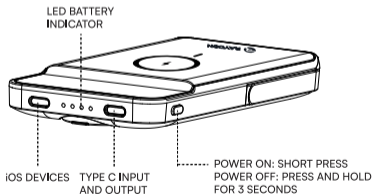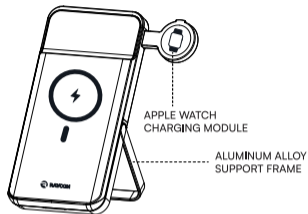

PRODUCT SPECIFICATIONS

Battery Capacity: 10000mAh / 3.7V 37Wh

iOS Port Input: 5V=2.0A / 9V=2A

Type C Input & Output: 5V=2.5 / 9V=2A / 12V = 1.67A

Wireless Charging Output Power: 5W / 7.5W / 10W / 15W

Size: 140*70.6*17.5mm

Material: ABS+PC / Aluminum Alloy

Model: RAPBAN300

*For Fast charging mode, 18W or above power adapter is required as its power source.

ATTENTION

- ENGLISH:

- Do not squeeze or collide vigorously.
- Please do not disassemble or put into the fire or water in the powered state to avoid short circuit and leakage.
- Please do not use in severe high temperature, high humidity or corrosive environment to avoid damage to the circuit and leakage.
- Please do not place magnetic cards with magnetic stripes or chips (ID cards, bank cards, etc.) on the wireless charging board to avoid magnetic card failure.
- Please do not place metal (coins and other metal objects) on the wireless charging pad while charging, to avoid heat damage.

- FRENCH:

- Ne serrez pas et ne heurtez pas vigoureusement.
- Veuillez ne pas démonter ou mettre au feu ou à l'eau lorsqu'il est alimenté pour éviter les courts-circuits et les fuites.
- Veuillez ne pas utiliser dans des températures élevées, une humidité élevée ou un environnement corrosif pour éviter d'endommager le circuit et les fuites.
- Veuillez ne pas placer de cartes magnétiques avec des bandes magnétiques ou des puces (cartes d'identité, cartes bancaires, etc.) sur la carte de chargement sans fil pour éviter une panne de la carte magnétique.
- Veuillez ne pas placer de métal (pièces de monnaie et autres objets métalliques) sur le chargeur sans fil pendant le chargement, pour éviter les dommages causés par la chaleur.

ATTENTION

- ESPAÑOL:

- No apriete ni choque con fuerza.
- No lo desmonte ni lo arroje al fuego o al agua cuando esté encendido para evitar cortocircuitos y fugas.
- No lo utilice en condiciones severas de altas temperaturas, alta humedad o ambientes corrosivos para evitar daños al circuito y fugas.
- No coloque tarjetas magnéticas con bandas o chips magnéticos (tarjetas de identificación, tarjetas bancarias, etc.) en la placa de carga inalámbrica para evitar fallas en la tarjeta magnética.
- No coloque metal (monedas y otros objetos metálicos) sobre la plataforma de carga inalámbrica mientras se carga, para evitar daños por calor.