



BRAND : iLive  
 MODEL : IKBC384S  
 ITEM : MOUNTING SHEET  
 COLOR : WHITE PAPER WITH BLACK WORDINGS  
 SIZE : 309.5 X 315.5 MM  
 DATE : JAN 10, 14


**Drill 1/4" Hole**  
 (See step 4)

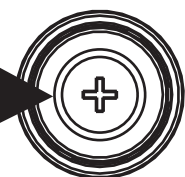


**Drill 1/4" Hole**  
 (See step 4)

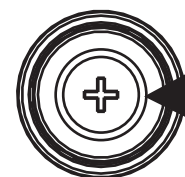

**1.** Position the template in the desired location on the underside of the cabinet, and secure it in place with tape. (Fig. 1)  
*Note: We recommend the unit be flush to the front edge of the cabinet, and near to an electrical outlet.*

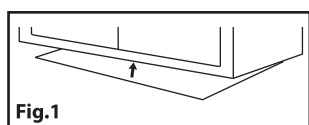


**2.** Measure the thickness of the overhang. (Fig. 2, A)

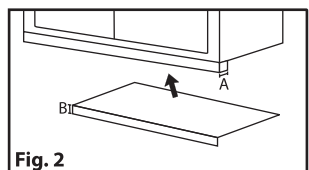


**3.** Fold the template equal to the thickness of the overhang. (Fig. 2 B)

**4.** Drill four holes as indicated by the large black arrows.

**5.** Remove the template and turn the spacers to adjust the spacer height.  
*Note: The spacer has two different preset heights.*

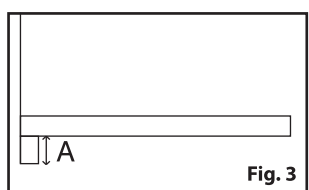


**6.** Locate the notch on the spacer and using this as a guideline, measure the height of the cabinet overhang, as shown. (Fig. 3)

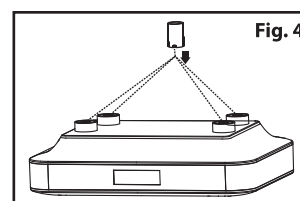

**7.** Align the notch with the corresponding connector in the unit (Fig. 4)

**8.** Press the spacers into the spacer holes on the unit.


**9.** From inside the cabinet, use a screw driver to screw the three screws into the holes located in the spacers on the unit. (Fig. 5)

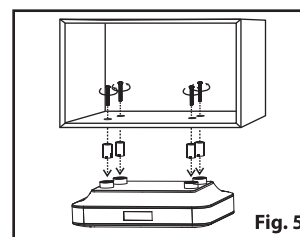

**10.** Tighten all three screws by hand. (Fig. 6)


If "B" is less than 1/4" in, you will need to get longer screws. (Fig. 7)

**Caution:** To reduce the risk of fire, do not place any heating or cooking products beneath this unit.

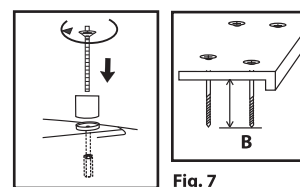

**WARNING:** Hand-seat the screws. Do not attempt to use power tools.


#### Parts Supplied

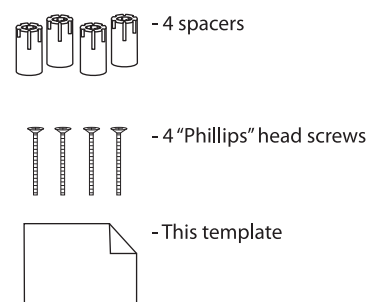


#### Tools Required



**Drill 1/4" Hole**  
 (See step 4)

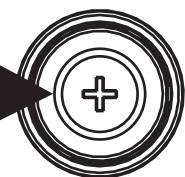

**Drill 1/4" Hole**  
 (See step 4)

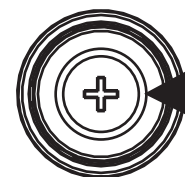

Fold guidelines for cabinet with overhang. If no overhang exists, the front edge of the template should be even with the front edge of the cabinet.

**FRONT OF CABINET**