




THE PORTABLE VACUUM

QUICK START GUIDE



PRODUCT INFORMATION

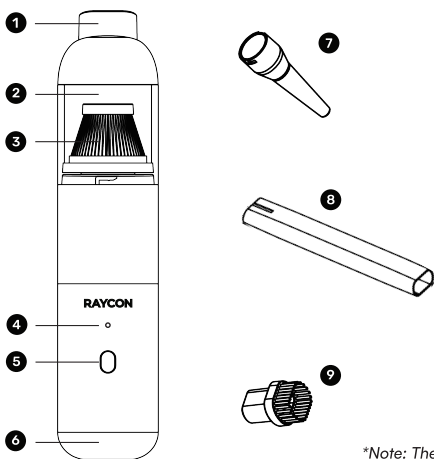

**Note: The charging port is on the back of the device*

- | | |
|------------------------|------------------|
| ① AIR INLET | ⑥ AIR OUTLET |
| ② WASTE BIN | ⑦ BLOWING NOZZLE |
| ③ HEPA FILTER | ⑧ CREVICE NOZZLE |
| ④ LED INDICATOR | ⑨ BRUSH NOZZLE |
| ⑤ POWER & SPEED BUTTON | |

INSTRUCTIONS

1. OPERATING INSTRUCTIONS

- Power ON the unit by pressing and holding the Power/Speed Button
- While the unit is in operation, switch between speeds by pressing the Power/Speed Button.
 - Low Power Mode: Capable of running up to 30 minutes on a full charge, effectively handles various messes while conserving energy.
 - Max Power Mode: Lasts up to 15 minutes and is intended for the most challenging messes.

2. CHARGING YOUR DEVICE

- To charge, connect the included USB-C cable to the charging port located at the back of the device with a 5V output charger.
- During charging, the LED indicator adjacent to the charging port will turn red.
- Once the device is fully charged, the LED indicator will turn green.

3. ACCESSORIES

A. Crevice Nozzle: Ideal for cleaning tight gaps around doors, seats, cabinet corners, drawers, and more.

B: Brush Nozzle: Attach to the Crevice Nozzle for powerful suction and effective debris removal on cushions, upholstery, electronics, and car interiors.

C: Blowing Nozzle: Attach to the bottom air outlet of the cleaner (insert / rotate to lock). Ideal for dust removal and inflating small items like toys, mattresses, and sports equipment.

4. CLEANING YOUR DEVICE

- To clean your device, twist to unlock the waste bin cover, then empty the accumulated debris from within.
- To clean the included HEPA filter:
 - Rotate the waste bin and remove the filter.
 - Wash the filter with water and mild soap.
 - Rinse thoroughly and let it air dry completely before reinserting.

Note: The product must use the specific Raycon HEPA filter to prevent dust from entering the motor. For ideal performance, the filter should be replaced every 3 months or as needed after particles are collected by the filter.

FULL USER MANUAL



<https://rayconglobal.com/pages/the-portable-vacuum-user-manual>