

USB Charger Jack To charge batteries in radio:

1. Check to see that the batteries have been inserted properly. 2. Insert the cable into the charge jack located at the right

- 3. Plug the cable into USB-compatible power port
- 4. The radio will display flashing battery icon while charging
- Only use the supplied rechargeable batteries and desktop charger (not included) for recharging your Cobra microTALK® radio.


side of the radio

- Please charge new batteries for 14 hours for first time of use. Note: Cobra recommends your radio is turned off while being charged.

Quick Start

1. Turn ON/OFF/Volume Knob clockwise to turn the radio on and counter clockwise to turn the radio off. 2. Select a desired channel. (Details please refer P.8)

Both radios must be tuned to the same

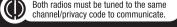

3. Press and hold the Talk button while speaking into the

4. When finished talking, release the Talk button and listen for a

Before operating the radio, please read all safety and operating instructions. Save all instructions in a safe place for future reference.

↑ WARNING: Important Safety Instructions

- Only accessories included in this package or specified by the manufacturer should be used with the radio. The 5V micro-USB charging input is compatible with most high quality micro-USB chargers that fully conform to the USB standards.
- Do not use cleaners or solvents to clean the exterior of the radio. Use only a damp or
- Do not expose this product to splashing or dripping water.
- Do not attempt to service the receiver yourself. Removing the cover will void the warranty. Changes or modifications not expressly approved by Cobra may void the user's authority granted by the FCC to operate this device and should not be made.
- Do not plug the wall adaptor into the power outlet if the outlet is well
- Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

NARNING: Important Safety Instructions for Battery Read All Instructions

- . Do not incinerate the battery even if it is severely damaged or is completely worn out.
- Do not discard battery in a fire. The battery can explode in a fire.
- Do not replace battery in any area labeled "Hazardous Atmosphere". Any sparks created in a potentially explosive atmosphere can cause an explosion or fire
- Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of
- Do not dry a wet or damp battery with an appliance or heat source, such as a hair dryer or
- . Do not attempt to charge alkaline batteries.
- . Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.

Recycle Battery

Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options

Turning your Radio On and Off

Turn ON/OFF Knob clockwise to turn the radio on and counterclockwise to turn the radio off



all feature icons available on the radio. 2. The display screen then shows the current channel

1. In the ON position, the radio chirps and briefly shows

code and all features that are enabled.

Battery Low



Battery Low When battery power is low, the final bar in the Battery Low icon will blink and an audible tone will sound twice before the radio shuts off. Your batteries should be recharged. It normally takes about 14 hours to fully charge



The radio will display flashing battery icon hile charging if the radio is on.

Auto Battery Save



Mode If there are no transmissions within 10 seconds, the radio will automatically switch to Battery Save mode and the POWER SAVER - Power Saver icon will flash in the display. This will not affect the radio's ability to receive incoming

Communicating with Another Person



1. Press and hold the Talk button. 2. With the microphone about two inches (5 cm) from your mouth, speak in a normal voice.

3. Release the Talk button when you are finished talking and listen for a response You cannot receive incoming calls while pressing the



Both radios must be tuned to the same channel/privacy code to communicate



Making Life Easier and Safer

Staying in touch with your family and friends is convenient and easy when using your microTALK® radio. Some of the many uses you will discover include

Communicating with others while hiking, biking, and working; keeping track of family and friends at a crowded public event; checking with travel companions in another car: talking with neighbors: arranging meeting spots with others while shopping at the mall.



Secure your microTALK® radio while on the go.

Carrying your microTALK® radio with you is easy when using the belt clip or optional wrist strap.

The belt clip easily attaches to your belt, purse, or backpack

Customer Assistance

Product Service & Support

In this user's guide, you should find all the information you need to operate your microTALK® radio. If you require further assistance after reading this guide, Cobra offers the following customer assistance services:

For Assistance In The U.S.A.

For any questions about operating or installing this new Cobra product, PLEASE CONTACT COBRA FIRST... do not return this product to the retail store. The contact information for Cobra will vary depending on the country in which you purchased and uses the product. For the latest contact information, please go to www.cobra.com/support or call 1-800-543-1608.

If your product should require factory service, please go to www.cobra.com/support and follow the instructions

> ©2022 Cobra Electronics Corporation www.cobra.com

> > A-2

Listening for a Response



A-1

Release the Talk button to receive incoming ansmissions. Your microTALK® radio is normally in Standby mode while the Talk, Call or Weather buttons are not pressed.

To Adjust Volume



Volume Knob Press and hold MAX-RANGE Button for three seconds to turn off the auto squelch, then rotating Volume Knob until you reach a comfortable listening level.

1. Rotate Volume Knob clockwise to increase the volume

2. Botate Volume Knob counterclockwise to decrease the volume.

3. Press and hold MAX-RANGE Button to enable the auto squelch. Do not hold the radio close to your ear. If the volume is set to an a high level, it could hurt your ear

Call Button



Press and release the Call button to alert others that you are calling.

The other person will hear a two second call tone. This tone is used only to establish voice communications.

See page 14 on how to select between ten call tone settings.

LED/S.O.S. Flashlight



Press and release the LED/S.O.S Flashlight button below the Talk button to use the LED flashlight located at the bottom of the radio To activate S.O.S. function, press and hold the **LED/S.O.S**

Flashlight button to turn on. Press and release to turn off he flashlight or S.O.S. function.

Auto Squelch/Maximum Range

Your microTALK® radio will automatically mute weak transmissions and unwanted noise due to terrain, conditions or if you've reached your Maximum

You can turn **off** auto squelch (or turn **on** maximum range extender), allowing all signals to be received and extending the maximum range of your radio.



Operational Cautions

Exposure to high volume sound levels may cause temporary or permanent damage to your hearing. Although there is no single volume setting that is appropriate for everyone, you should always use your radio with the volume set at low level and avoid prolonged exposure to high volume sound levels.

- 1 Set the volume control in a low position and use as low a volume as
- 2. Avoid turning up the volume to block out noisy surroundings. Whenever possble, use your radio in a quiet environment with low background noise.
- 3. Limit the amount of time you use headsets or earpiece at high volume 4. When using the radio without a headset or earpiece, do not place the radio's
- speaker directly against your ear 5. Observe all signs and instructions that require an electrical device or RF. radio product to be switched off in designated areas, such as gas/refueling
- 6. If you experience a skin irritation after using this product, discontinue use and seek medical attention

stations, hospitals, blasting areas, potentially explosive atmospheres, or

7. If the product or charger: overheats: has a damaged cord or plug; has been dropped or damaged; has been dropped into water, disconnect any charger from its power supply, discontinue use of the product.

Electromagnetic Interference

aircraft

Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility. Turn off your radio in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF

- When instructed to do so, turn off your radios when on board an aircraft. Any use of a RF device must be in accordance with applicable laws, regulations and airline crew instructions.
- Some radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or nhysician to discuss alternatives
- If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your doctor or physician may be able to assist you in obtaining this information.



To turn maximum range extender on (Turn off auto - Press and hold the MAX-RANGE button for at least

three seconds until you hear background noise which


indicates the maximum range extender is on. To turn maximum range extender off (Turn on auto

squelch): - Press and hold the MAX-RANGE button.




The Lock function locks the Up, Down, Weather and Mode buttons to prevent accidental operation

To turn the lock on or off

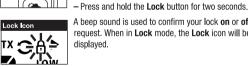

A beep sound is used to confirm your lock on or off request. When in Lock mode, the Lock icon will be displayed.

microTALK® Range

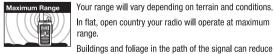

In flat, open country your radio will operate at maximum range.

automatically switches to low power, which will limit the



the range of the radio. Dense foliage and hilly terrain will further reduce the range of the radio. On Channels 8 through 14, and 34 through 37, your radio



Remember, you can achieve maximum range by using maximum range extender. See page 6 for details.

Backlit LCD Display

(3) (4)

VOX RXTX CAFF CTC

ROG ■ J POWER SAVER NOCS

12)

(13)

Battery Level Indicator

3. Receive/Transmit Indicator

1 VOX Indicator

4. Scan Icon

5. Lock Icon

6 CTCSS Indicator

7. Low Power Icon

9. Weather Alert Icon

10. DCS/CTCSS Privacy Code

8. Weather Icon

Numbers

11. DCS Indicator

13. Key Tone Icon

12. Power Saver Icon

14. Roger Beep Indicator

15. Channel Numbers

(5)

(11)

Features

- 40 Channels • 10 Channel
- Weather Radio
- 121 Privacy Codes
- (38 CTCSS codes/ 83 DCS codes) Hands-Free Operation
- (VOX) Scan
- Channels, privacy code: Backlit LCD Display
- LED/S 0 S Flashlight • Call Alert
- Ten selectable tones Button Lock
- Speaker/Microphone · Charge Jack
- Roger Beep Selectable On/Off Battery/Power Save Kevstroke Tones
- Battery Level Indicator
- Low Battery Audible Alert
- Auto Squelch Maximum Range Extender
- Belt Clip Emergency Cal

11. Lock Button 12. USB Charge Jack

(17)

18

. (15)

14

.(13)

.12

10

·(9)

Product Features

1).

(5)

1. Antenna

2. Push-to-Talk Button

3. Up/HI/LOW Button

7. Down/Max-Range Button

Mode Functions

Scrolling Through the Mode Function

Mode Button Channel Selection

By scrolling through the **Mode** function, you will be able to select or turn **on**

function, your radio features will be displayed in the same predetermined

preferred features of your microTALK® radio. When scrolling through the Mode

Set CTCSS Privacy Codes

Set DCS Privacy Codes

Set Vox On/Off

Set Vox Sensitivity

Set Channel Scan

Set Call Tones 1-10

Set Roger Beep On/Off

Set Key Tones On/Off

The radio has 40 channels, Channel 1 to 22 are compatible with other brands

proceed to other functions.

and return to Standby mode

Both radios must be tuned to the same channel to communicate

See page 18 for frequency

number flashes

the following

1. Briefly press and release **Mode** button, the channel

2. Press Up or Down button to select a channel. (You can

3. When the desired channel is displayed, choose one of

a. Press the Mode button to enter the new setting and

b. Press the Talk or Call button to save the new setting

c. Do not press any buttons for 6 seconds to save the new setting and return to Standby mode.

hold the **Up** or **Down** button for fast advance)

8. LED/S.O.S Flashlight

9. Speaker/Microphone

Channel Selection

of Two-Way radios

MODE

MAX

10. Weather Button

4. Flashlight Button

5 Mode Button

6. Call Button

- 14. Backlit LCD Display
- 15. ON/OFF/Volume Knob 16. Emergency Alert Button
- 18 Belt Clip
- 19. Battery Compartment Door

13. External Speaker/Microphone

17. Wrist Strap Connection

unobstructed line-of-sight communication under ideal conditions.

Privacy Codes Your microTALK® radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel, CTCSS (Continuous Tone Coded Squelch System) provides 38 privacy codes and DCS (Digitally Coded Squelch) provides 83 privacy codes. This provides a total of 121 Privacy Codes. Either system can be used on channels (CH1-CH22), but

both systems cannot be used on the same channel at the same time.




To successfully communicate using a privacy code, both the transmitting and receiving radios must be tuned to the same channel and to the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will remember the last privacy code system and number you select.



The privacy code 00 is not a privacy code, but allows all signals to be heard on a channel that is set to 00 on both the CTCSS

Set CTCSS Privacy Codes

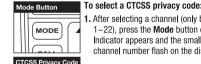

L. After selecting a channel (only be available on channel 1~22), press the **Mode** button once, the **CTCSS** Indicator appears and the small numbers next to the channel number flash on the display

If DCS is turned on at the channel selected,

small numbers flashing and you will then be



to Standby mode.

the display will flash the CTCSS icon and "OFF." To switch from DCS to CTCSS, press the Up or Down button while the display is flashing "OFF." The display will then show the

2. Press using the Up or Down button to select a privacy code. You can hold the **Up** or **Down** button for fast advance


able to proceed to step 2

- 3. When your desired CTCSS privacy code is displayed, choose one of the a. Press the Mode button to enter the new setting and proceed to other
- b. Press the Talk or Call button to save the new setting and return to
- c. Do not press any buttons for 6 seconds to save the new setting and return

sliding clip up 2. Pull up on the battery door latch to remove the



Caring for Your microTALK® Radio

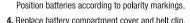



temperatures


Installing Batteries (Battery already pre-installed) To install or replace hatteries:


Your microTALK® radio will give you years of trouble-free service if cared for

properly. Handle the radio gently. Keep the radio away from dust. Never put

1. Remove belt clip by releasing belt clip latch and


the radio in water or in a damp place. Avoid exposure to extreme

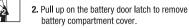

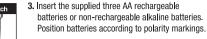



Set DCS Privacy Codes

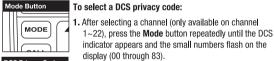



If CTCSS is turned **on** at the channel selected, the display will flash the DCS icon and "OFF." To switch from CTCSS to DCS, press the Up or **Down** button while the display is flashing "OFF" The display will then show the small numbers flashing and you will then be able to proceed to step 2.

2. Press using the Up or Down button to select a DCS privacy code. You can hold the Up or Down button for fast advance

3. When your desired DCS privacy code is displayed, choose one of the a. Press the **Mode** button to enter the new setting and proceed to other

b. Press the Talk or Call button to save the new setting and return to Standby mode.

c. Do not press any buttons for 6 seconds to save the new setting and return to Standby mode

Mode Functions (continued on back side)



Mode Functions (continued)

Voice Activated Transmit (VOX)

In **VOX** mode, your microTALK® radio can be used "hands-free," automatically transmitting when you speak. You can set the VOX sensitivity level to fit the volume of your voice and avoid transmissions triggered by background noise.



To turn VOX mode on or off:



2. Press the Up or Down button to turn VOX On or Off.






. Press the **Mode** button repeatedly until the **VOX** indicator flashes on the display. The current On or Off setting is displayed


Choose one of the following:

- a. Press the Mode button to enter the new setting and proceed to other functions.
- b. Press the Talk or Call button to save the new setting and return to Standby mode
- c. Do not press any buttons for 6 seconds to save the new setting and return to Standby mode.

ode Button To set VOX sensitivity:



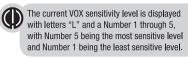


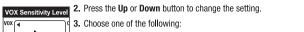

- a. Press the Mode button to enter the new setting and proceed to other functions h Press the Talk or Call button to save the new setting and return to Standby mode.
- c. Do not press any buttons for 6 seconds to save the new setting and return to Standby mode.


Channel Scan

Your microTALK® radio can automatically scan channels.

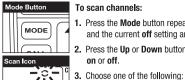

1. Press the Mode button repeatedly until the Scan icon and the current off setting are flashing. 2. Press the Up or Down button to select Channel Scan on or off



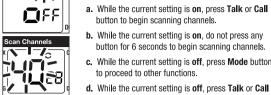

MAX RANGE

 While the current setting is on, do not press any. button for 6 seconds to begin scanning channels. c. While the current setting is off, press Mode button

button to begin scanning channels.

to proceed to other functions d. While the current setting is off, press Talk or Call button to return to Standby mode Up/Down Button e. While the current setting is off, do not press any

The radio will check privacy codes while scanning channels

buttons for 6 seconds to return to **Standby** mode.

The **Scan** icon will continue to be displayed when scan is **on**. Your radio will continue to scan all channels and stop if an incoming transmission is detected Your radio will remain on that channel for 8 seconds after the last incoming

During scanning (while receiving an incoming transmission), you can choose from the following:

- a. Press and hold the Talk button to communicate on that channel. Your radio will remain on that channel and return to Standby mode.
- c. Press the Talk or Call button to return to Standby.


b. Press the Up or Down button to resume scanning channels.

Ten Call Tone Settings

You can choose between ten different Call Tone Settings to transmit a call



To change a call tone setting:

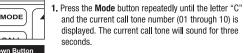


2. Press the Up or Down button to hear the other call tone settings



and the current call tone number (01 through 10) is displayed. The current call tone will sound for three

3. Choose one of the following:

a. Press the Mode button to enter the new setting and proceed to other functions.

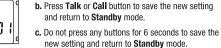


Roger Beep Confirmation Tone

Your listener will hear an audible tone when you release the Talk button. This alerts the other party that you are finished talking and it is OK for them to




To turn roger beep on or off:

Press the Mode button repeatedly until the Roger **Been** indicator flashes. The current **on** or **off** setting is displayed

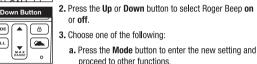


a. Press the Mode button to enter the new setting and

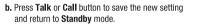

c. Do not press any buttons for 6 seconds to save the new setting and return to Standby mode.


Key Tone On/Off

When **Key Tone** is **On**, an audible tone will sound each time a button is

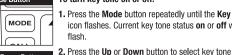


To turn key tone on or off:

. Press the **Mode** button repeatedly until the **Key Tone** icon flashes. Current key tone status on or off will

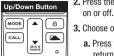

3. Choose one of the following:

and return to Standby mode.

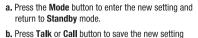

c. Do not press any buttons for 6 seconds to save the

new setting and return to Standby mode



Your radio can transmit selectively at 0.5 or 1.5 watts of power. Use the low power setting for short-range communications and use the high power setting for long-range communications.

Set High / Low Transmit Power Level




To toggle between High/Low Power Modes: . Press and hold the HI/LOW button until Low icon

toggled. (Low icon means the current channel that set as low power output, otherwise it is in High power



Channel 8~14, 34~37 only operates on Low

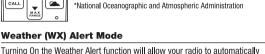

NOAA* All Hazards Radio Channels

channels transmitting in your area

You can use your microTALK® radio to listen to NOAA All Hazards Radio

Radio channel are displayed

Press the Weather button once until the All Hazards

Radio icon and the currently selected All Hazards

2. Use the Up or Down button to change All Hazards

3. The All Hazards Radio icon will continue to be

L. To exit All Hazards Radio, press and hold the

displayed when All Hazards Radio is on.

Weather Button To listen to All Hazards Radio channels:


Radio channels.

Weather button.

receive NOAA weather signals and warnings from designated weather broadcast stations. If the radio is turned ON, it will alert to Weather and other emergency alerts broadcast by NOAA.



Up/Down Button

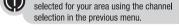



To turn Weather Alert On or Off: 1. Press the Weather button twice until the Weather

Alert icon flashes on the display. The current On or Off setting is displayed Press the Up and Down button to turn Weather Aler

Make sure the strongest Weather channel is

On or Off 3. Press and hold the Weather button again and save the

new setting and exit the Weather Alert Mode and return to Standby mode. The Weather Alert icon will show on the display when it turned on.

event of an actual emergency. Cobra is not responsible if there is no response to the emergency alert from the receiving group.

Frequency Allocation and Compatibility

General Specifications

A = Channel No. for 40 Channel Models B = Frequency in MHz

C = Power Output

D = Code System / Code No.

А	В	U	ע	А	В	U	ע
1	462.5625	High	ANY	21	462.7000	High	ANY
2	462.5875	High	ANY	22	462.7250	High	ANY
3	462.6125	High	ANY	23	462.5625	High	CTCSS / 38
4	462.6375	High	ANY	24	462.6125	High	CTCSS / 35
5	462.6625	High	ANY	25	462.6625	High	CTCSS / 32
6	462.6875	High	ANY	26	462.7125	High	CTCSS / 29
7	462.7125	High	ANY	27	462.5500	High	CTCSS / 26
8	467.5625	Low	ANY	28	462.6000	High	CTCSS / 23
9	467.5875	Low	ANY	29	462.6500	High	CTCSS / 20
10	467.6125	Low	ANY	30	462.7000	High	CTCSS / 17
11	467.6375	Low	ANY	31	462.5875	High	DCS / 1
12	467.6625	Low	ANY	32	462.6375	High	DCS / 4
13	467.6875	Low	ANY	33	462.6875	High	DCS / 7
14	467.7125	Low	ANY	34	467.5625	Low	DCS / 10
15	462.5500	High	ANY	35	467.6125	Low	DCS / 13
16	462.5750	High	ANY	36	467.6625	Low	DCS / 16
17	462.6000	High	ANY	37	467.7125	Low	DCS / 19
18	462.6250	High	ANY	38	462.5750	High	DCS / 22
19	462.6500	High	ANY	39	462.6250	High	DCS / 25

20 462.6750 High ANY 40 462.6750 High DCS / 28

The NOAA NWR Frequency Table

11

Channel No.	NWR Frequency	Channel No.	NWR Frequency
1	162.5500	6	162.5000
2	162.4000	7	162.5250
3	162.4750	8	161.6500
4	162.4250	9	161.7750
5	162.4500	10	163.2750

IMPORTANT NOTICE:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment This device complies with part 15 of the ECC Bules. Operation is subject to the following two onditions: 1) This device may not cause harmful interference, and 2) this device mus accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receive
- Connect the equipment into an outlet on a circuit different from that to which the receiver
- . Consult the dealer or an experienced radio/TV technician for help.

Safety Information for microTALK Radios Your wireless handheld nortable transceiver contains a low power transmitter. When the talk

outton is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices.

FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and

18

meets the ECC RF exposure guidelines when used with Cobra accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna, Unauthorized antennas. fications or attachments could damage the transmitter and may violate FCC regulations.

Hold the transmitter approximately two (2) inches from your face and speak in a normal voice, with the antenna pointed up and away.

FCC Part 15.21 Warning Statement-

12

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE, SLICH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is

IC RSS-GEN

subject to the following two conditions: (1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils

radio excempts de licence. L:exploitation est autorisée aux deux condtions suivantes: (1) l'appariel ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Radiation Exposure Statement: Under ISEDC regulations, this radio transmitter may only operate using the antenna that is affixed to the radio transmitter. Use only the supplied antenna. Unauthorized antennas odifications, or attachments could damage the transmitter and may void the user's authority to operate the radio.

Any changes of modifications not expressly approved by the party responsible for compliance could void the user's ability to operate the equipment. SAR tests are conducted using standard operating positions accented by the ECC/ISEDC with

the device transmitting at its highest certified power level in all tested frequency ba Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This device has been tested and certified to not exceed the exposure limit established by the FCC/ISEDC. Tests for each device are performed in positions and locations (e.g. at the ear

For body worn operation, this device has been tested and meets the ECC/ISEDC RE exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body. Non-compliance with the above restrictions may result in a violation of RF exposure quidelines.

19

This device complies with part 15 of the FCC Rules. Operation is subject to the

and worn on the body) as required by the FCC/ISEDC.

following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. FCC Warnings: Replacement or substitution of transistors, regular diodes or

other parts of a unique nature, with parts other than those recommended by Cobra may cause a violation of the technical regulations of part 95 of the FCC rules, or violation of type acceptance requirements of part 2 of the rules.

13

Warranty & Trademark Acknowledgment

Limited One-Year Warranty

U-bid, or other non-authorized resellers

Cobra warrants your product against all defects in materials and workmanship for a period of one (1) year from the date of original purchas

Cobra, at our sole discretion, will repair or replace your product (with the same or comparable product) free of charge

receipt. No proof of purchase is required for factory direct purchases.

Cobra will not pay shipping charges that you incur for sending your product to us. Products To make a warranty claim, we will require proof or purchase in the form of an invoice or

Warranty Exclusions: Warranty does not apply to your product under any of the following conditions: 1. The serial number has been removed or modified. 2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation). 3. Your product has been modified in any way. 4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site including E-bay.

LIMITATION OF WARRANTY: EXCEPT AS EXPRESSLY PROVIDED HEREIN, YOU ARE ACQUIRING THE PRODUCT "AS IS" AND "WHERE IS". WITHOUT REPRESENTATION OR WARRANTY. COBRA SPECIFICALLY DISCLAIMS ANY REPRESENTATION OR WARRANTY INCLUDING, BUT NOT LIMITED TO THOSE CONCERNING THE MERCHANTABILITY AND SUITABILITY OF THE PRODUCT FOR A PARTICULAR PURPOSE CORRA SHALL NOT BE LIARLE FOR CONSEQUENTIAL SPECIAL OR INCIDENTAL DAMAGES INCLUDING WITHOUT LIMITATION DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT. The above limitations or exclusions shall be limited to the extent they violate the laws of any

particular state. Cobra is not responsible for products lost in shipment between the owner

and our service center. General Warranty Information

This warranty is non-transferrable.

Each product we manufacture is covered by our factory warranty. While each product may have unique components and policy, the general guideline below will apply to most Cobra products. All Cobra products purchased factory-direct or from our Authorized Resellers will come with a full one to three (1-3) year warranty from the date of the original retail purchase (see policy statement above for full warranty details and exclusions)

Standard accessories packaged with each model will have a one-year factory warranty. Accessory items have a one-year factory warranty. Shipping to our facility is not covered in our warranty. Return shipping is included within the US.

For the sake of clarity, 'repair or replace the Product or its defective part' does not include removal or installation work, costs or expenses which include but are not limited to labor

Cobra will not be responsible for lost packages.

For Products Purchased Outside the U.S.A.

Please contact your authorized local reseller or agent for warranty information

Trademark Acknowledgment

©2022 Cobra Electronics Corporation. Cobra and the snake design are proprietary trademarks of Cobra Electronics Corporation, USA, Other trademarks and trade names are those of their respective owners.

Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA

15


Emergency Alert Mode

The Emergency Alert feature can be used to signal members in your group of your need for urgent help. BX380 series radios will operate in an automatic. "hands-free" emergency control mode for a total of 30 seconds after activating the Emergency Alert. RX380 series radios in your group will automatically advance the speaker volume to the maximum setting and sound a warbling alert tone for 8 seconds. The alert tone is emitted from your own radio speaker and the receiving radios in your group. After the 8 seconds alert, any spoken words or incidental sounds at your end will be transmitted to the group for 22 seconds. For the 30 seconds duration of Emergency Alert mode, RX380 series radio controls and buttons will be locked to maximize reception of the emergency message




seconds 2. Release the button after the LCD backlight flashes and

the alert tone begins to sound. There is no need to continue to hold the Emergency Alert button or use PTT for your message to be transmitted. 3. After the alert tone ends you may speak into the

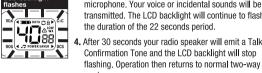


microphone. Your voice or incidental sounds will be transmitted. The LCD backlight will continue to flash for the duration of the 22 seconds period. the duration of the 22 seconds period.

4. After 30 seconds your radio speaker will emit a Talk

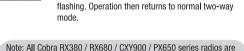

same channel and same privacy code. Radio brands other than Cobra RX380 / RX680 / CXY900 / PX650 series can receive the emergency alert signal, but may not respond with adjusted volume settings locked controls or a warbling alert tone. Users of other radio models set to the same channel and code will hear a steady tone for 8 seconds followed by the voice transmission for 22

fully compatible with the Emergency Alert feature if they are on the

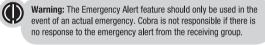



23

22