

User Manual

D863 Series



User Manual D863 Series

Thank you for purchasing this product. Lorex Technology Inc. is committed to providing our customers with a high quality, reliable security solution.

This manual refers to the following models:

D863A8

D863A6

For the latest online manual, downloads and product updates, and to learn about our complete line of accessory products, please visit our website at:

lorex.com



WARNING

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF THE PLUG TO THE WIDE SLOT AND FULLY INSERT.

Table of contents

1	Important Safeguards	1
1.1	General Precautions	1
1.2	Installation	1
1.3	Service	2
1.4	Use	3
2	Package Contents.....	4
3	Recorder Overview	5
3.1	Front Panel	5
3.2	Back Panel	5
4	Basic System Setup.....	7
4.1	STEP 1: Connect cameras	7
4.2	STEP 2: Connect router	7
4.3	STEP 3: Connect mouse.....	7
4.4	STEP 4: Connect monitor.....	7
4.5	STEP 5: Connect power.....	8
4.6	STEP 6: Lorex Setup Wizard.....	8
4.7	STEP 7: Upgrade Firmware to Latest Version (If Available)	9
4.8	Quick Access to System Information.....	9
5	Fusion Setup.....	11
5.1	Part One — Wired Setup	11
5.2	Part Two — Installing the Lorex Home App.....	11
5.3	Part Three — Connecting your Lorex Fusion Wi-Fi Camera	12
5.3.1	Connecting your Lorex Fusion Wi-Fi Camera to the Lorex Home App	12
5.3.2	Connecting your Lorex Fusion Wi-Fi Camera to your Recorder	13
5.4	Adjusting Fusion Settings.....	14
5.4.1	Turning Off Duplicate Notifications	14
5.4.2	Customize your Lorex Fusion Wi-Fi Camera’s Recording Settings.....	16
5.5	Using the Camera List Menu	16
5.5.1	Add Your Lorex Fusion Wi-Fi Camera to Your Recorder (Alternate Method).....	16
5.5.2	Remove Your Lorex Fusion Wi-Fi Camera From Your Recorder	17
5.5.3	Viewing Your Connected Lorex Fusion Wi-Fi Camera’s Status	17
5.5.4	Viewing Your Connected Lorex Fusion Wi-Fi Camera Firmware Version.....	18
5.5.5	Updating Your Connected Lorex Fusion Wi-Fi Camera’s Firmware.....	18
6	Camera Installation.....	22
6.1	Installation Tips	22
6.2	Installing Cameras	22
6.3	Connecting Camera Extension Cables	23
7	Using the Mouse	24
8	Using the On-Screen Display.....	25
8.1	Navigation Bar.....	25
8.2	Quick Menu	26
8.3	Camera Toolbar.....	26
8.4	On-Screen Keypads	27
9	Recording	29
9.1	Video Recording Types.....	29
9.2	Configuring Recording Quality	29
9.3	Setting the Recording Schedule	30

Table of contents

9.4	Setting up Scheduled or Manual Recording	31
9.5	Configuring hard disk drive Overwrite	32
10	Playback.....	34
10.1	Playing Back Video from the hard disk drive	34
10.2	Playback Controls	34
10.3	Playing Back Video from a USB Drive	36
10.4	Smart Search	37
10.5	Video Clip Backup	38
11	Backup.....	40
11.1	Formatting the USB Flash Drive	40
11.2	Backing Up Video	40
11.3	Using Video Clip Backup	41
11.4	Viewing Backed Up Files	41
11.4.1	Viewing Backed Up Files on PC	41
11.4.2	Viewing Backed Up Files on Mac	42
11.4.3	Lorex Player Controls	43
12	Motion Detection	45
12.1	Configuring Motion Detection	45
13	Active Deterrence.....	48
13.1	Automatic Deterrence Settings	48
13.2	Manually Activate Deterrence Features	50
14	Warning Light & Dual Warning Light Settings.....	52
14.1	Configuring Warning Light	52
14.2	Configuring Dual Warning Light	52
15	Smart Motion Detection.....	54
15.1	Ensuring Accurate Person & Vehicle Detection	54
15.2	Configuring Person & Vehicle Detection	55
15.3	Searching for Person & Vehicle Detection Events (Smart Search)	57
16	Face Detection.....	59
16.1	Ensuring Face Detection Accuracy	59
16.2	Configuring Face Detection	60
16.3	Displaying the Face Preview Panel	62
16.4	Searching for Face Detection Events (Smart Search)	63
16.5	Configuring the Face Database	64
16.5.1	Create a Face Database	64
16.5.2	Search for Registered Faces in the Database	66
16.5.3	Deleting Registered Faces or a Face Database	67
16.6	Configuring Face Recognition	69
16.6.1	Configuring General Alarm Mode for Face Recognition	69
16.6.2	Configuring Unfamiliar Face Alarm Mode for Face Recognition	71
16.7	Searching for Face Recognition Events (Smart Search)	73
17	Virtual Fence	75
17.1	Ensuring Virtual Fence Detection Accuracy	75
17.2	Configuring Virtual Fence	76
17.3	Searching for Virtual Fence Events (Smart Search)	79
18	Managing Passwords and User Accounts	81
18.1	User Accounts	81
18.1.1	Changing Passwords	81
18.1.2	Adding Users	82
18.1.3	Modifying Users	83
18.1.4	Deleting Users	83
18.2	Account Groups	83
18.2.1	Adding Groups	83

Table of contents

	18.2.2	Modifying Groups	84
	18.2.3	Deleting Groups	85
19		Using the Main Menu	86
	19.1	Playback	86
	19.2	Events	86
	19.2.1	Video Loss	86
	19.2.2	System Warnings	88
	19.2.3	Searching Event Logs	89
	19.3	Backup	90
	19.4	Display	90
	19.4.1	Setting the Recorder's Output Resolution	90
	19.4.2	Listen-In Audio	90
	19.4.3	Menu Transparency	91
	19.4.4	General Display Settings	92
	19.4.5	Configuring Sequence Mode	93
	19.5	Devices (Camera)	94
	19.5.1	Adjusting Camera Image Settings	94
	19.5.2	Configuring Snapshot Recording	94
	19.5.3	Changing On-Screen Overlay	95
	19.5.4	Configuring Privacy Masking	96
	19.5.5	Connecting Multi-Format Cameras (Cable Type)	97
	19.5.6	Camera Firmware Upgrade (CVI Upgrade)	97
	19.6	System	98
	19.6.1	Configuring General System Settings	98
	19.6.2	Setting Date & Time	99
	19.6.3	Configuring Holidays	100
	19.6.4	Configuring IP Filter	101
	19.6.5	Configuring IP Filter — Sync Time	102
	19.6.6	Configuring HTTPS (Advanced)	103
	19.6.7	Selecting DHCP or Static IP Address (TCP/IP)	104
	19.6.8	Configuring System Ports (Connection)	105
	19.6.9	Configuring Email Alerts	105
	19.6.10	P2P Setting	107
	19.6.11	Configuring hard disk drive Overwrite	108
	19.6.12	Configuring Recording File Length	108
	19.6.13	Configuring Pre-Recording	109
	19.6.14	Setting the Snapshot Schedule	109
	19.6.15	Formatting the hard disk drive	110
	19.6.16	Configuring hard disk drive Type	111
	19.6.17	Recording Calculator (Record Estimate)	112
	19.6.18	FTP (Advanced)	112
	19.6.19	Save System Settings to a USB Flash Drive	113
	19.6.20	Import System Settings from a USB Flash Drive	114
	19.6.21	Restoring Default Settings	115
	19.6.22	Upgrading Firmware Manually	115
	19.6.23	Automatic Firmware Upgrades	115
	19.7	Information	116
	19.7.1	Alarm Status	116
	19.7.2	Online User	117
	19.7.3	Network Load	118
	19.7.4	Test	118
	19.7.5	Version	119
	19.7.6	Disk	119
	19.7.7	BPS	120
	19.7.8	Log	120

Table of contents

19.8	Copying Settings to Another Channel.....	121
19.9	Help Menu	121
19.10	Sign Out Menu	121
20	Connecting Remotely using the Lorex Home Mobile App.....	123
21	Pan/Tilt/Zoom (PTZ) Cameras.....	124
21.1	Connecting PTZ Cameras to the Recorder.....	124
21.2	Basic PTZ Controls	125
21.3	Advanced PTZ Controls.....	126
21.4	Presets	127
21.5	Tours	127
21.6	Patterns	127
21.7	AutoScan	128
22	Connecting Audio Devices.....	129
23	Replacing the Hard Disk Drive.....	132
23.1	Removing the Hard Disk Drive	132
23.2	Installing a New Hard Disk Drive	135
24	DDNS Setup (Advanced).....	140
24.1	STEP 1: Port Forwarding	140
24.2	STEP 2: Create a Lorex Account	140
24.3	STEP 3: Activate Your Warranty	140
24.4	STEP 4: Sign Up for a DDNS Account.....	141
24.5	STEP 5: Enable DDNS on the Recorder.....	142
25	Troubleshooting.....	144
26	Technical Specifications.....	146
26.1	General	146
26.2	Inputs/Outputs	146
26.3	Display.....	146
26.4	Recording	146
26.5	Playback.....	146
26.6	Storage.....	146
26.7	Special Features	147
26.8	Smart Home.....	147
26.9	Connectivity	147
26.10	Additional Specifications	147
26.11	Disclaimers.....	147
27	Notices.....	149
27.1	FCC/IC	149
27.2	CE	149
27.3	Modification	149
27.4	RoHS.....	149
27.5	ICES-003	149

Important Safeguards

In addition to the careful attention devoted to quality standards in the manufacturing process of your product, safety is a major factor in the design of every instrument. However, safety is your responsibility too. This sheet lists important information that will help to ensure your enjoyment and proper use of the product and accessory equipment. Please read them carefully before operating and using your product.

1.1 General Precautions

1. All warnings and instructions in this manual should be followed.
2. Remove the plug from the outlet before cleaning. Do not use liquid aerosol detergents. Use a water-dampened cloth for cleaning.
3. Do not use this product in humid or wet places.
4. Keep enough space around the product for ventilation. Slots and openings in the storage cabinet should not be blocked.
5. It is highly recommended to connect the product to a surge protector to protect from damage caused by electrical surges. It is also recommended to connect the product to an uninterruptible power supply (UPS), which has an internal battery that will keep the product running in the event of a power outage.




CAUTION

Maintain electrical safety. Power line operated equipment or accessories connected to this product should bear the UL listing mark or CSA certification mark on the accessory itself and should not be modified so as to defeat the safety features. This will help avoid any potential hazard from electrical shock or fire. If in doubt, contact qualified service personnel.

1.2 Installation

1. **Read and Follow Instructions:** All the safety and operating instructions should be read before the product is operated. Follow all operating instructions.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** Comply with all warnings on the product and in the operating instructions.
4. **Polarization:** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.

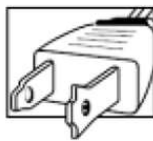

A grounding type plug has two blades and a third grounding prong.



The wide blade or the third prong are provided for your safety.

If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

5. **Power Sources:** This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your location, consult your video dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

-
6. **Overloading:** Do not overload wall outlets or extension cords as this can result in the risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicates damage or deteriorated insulation, have it replaced by your service technician.
 7. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
 8. **Surge Protectors:** It is highly recommended that the product be connected to a surge protector. Doing so will protect the product from damage caused by power surges. Surge protectors should bear the UL listing mark or CSA certification mark.
 9. **Uninterruptible Power Supplies (UPS):** Because this product is designed for continuous, 24/7 operation, it is recommended that you connect the product to an uninterruptible power supply. An uninterruptible power supply has an internal battery that will keep the product running in the event of a power outage. Uninterruptible power supplies should bear the UL listing mark or CSA certification mark.
 10. **Ventilation:** Slots and openings in the case are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the product manufacturer's instructions have been followed.
 11. **Attachments:** Do not use attachments unless recommended by the product manufacturer as they may cause a hazard.
 12. **Water and Moisture:** Do not use this product near water — for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, near a swimming pool and the like.
 13. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 14. **Accessories:** Do not place this product on an unstable cart, stand, tripod, or table. The product may fall, causing serious damage to the product. Use this product only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and use a mounting accessory recommended by the manufacturer.



15. **Camera Extension Cables:** Check the rating of your extension cable(s) to verify compliance with your local authority regulations prior to installation.
16. **Mounting:** The cameras provided with this system should be mounted only as instructed in this guide or the instructions that came with your cameras, using the provided mounting brackets.
17. **Camera Installation:** Cameras are not intended for submersion in water. Not all cameras can be installed outdoors. Check your camera environmental rating to confirm if they can be installed outdoors. When installing cameras outdoors, installation in a sheltered area is required.

1.3 Service

1. **Servicing:** Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.







2. **Conditions Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged.
 - If liquid has been spilled or objects have fallen into the product.
 - If the product has been exposed to rain or water.
 - If the product has been dropped or the cabinet has been damaged
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - When the product exhibits a distinct change in performance. This indicates a need for service.
3. **Replacement Parts:** When replacement parts are required, have the service technician verify that the replacements used have the same safety characteristics as the original parts. Use of replacements specified by the product manufacturer can prevent fire, electric shock, or other hazards.
4. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the product is in safe operating condition.

1.4 Use

1. **Cleaning:** Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
2. **Product and Cart Combination:** When product is installed on a cart, product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
3. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or “short-out” parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
4. **Lightning:** For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges.

Package Contents



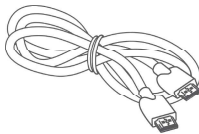
Your security recorder package includes the following components:

 <p>4K Ultra HD DVR</p>			
 <p>Power Adapter</p>	 <p>Ethernet Cable</p>	 <p>USB Mouse</p>	 <p>HDMI Cable</p>
<p> NOTE</p> <p>hard disk drive size, number of channels, and camera configuration may vary by model. Please refer to your package for specific details. Check your package to confirm that you have received the complete system, including all components shown above.</p>			

3.1 Front Panel



1. LED Indicators:

-  **HDD:** Glows to indicate hard disk drive is in normal state. Turns off when there is a hard disk drive error.
-  **POWER:** Glows to indicate the system is on.
-  **NETWORK:** Glows when network is in normal state. Turns off when there is a network error.

2. Info / Panic Button:

- From live view, press once to open the System Information screen.
- Press and hold for 3 seconds to activate the warning lights and sirens on all connected deterrence cameras.

3. **USB Port:** Connect a USB mouse (included) to control the system, or a USB flash drive (not included) for data backup or manual firmware updates.

3.2 Back Panel



1. **Video Inputs:** Connect Lorex HD or standard analog cameras to the system. For a full list of compatible cameras, visit lorex.com/compatibility.
2. **Audio IN/Audio OUT:** Connect an external microphone for single-channel audio recording, or an external speaker for system audio. For details on connecting external audio devices, see 22 *Connecting Audio Devices*, page 129.
3. **HDMI:** Connect to an HDMI monitor or TV (not included) to view the system interface.
4. **LAN:** Connect an RJ45 Ethernet cable for local and remote connectivity.
5. **A/B:** Connect RS485 cables.



NOTE


For full details on connecting PTZ cameras, see 21.1 *Connecting PTZ Cameras to the Recorder*, page 124.

6. **USB Port:** Connect a USB mouse (included) to control the system, or a USB flash drive (not included) for data backup or manual firmware updates.


7. **DC 12V:** Connect the included power adapter.
8. **VGA:** Connect a VGA monitor (not included) to view the system interface.
9. **ON/OFF Switch:** Turns the DVR on/off.

4.1 STEP 1: Connect cameras

Re-configure your cameras prior to selecting a permanent mounting location by connecting the cameras and cables to your recorder locally. Push and twist the BNC connector clockwise to secure it to the BNC port.

 NOTE
<p>This step is for verification of the camera image only. It is recommended to connect cameras to a nearby power adapter for this step. The Lorex Setup Wizard that runs at startup will assist you in naming and organizing your cameras, so it is also recommended to leave cameras connected until the wizard asks you to install cameras in their permanent mounting location.</p>



 NOTE
<ul style="list-style-type: none"> • Before selecting a permanent mounting location for your cameras, see 6 <i>Camera Installation</i>, page 22 for important notes and installation tips. • The extension cable must be a single stretch of cable between the recorder and camera. You cannot connect multiple extension cables to each other.

4.2 STEP 2: Connect router

Connect the recorder to your router using the included Ethernet cable.



4.3 STEP 3: Connect mouse

Connect the included mouse to a USB port on the recorder.



4.4 STEP 4: Connect monitor

Connect the recorder to a monitor using the included HDMI cable (supports up to 4K resolution).



OR

Connect the recorder to a monitor using a VGA cable (not included - supports up to 1080p resolution).



CAUTION

The system will automatically match the resolution of the connected monitor the first time you use the recorder. If you need to switch monitors, make sure you set the recorder to an output resolution supported by the new monitor **BEFORE** switching. See 19.4.1 *Setting the Recorder's Output Resolution*, page 90 for details.

4.5 STEP 5: Connect power

Use the included power adapter to connect the recorder to a nearby outlet. Turn the recorder on using the power switch on the back panel.




4.6 STEP 6: Lorex Setup Wizard

When you first power up your recorder, the **Lorex Setup Wizard** will begin. The Wizard will help you configure core system settings and set up your cameras. It is recommended to review , page before choosing a permanent mounting position for your cameras.



NOTE


For detailed mounting instructions for your particular camera model, refer to your camera's documentation on lorex.com.

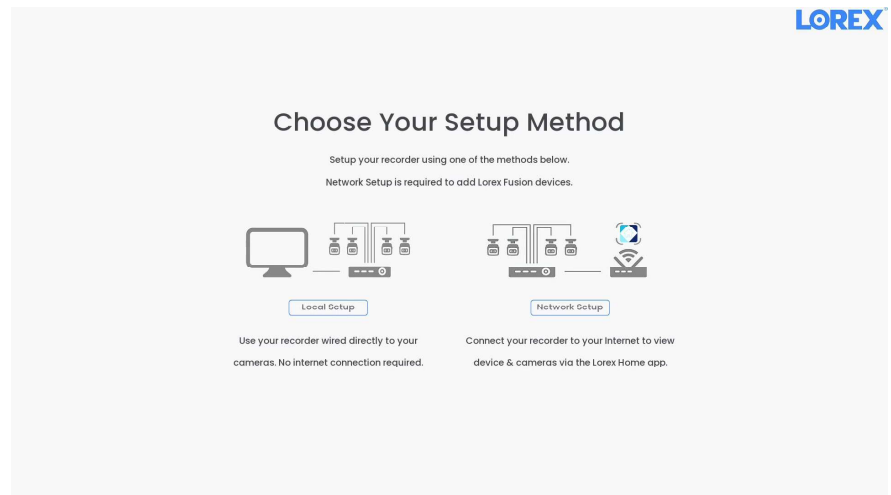

You will also create a password that will be used to access the unit from now on. For future reference, it is recommended that you record your password in a secure location.

4.7 STEP 7: Upgrade Firmware to Latest Version (If Available)

If a firmware upgrade is available, you will be asked to install it once the system starts up. Firmware is software that's embedded in a piece of hardware. When Lorex releases the latest firmware version for the recorder, you will need to upgrade the existing firmware to the latest release. This is known as a firmware upgrade. It is recommended to upgrade your system firmware, client software, and your mobile app to the latest version to ensure remote connectivity to the system and to support newly added features.

	NOTE
You must connect your recorder to a router with Internet access in order to get automatic firmware upgrades.	


If a firmware upgrade is available:

1. After startup, a notification will appear asking you to upgrade the firmware. Click **OK** to upgrade.
2. Enter the system user name (default: **admin**) and your secure password, then click **OK**. Wait for the firmware update to complete. The system will restart once the firmware has been upgraded.


	CAUTION
DO NOT POWER OFF THE SYSTEM OR DISCONNECT THE POWER CABLE DURING FIRMWARE INSTALLATION.	

4.8 Quick Access to System Information

Perform one of the following actions to bring up the system information window. This window contains vital system information including the model number, serial number, and device ID.


	NOTE
The QR code shown on this screen can be scanned during mobile setup to enter the system's device ID.	

Version	
Device ID	LHVZ8574B50611B
Device Model	D863A6
Firmware Version	00001
IE Version	3.2.7.16163302
Build Date	05-27-2022
SN	ND012205018037
IP Address	192.168.5.64
MAC Address	00:1f:54:88:7a:5d
Domain Name	DDNS setup is not available
HDD Capacity	0G/3680G
Video Format	NTSC
Client Port	35000
HTTP Port	80
P2P Status	Online




To quickly open a window that displays important system information:

- From the Live View display, right-click to open the Quick Menu, then click **Info**.
- OR**
- Press the front panel button on the recorder.

 **NOTE**

Do not press and hold the button. The front panel button doubles as a panic button that activates warning lights and sirens for deterrence cameras if held for 3 seconds.



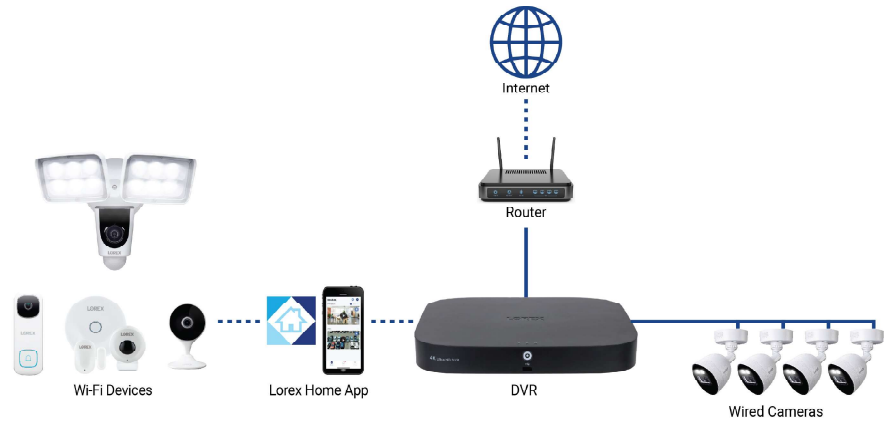

Our Lorex Fusion recorders incorporate the newest (fusion) technology to connect both Lorex wired and Lorex Fusion Wi-Fi cameras, doorbells, floodlights, and motion sensors to one system. All Lorex Fusion Wi-Fi cameras and accessories connect to one recorder for continuous 24/7 recording and private local storage. View on any display or access everything from the Lorex Home app for easy control of all devices.

NOTE

For a list of compatible Lorex Fusion Wi-Fi cameras and accessories, visit lorex.com/compatibility.

5.1 Part One — Wired Setup

For Fusion setup, your recorder must be powered on and connected to a monitor. Refer to *4 Basic System Setup*, page 7 for instructions on setting up your wired system.

NOTE

Network setup is required for your system — use the included Ethernet cable to connect your recorder to your Wi-Fi router.

5.2 Part Two — Installing the Lorex Home App


Download the Lorex Home app to register an account and add your Fusion devices.

To enable remote viewing for the mobile app, you will need to:

- Have high speed Internet.
- Have an upload speed of 6Mbps for one 4K channel and at least 20Mbps for the whole system.

- Access your recorder's **Device ID** QR code. From the Live View display, right-click for the Quick Menu, then click **Info**.


Version	
Device ID	LHVZ8574B50611B
Device Model	D863A6
Firmware Version	00001
IE Version	3.2.7.16163302
Build Date	05-27-2022
SN	ND012205018037
IP Address	192.168.5.64
MAC Address	00:1f:54:88:7a:5d
Domain Name	DDNS setup is not available
HDD Capacity	0G/3680G
Video Format	NTSC
Client Port	35000
HTTP Port	80
P2P Status	Online



To connect your Fusion recorder to the app:

1. Download the Lorex Home app from the **App Store™** or **Google Play Store™**.



2. Register an account.
3. In-app, tap the  icon to add your recorder.
4. Follow the in-app steps to complete the setup.


5.3 Part Three — Connecting your Lorex Fusion Wi-Fi Camera

Connect your Lorex Fusion Wi-Fi camera to the Lorex Home app and then from your recorder scan your network to add it.

5.3.1 Connecting your Lorex Fusion Wi-Fi Camera to the Lorex Home App

Follow the Lorex Home app steps to add your Lorex Fusion Wi-Fi camera. Refer to your camera's documentation at help.lorexttechnology.com for detailed setup instructions. Search your camera's model number to access the product support page.

To connect your Lorex Fusion Wi-Fi camera to the Lorex Home app:

1. Open the Lorex Home app.
2. In-app, tap the  icon to add your Wi-Fi camera.
3. Power on your Wi-Fi camera and scan the camera's **Device ID** QR code.
4. Follow the in-app steps to complete the setup.




NOTE


Ensure your Lorex Fusion Wi-Fi camera and Fusion recorder are connected to the same Lorex Home app account and network.

5.3.2 Connecting your Lorex Fusion Wi-Fi Camera to your Recorder


Add compatible Lorex Fusion Wi-Fi cameras and accessories onto Fusion Wi-Fi channels on the recorder. To learn the exact number of Fusion Wi-Fi channels for this system, see 26 *Technical Specifications*, page 146.

To connect your Fusion Wi-Fi camera to the recorder:


1. From the Live View display, click the pair icon  in the center of the Wi-Fi channel's screen.

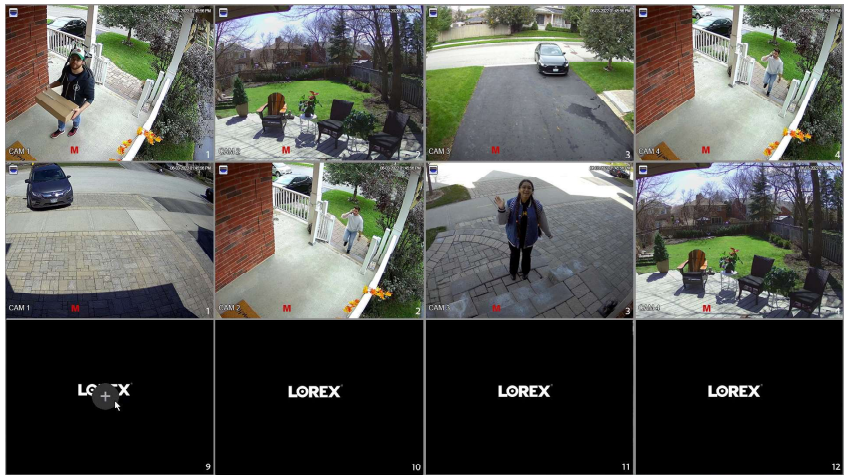


2. Click Device Search.

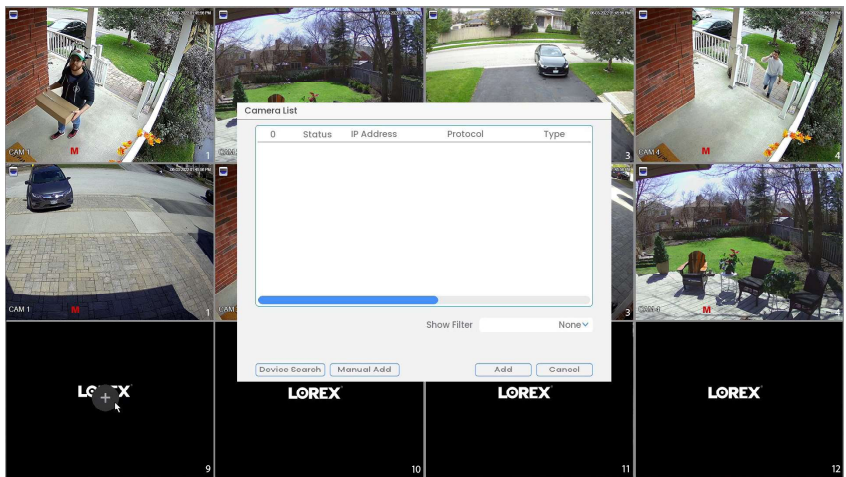

- Double-click on your Lorex Fusion Wi-Fi camera to add it.

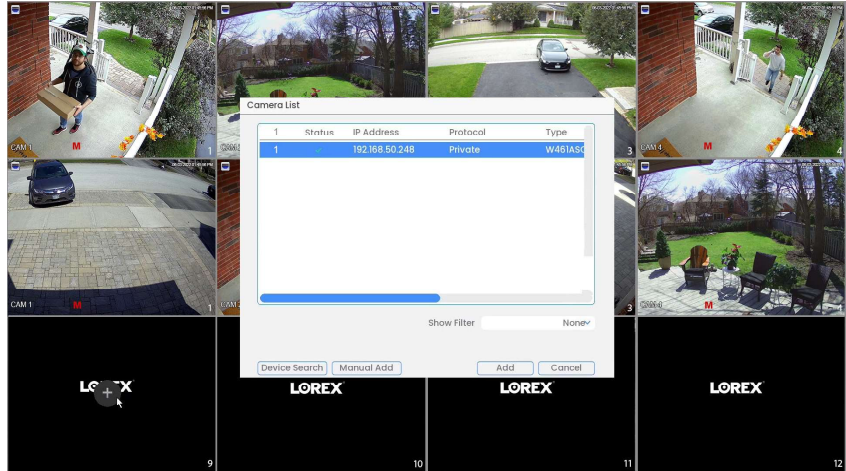

- Right-click to exit the screen, then enter your Lorex Fusion Wi-Fi camera's password created in-app.

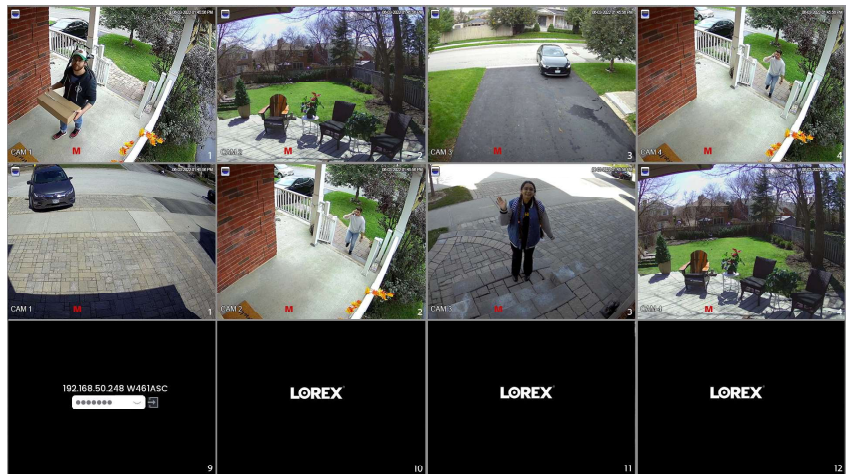

NOTE

It may take a few minutes for your Lorex Fusion Wi-Fi camera's video feed to appear.

5.4 Adjusting Fusion Settings


Ensure you turn off duplicate notifications in the Lorex Home app and adjust preferences for your recording schedule on the recorder.

5.4.1 Turning Off Duplicate Notifications


After Fusion setup, your Lorex Fusion Wi-Fi camera is connected to the app twice. To avoid duplicate notifications, turn off alerts for your Lorex Fusion Wi-Fi camera that's connected under your Fusion recorder.


To turn off duplicate notifications:

1. Open the Lorex Home app.

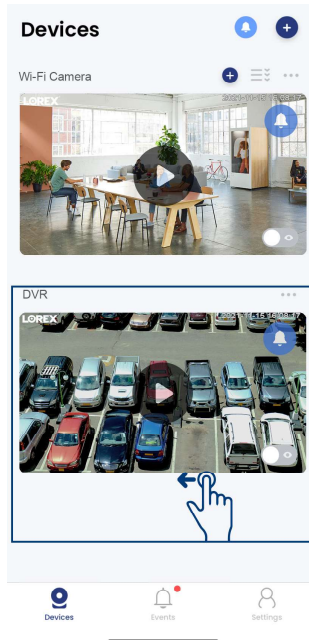

2. Under your Fusion recorder, swipe left to find your Lorex Fusion Wi-Fi camera.

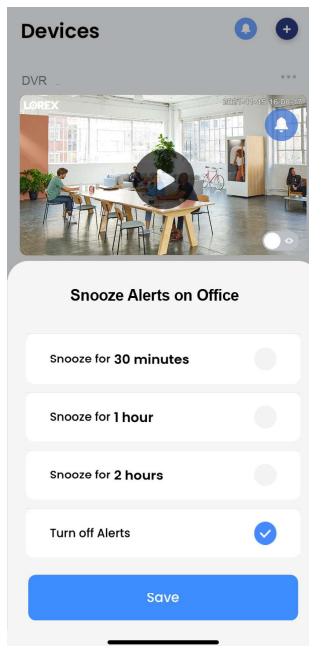

3. Tap on your Lorex Fusion Wi-Fi camera's notification icon .
4. Tap on **Turn off Alerts**, and then **Save**.

5.4.2 Customize your Lorex Fusion Wi-Fi Camera's Recording Settings


After Fusion setup, your Lorex Fusion Wi-Fi camera's recording settings will automatically adjust to **Continuous**, recording 24/7 directly to your recorder's hard disk drive. To adjust your Lorex Fusion Wi-Fi camera's recording settings, see 9 *Recording*, page 29.

5.5 Using the Camera List Menu

The **Camera List** menu provides an alternate and more comprehensive method of adding Lorex Fusion Wi-Fi cameras and accessories as well as viewing your connected camera's status, current firmware version, and firmware updates.

5.5.1 Add Your Lorex Fusion Wi-Fi Camera to Your Recorder (Alternate Method)


Search your network for your Lorex Fusion Wi-Fi cameras and accessories to add to your recorder.

 **NOTE**

Network setup is required for your system — use the included Ethernet cable to connect your recorder to your router.

To add your Lorex Fusion Wi-Fi camera:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Devices**, then **Device List**. Click the **Camera List** tab from the side panel, then the **Add Camera** tab from the top panel.

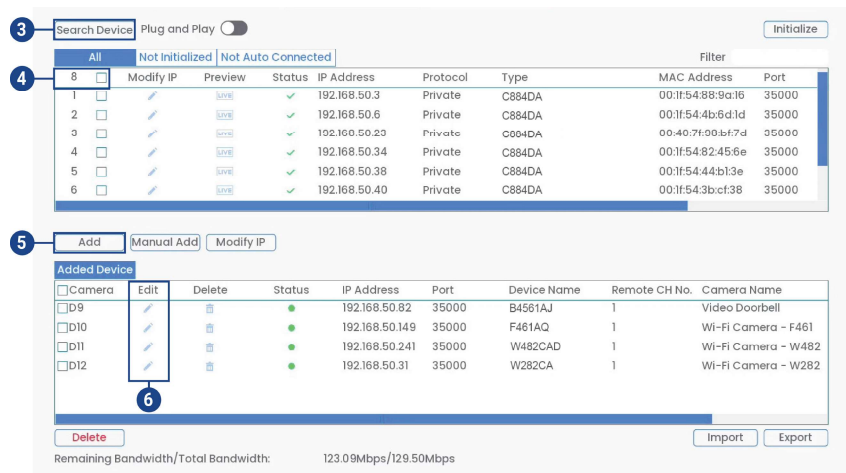

3 Search Device Plug and Play Initialize

4

	All	Not Initialized	Not Auto Connected	Filter
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

5 Add Manual Add Modify IP


6


Camera	Edit	Delete	Status	IP Address	Port	Device Name	Remote CH No.	Camera Name
<input type="checkbox"/> D9	<input type="checkbox"/>	<input type="checkbox"/>	●	192.168.50.82	35000	B4561AJ	1	Video Doorbell
<input type="checkbox"/> D10	<input type="checkbox"/>	<input type="checkbox"/>	●	192.168.50.149	35000	F461AQ	1	Wi-Fi Camera - F461
<input type="checkbox"/> D11	<input type="checkbox"/>	<input type="checkbox"/>	●	192.168.50.241	35000	W482CAD	1	Wi-Fi Camera - W482
<input type="checkbox"/> D12	<input type="checkbox"/>	<input type="checkbox"/>	●	192.168.50.31	35000	W282CA	1	Wi-Fi Camera - W282

Delete Import Export

Remaining Bandwidth/Total Bandwidth: 123.09Mbps/129.50Mbps

3. Click **Search Device**. The system searches the network for compatible Lorex Fusion Wi-Fi cameras and accessories.
4. Check the camera(s) that you would like to add.
5. Click **Add**.

6. Click the **Edit** icon .

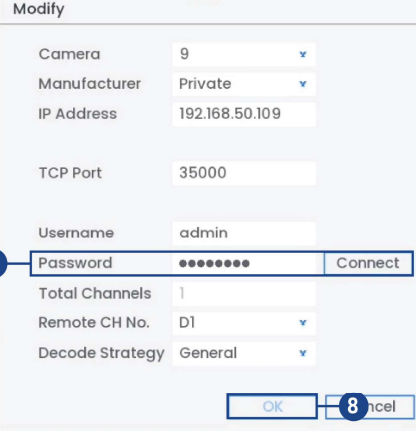


7. Enter your Lorex Fusion Wi-Fi camera's password created in the Lorex Home app, then click **Connect**.
8. Click **OK**. The Status indicator turns green to show the camera is successfully connected.

5.5.2 Remove Your Lorex Fusion Wi-Fi Camera From Your Recorder

You can easily remove your Lorex Fusion Wi-Fi camera or accessory from your recorder.

To remove your Lorex Fusion Wi-Fi camera:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Devices**, then **Device List**. Click the **Camera List** tab from the side panel, then the **Add Camera** tab from the top panel.

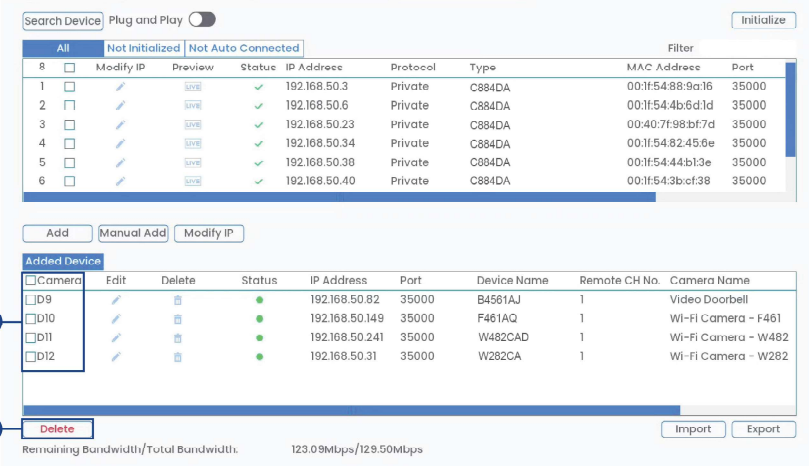

ID	Modify IP	Preview	Status	IP Address	Protocol	Type	MAC Address	Port
1				192.168.50.3	Private	C884DA	00:f5488:9a16	35000
2				192.168.50.6	Private	C884DA	00:f544b6d1d	35000
3				192.168.50.23	Private	C884DA	00:40:7f:98:bf:7d	35000
4				192.168.50.34	Private	C884DA	00:f5482456e	35000
5				192.168.50.38	Private	C884DA	00:f5444b13e	35000
6				192.168.50.40	Private	C884DA	00:f543bcf38	35000

Camera	Edit	Delete	Status	IP Address	Port	Device Name	Remote CH No.	Camera Name
D9				192.168.50.82	35000	B4561AJ	1	Video Doorbell
D10				192.168.50.149	35000	F461AQ	1	Wi-Fi Camera - F461
D11				192.168.50.241	35000	W482CAD	1	Wi-Fi Camera - W482
D12				192.168.50.31	35000	W282CA	1	Wi-Fi Camera - W282

3. Check the camera(s) that you would like to remove.
4. Click **Delete**.


5.5.3 Viewing Your Connected Lorex Fusion Wi-Fi Camera's Status

View the connection and alarm status for all connected Lorex Fusion Wi-Fi cameras and accessories.

To view your connected Lorex Fusion Wi-Fi camera's status:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Devices**, then **Device List**. Click the **Camera List** tab from the side panel, then the **Status** tab from the top panel.

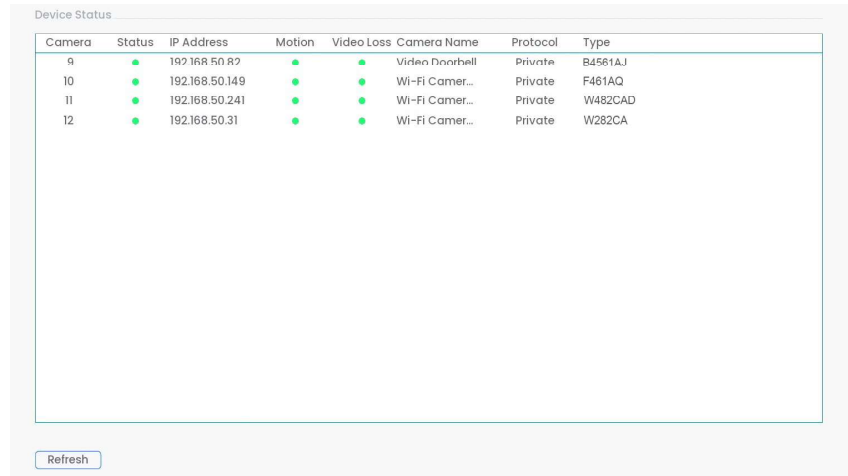

The screenshot shows a 'Device Status' window with a table containing the following data:

Camera	Status	IP Address	Motion	Video Loss	Camera Name	Protocol	Type
9	●	192.168.50.82	●	●	Video Doorbell	Private	B4561AJ
10	●	192.168.50.149	●	●	Wi-Fi Camer...	Private	F461AQ
11	●	192.168.50.241	●	●	Wi-Fi Camer...	Private	W482CAD
12	●	192.168.50.31	●	●	Wi-Fi Camer...	Private	W282CA


A 'Refresh' button is located at the bottom left of the table area.

5.5.4 Viewing Your Connected Lorex Fusion Wi-Fi Camera Firmware Version

View firmware versions for connected Lorex Fusion Wi-Fi cameras and accessories.

To view a Lorex Fusion Wi-Fi camera's firmware version:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **Devices**, then **Device List**. Click the **Camera List** tab from the side panel, then the **Firmware** tab from the top panel.

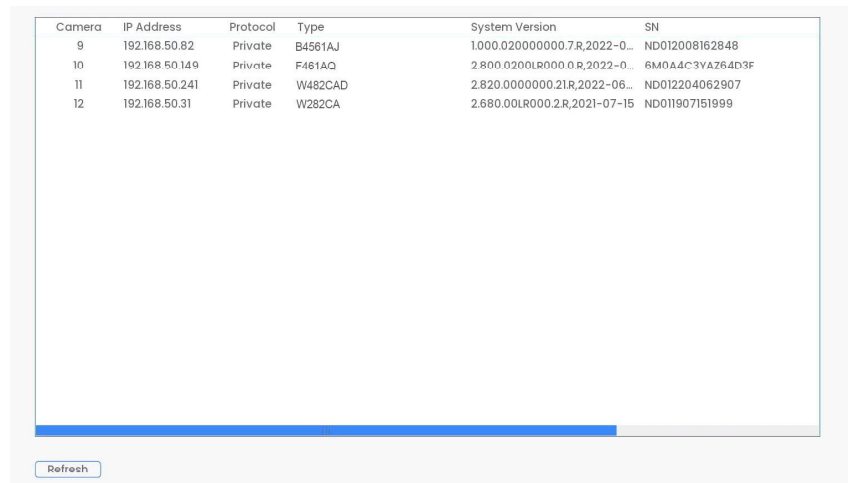

The screenshot shows a 'Firmware' window with a table containing the following data:

Camera	IP Address	Protocol	Type	System Version	SN
9	192.168.50.82	Private	B4561AJ	1.000.020000000.7.R,2022-0...	ND012008162848
10	192.168.50.149	Private	F461AQ	2.800.0200LR000.0.R,2022-0...	6M0A4C3VAZ64D3F
11	192.168.50.241	Private	W482CAD	2.820.0000000.21.R,2022-06...	ND012204062907
12	192.168.50.31	Private	W282CA	2.680.00LR000.2.R,2021-07-15	ND011907151999

A 'Refresh' button is located at the bottom left of the table area.


5.5.5 Updating Your Connected Lorex Fusion Wi-Fi Camera's Firmware

You can only update the firmware for connected Lorex Fusion Wi-Fi cameras and accessories through the Lorex Home app. Firmware updates provide enhanced functionality for your cameras.

To check or update your Lorex Fusion Wi-Fi camera's firmware:

- Open your Lorex Home app.


2. Tap the **Device Settings** icon **⋮**.

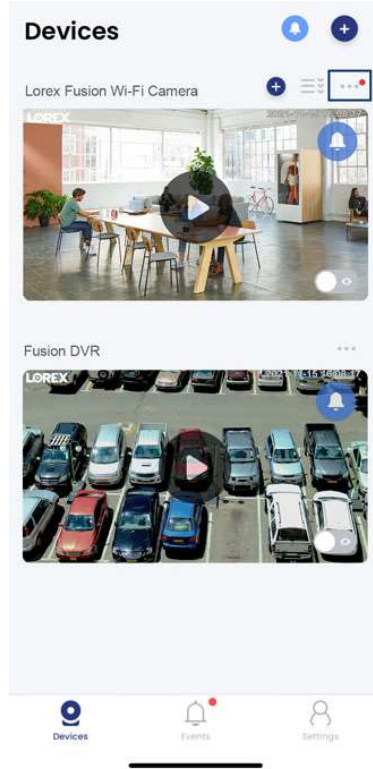

3. Tap on **Firmware**.



-
- The current firmware version will be displayed. If the **Latest Version** is available, tap **Update**.

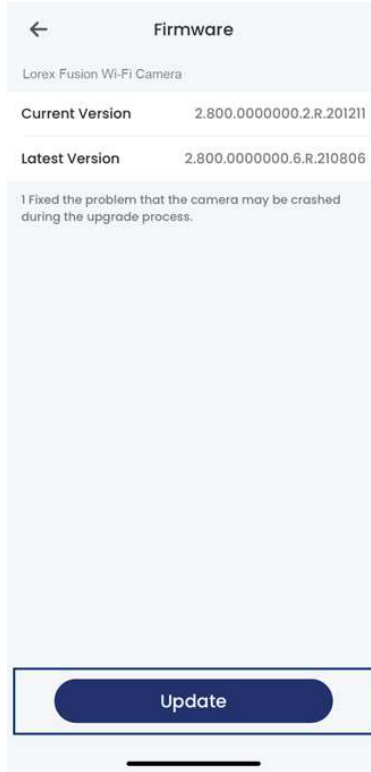

The following chapter provides general setup instruction and installation tips for security cameras.

**NOTE**

This section covers connection of cameras to the recorder and general installation tips only. Please refer to the documentation that came with your camera or search for your camera model number at lorex.com for specific installation instructions.

6.1 Installation Tips

General camera installation tips that apply to all camera models. Please review before selecting a permanent mounting location for your cameras.

- Pre-configure the cameras before permanent installation. Plan where you will route the wiring for the camera and where you will aim the camera.
- Place your camera close to the area of interest. The best position is 10ft/3m above ground, angled 15° down.
- Point the camera where there is the least amount of obstructions (e.g., tree branches).
- Mount the camera where the lens is away from direct and intense sunlight.
- Plan your cable wiring so that it does not interfere with power lines or telephone lines.
- Secure cabling so that it is not exposed or easily cut.
- Mount the camera in an area that is visible, but out of reach.
- Avoid pointing the camera at a glass window to see outside. This may result in a bright white ring in the night vision image, as the light from the night vision LEDs may reflect off the glass.
- Adjust the camera angle so that it covers an area with high traffic.
- In "high-risk" locations, have multiple cameras point in the same area. This provides camera redundancy if a vandal attempts to damage one of your cameras.
- For outdoor rated cameras, installation in a sheltered location is recommended to ensure the camera lens remains clear of rainwater and other precipitation.

6.2 Installing Cameras

1. Mount the cameras to the desired mounting surface according to the instructions that came with the cameras (visit lorex.com for the most up-to-date documentation). Choose a firm mounting surface that can support the full weight of the camera.

**NOTE**

If you wish to mount cameras to drywall, it is recommended to use the included drywall anchors.

- Adjust the camera stand to ensure that the camera has a satisfactory view of the area you would like to monitor. Stand configuration depends on the mounting surface you have chosen (see below for suggested stand configurations).



Wall Mount


Ceiling Mount

**NOTE**

Counter / table top mounting is not recommended if you are planning to utilize smart motion detection. Please refer to a smart detection feature chapter for the recommended camera angling to ensure accurate detection for that feature.


6.3 Connecting Camera Extension Cables

The extension cable must be a single stretch of cable between the recorder and camera. You cannot connect multiple extension cables to each other. For all extension cable options, including maximum extension cable length, refer to your camera's documentation at lorex.com.

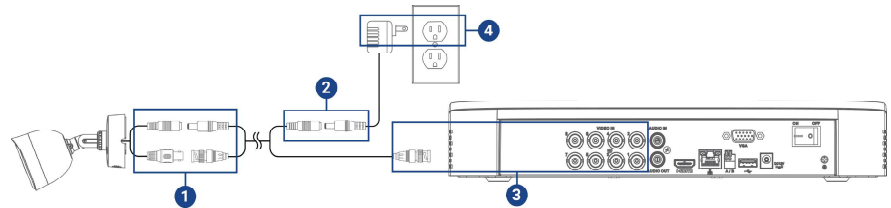

- Connect the male power connector on the BNC extension cable to the female power connector on the camera. Connect the BNC connector to the camera.
- Connect the female power connector on the BNC extension cable to the power adapter.
- Connect the BNC connector to one of the **Video Input** ports on the rear panel of the recorder.
- Plug the camera power adapter to a power outlet.

The mouse is the primary control device for the system. Connect the included mouse to the USB port on the front or rear panel.

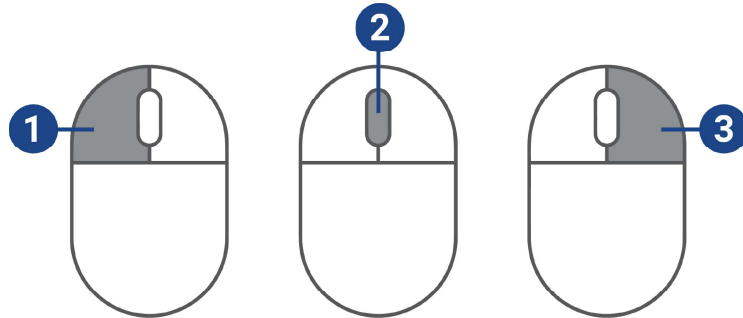

1. **Left-button:**

- In live view, while in a split-screen display mode, click an individual channel to view it in full-screen. Click again to return to the split-screen display mode.
- While navigating menus, click to open a menu option.

2. **Scroll wheel:** In live view, use the scroll wheel to zoom in/out.

3. **Right-button:**

- During live view, right-click anywhere on the screen to open the Quick Menu.
- Within system menus, right-click to exit menus.

Use the system's on-screen display to navigate menus and configure options and settings.

NOTE

To access the on-screen display, you must connect the included mouse and a monitor (not included) to the recorder. See , page for full instructions.

8.1 Navigation Bar


The **Navigation Bar** along the bottom of the recorder's Live View display allows you to access the Main Menu and control basic functions of the recorder.

To show the Navigation Bar:

- Hover the mouse pointer near the bottom of the Live View screen.

NOTE

You can also lock the Navigation Bar to have it displayed at all times. See below for details.



1. **Main Menu:** Select for quick access to main operational settings, such as playback, backup, network, and shutdown. See 19 *Using the Main Menu*, page 86 for full instructions on using the Main Menu.
2. **Help Menu:** Offers additional information and support on using the system.
3. **Viewing Modes:** Select how many channels are shown on screen during live viewing.
4. **Previous / Next Channel(s):** Display previous / next channel(s) in single or quad channel viewing mode.
5. **Sequence Mode:** Start or stop Sequence Mode. In Sequence Mode, the system display will automatically cycle through connected channels every few seconds.
6. **Playback:** Opens the Playback Menu. This allows you to search for video recordings saved on the recorder's hard disk drive. For details on using the Playback menu, see 10 *Playback*, page 34.
7. **Smart Search:** Filter through recorded video when searching.
8. **Camera List:** Search for wired cameras and (with Internet connection) Lorex Fusion Wi-Fi cameras and accessories to add to the recorder.
9. **Pan/Tilt/Zoom:** Control and configure settings for Pan-Tilt-Zoom (PTZ) cameras. For full instructions on connecting and using PTZ cameras, see 21 *Pan/Tilt/Zoom (PTZ) Cameras*, page 124.
10. **Image Settings:** Click to open camera image settings. For full details, see , page .
11. **Alarm Status:** View alarms in progress. See for details.
12. **Channel Info:** Click to access status information about connected cameras.
13. **Network:** View and configure network options, including setting a dynamic or static IP address. For full instructions on configuring network options, see 19.6.7 *Selecting DHCP or Static IP Address (TCP/IP)*, page 104.
14. **Hard disk drive Manager:** Configure hard disk drive read/write options (see 19.6.16 *Configuring hard disk drive Type*, page 111 for details) or format drives (see 19.6.15 *Formatting the hard disk drive*, page 110 for details).
15. **USB Manager:** Click to access options for connected USB thumb drives (not included). You can backup video, logs, or system configurations and install firmware upgrades.
16. **Updates:** Check for available firmware updates — requires an Internet connection.
17. **Warning Light & Siren — Deterrence Cameras Only:** Click to activate warning lights and sirens for all connected deterrence cameras. Click again to deactivate.

8.2 Quick Menu

The **Quick Menu** gives you quick access to functions which can also be accessed using the Navigation Bar.

To open the Quick Menu:

- Right-click anywhere on the Live View screen.
1. **Main Menu:** See 19 *Using the Main Menu*, page 86 for full instructions on using the Main Menu.
 2. **Playback:** Opens the Playback Menu. This allows you to search for video recordings saved on the recorder's hard disk drive. For details on using the Playback menu, see 10 *Playback*, page 34.
 3. **Smart Search:** Filter through recorded video when searching.
 4. **Viewing Modes:** Select how many channels are shown on screen during live viewing.
 5. **Sequence:** Start or stop Sequence Mode. In Sequence Mode, the system display will automatically cycle through connected channels every few seconds.
 6. **Image Settings:** Configure camera image settings per channel, such as brightness, contrast, etc. For full details on configuring camera image settings, see 19.5.1 *Adjusting Camera Image Settings*, page 94.
 7. **Pan/Tilt/Zoom:** Control and configure settings for Pan-Tilt-Zoom (PTZ) cameras. For full instructions on connecting and using PTZ cameras, see 21.1 *Connecting PTZ Cameras to the Recorder*, page 124.
 8. **Auto Focus:** Access zoom/focus controls for auto-focus cameras (not included).
 9. **Manual Record:** Select manual recording and snapshot options. See 9.4 *Setting up Scheduled or Manual Recording*, page 31 for details.
 10. **Live Mode:** Select two options from Live Mode. 1) **Continuous** for a full view of all channels live streaming or set to 2) **AI Mode** to display Face Detection results in the Face Preview Panel during Live View.
 11. **Disable Beep:** Temporarily disable the current audible warning.



NOTE

Audible warnings can be given for a wide range of events, such as hard disk drive issues, network connectivity, motion detection events and more. Disabling the current audible alarm using the Quick Menu will silence the recorder only for a short time, then audible warnings will continue.

12. **Info:** Displays system information, such as model number, device ID, IP address, etc.
13. **Help Menu:** Offers additional information and support on using the system.

8.3 Camera Toolbar

The **Wired Camera Toolbar** and the **Lorex Fusion Wi-Fi Camera Toolbar** lets you perform quick functions for a specific channel on the recorder.

To use the Wired Camera Toolbar:

- Hover the mouse near the top of a channel with a connected camera.




1. **Instant Playback:** Plays back recent video from the selected channel. By default, instant playback is set to play the last 5 minutes of recorded video. See 19.6.1 *Configuring General System Settings*, page 98 to set a custom playback length.
2. **Digital Zoom:** Click to enable digital zoom. Click-and-drag over the camera image to zoom in on the selected area. Right-click to return to the full camera image. You can then repeat to zoom in on a different area, or click the icon again to disable zoom.
3. **Real-time Backup:** Click to start recording the current channel manually. Click again to stop recording and save the video file to a USB flash drive (not included).
4. **Snapshot:** Save a snapshot of the current camera image to a USB flash drive (not included).

5. **Mute/Unmute:** Click to mute/unmute listen-in audio.
6. **Warning Light — Deterrence Cameras Only:** Click to manually turn on the camera's warning light for 10 seconds.
7. **Siren — Deterrence Cameras Only:** Click to manually turn on the camera's siren for 10 seconds.
8. **Dual Warning Light — Deterrence Cameras Only:** Click to manually turn on the camera's dual warning light for 10 seconds.

To use the Lorex Fusion Wi-Fi Camera Toolbar:

- Hover the mouse near the top of a channel with a connected camera.

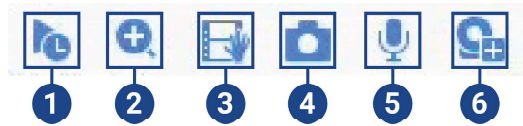

1. **Instant Playback:** Plays back recent video from the selected channel. By default, instant playback is set to play the last 5 minutes of recorded video. See 19.6.1 *Configuring General System Settings*, page 98 to set a custom playback length.
2. **Digital Zoom:** Click to enable digital zoom. Click-and-drag over the camera image to zoom in on the selected area. Right-click to return to the full camera image. You can then repeat to zoom in on a different area, or click the icon again to disable zoom.
3. **Real-time Backup:** Click to start recording the current channel manually. Click again to stop recording and save the video file to a USB flash drive (not included).
4. **Snapshot:** Save a snapshot of the current camera image to a USB flash drive (not included).
5. **Two-way Audio:** (*Two-way audio cameras only*) Click to enable two-way talk on compatible cameras. To be able to listen-in to sounds occurring around your camera an external speaker (not included) must be plugged into the recorder.
6. **Add Camera:** Click to open the Camera List page and search for a Lorex Fusion Wi-Fi camera to add over the network. Internet connection required using an Ethernet cable.

8.4 On-Screen Keypads

The **Full Keypad** is used to input alphanumeric characters, such as in user name or password fields. The **Number Keypad** is used to input numeric characters only, such as in the time or date fields.

To use the Full Keypad:

- Using the mouse, click on a field where alphanumeric characters are entered, such as the user name and password fields.
- The Full Keypad opens:



- Click **Shift** to switch between uppercase and lowercase characters.
- Right-click to close the Full Keypad.

To use the Number Keypad:

- Using the mouse, click on a field where numeric characters are entered, such as the date or time fields.
- The Number Keypad opens:



- Right-click to close the Number Keypad.

By default, the system is set to immediately record video from connected cameras continuously, 24 hours a day. You can customize the recording settings according to your needs.

9.1 Video Recording Types

The system supports the following recording types:

- **Continuous recording:** Normal, continuous recording. A **C** icon is shown in the bottom left-hand corner of the camera image when continuous recording is in progress.
- **Motion recording:** Motion-triggered video recording. An **M** icon is shown in the bottom left-hand corner of the camera image when motion is detected.

9.2 Configuring Recording Quality

The system uses two video recording streams: a **Main Stream** and a **Sub Stream**. The Main Stream is used to record videos to the local recorder storage. Setting the main stream to the highest quality is recommended. The Sub Stream records lower resolution video for efficient streaming to devices over the Internet. You can customize the video quality settings for these streams according to your needs.

To configure recording quality:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Devices**, then **Record Settings**. Click the **Recording** tab from the side panel.

3 Camera 1

Main Stream		Sub Stream	
Super encode	<input type="checkbox"/>	Video	<input checked="" type="checkbox"/>
Type	Continuous	Type	Sub Stream 1
Compression	H.265	Compression	H.264H
Resolution	(4k)3840x2160	Resolution	(D)704x480
Frame Rate(FPS)	7	Frame Rate(FPS)	7
Bit Rate Type	CBR	Bit Rate Type	CBR
Quality	4	Quality	4
Bit Rate(kbps)	4096	Bit Rate(kbps)	256

4

Audio Setting





Audio Setting

Audio recording and/or use of listen in audio without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

Default Copy Apply Cancel 5

3. Select the camera you want to configure.

4. Configure the following settings. Except where noted, options for Main Stream and Sub Stream are the same:

- **Super Codec: (Main Stream only)** Click to enable () / disable () Super Codec. This setting will help reduce system requirements for unimportant recordings to maximize hard disk drive storage.
- **Video: (Sub Stream only)** Click to enable () / disable () Substream video.



CAUTION

Disabling Substream video will prevent you from viewing the system remotely over the Internet. You should disable the Substream only if you plan on viewing and configuring the system locally.

- **Type:** For the Main Stream, you can set different recording quality settings for **Continuous**, **MD (Motion Detect)**, and **Alarm** recording. Select the type of recording you want to configure.
 - **Compression:** Select the video compression type. To use the least amount of disk space, it is recommended to select H.265 for H.265 compatible cameras.
 - **Resolution:** Select the resolution the selected camera will be recorded at. Higher resolutions create a more detailed image, but take up more hard disk drive space to record and require more bandwidth to stream to connected computers or mobile devices.
 - **Frame Rate (FPS):** Select the frame rate in Frames Per Second (FPS) that each stream will record at. A higher frame rate provides a smoother picture, but will require more storage and bandwidth.
 - **Bit Rate Type:** Select **CBR (Constant Bit Rate)** or **VBR (Variable Bit Rate)** to determine the bit rate type. If you select VBR, select the **Quality** from **1** (lowest) to **6** (highest).
 - **Bit Rate (Kbps):** Select the bit rate for each recording stream. Higher bit rates provide better image quality, but will require more storage and bandwidth.
5. Click **Apply** to save changes.
6. (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).

9.3 Setting the Recording Schedule


You can set a custom recording schedule according to your needs. For example, you can set the system to record continuously during business hours and record on motion detection only outside of business hours.





A custom recording schedule helps reduce the amount of hard disk drive space required, increasing the time your system can retain recordings.

To configure the recording schedule:

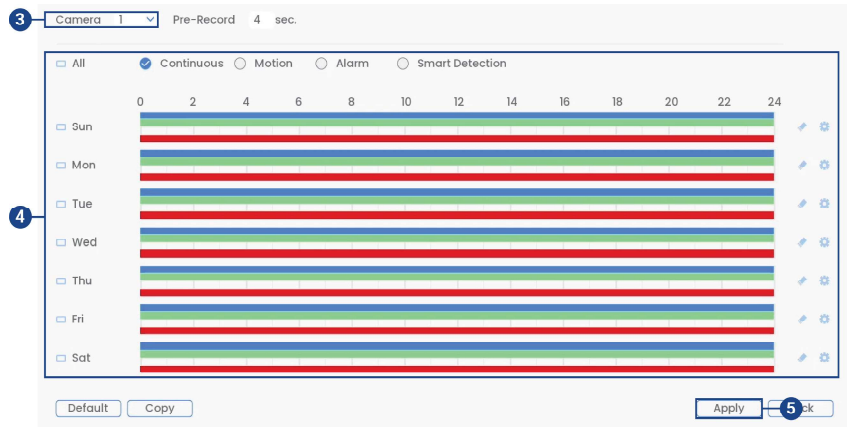1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Storage**. Click the **Schedule** tab from the side panel, then the **Record** tab from the top panel.



- Under **Camera**, select the channel you would like to configure or select **All**.
- Configure the schedule as needed:
 - Click-and-drag on each day to customize the recording schedule. The schedule is set up as a grid, which each block representing two hours.
 - Click-and-drag on each day to customize the recording schedule. The schedule is set up as a grid, with each block representing two hours.
 - Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
 - To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.
 - To disable all recording of the selected type on the selected day, click .
- Click **Apply** to save changes.
- (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).

9.4 Setting up Scheduled or Manual Recording

You can set the system to record based on a schedule or you can manually turn recording on and off. By default, the system is set to always record on a schedule.

To configure the recording schedule, see 9.3 *Setting the Recording Schedule*, page 30.

To set options for manual recording:

- From the Live View display, right-click to open the Quick Menu, then click **Manual Record**.

The screenshot shows the 'Record Mode' configuration window. It is divided into three sections: 'Main Stream', 'Sub Stream', and 'Snapshot'. Each section has three rows of radio buttons: 'Auto', 'Manual', and 'Off'. The 'Auto' radio button is selected for all 12 channels in both the 'Main Stream' and 'Sub Stream' sections. The 'Off' radio button is selected for all 12 channels in the 'Snapshot' section. An 'Apply' button is located at the bottom right of the window.

- Under **Main Stream**, select how the system will record the Main Stream for each channel:
 - Auto:** Main Stream recording will follow the recording schedule.
 - Manual:** The system will record the Main Stream continuously as long as this option is checked.
 - Off:** The system will not record the Main Stream for this channel. This option is not recommended.
- Under **Sub Stream**, select how the system will record the Sub Stream for each channel.
 - Auto:** Sub Stream recording will follow the recording schedule.
 - Manual:** The system will record the Sub Stream continuously as long as this option is checked.
 - Off:** The system will not record the Sub Stream for this channel. This option is not recommended.
- Under **Snapshot**, select **On** to enable snapshot recording on each channel. Or, select **Off** to disable snapshot recording.
- Click **Apply** to save changes.

9.5 Configuring hard disk drive Overwrite

When the hard disk drive is full, the system will overwrite the oldest recordings by default. This is recommended, as it makes sure that your system will continue to record without any input from you. You can also set the system to stop recording once the hard disk drive is full.

To configure hard disk drive overwrite:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **System**, then **Storage**. Click the **Basic** tab from the side panel.

The screenshot shows the 'HDD Full' configuration window. It has a dropdown menu for 'HDD Full' set to 'Overwrite'. Below it, there is a 'Package Mode' field and a 'Time Length' dropdown set to '30 min.'. An 'Apply' button is located at the bottom right of the window.

3. Ensure **HDD Full** is set to **Overwrite** to overwrite the oldest recordings when the hard disk drive is full.

**NOTE**

Select **Stop Record** for the system to stop recording when the hard disk drive is full.


4. Click **Apply** to save changes.

Search through and playback recorded video files on the system.

10.1 Playing Back Video from the hard disk drive


To play back recorded video:

1. From the Live View display, right-click to open the Quick Menu, then click **Playback**.

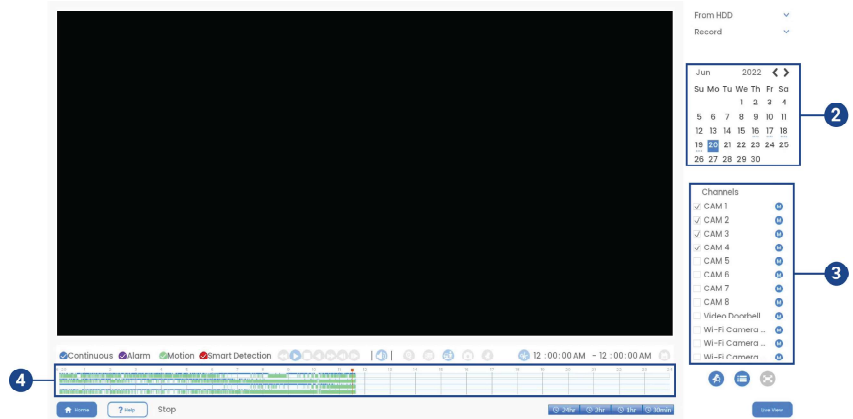




2. Use the calendar on the right to select the day to playback.
3. Check the channels you want to play back. Click the icons to the right of each channel name to choose the video quality (M for Main Stream, S for Sub Stream).
4. Click inside the video bar to select the playback time. The system will begin playing back video from the selected time.

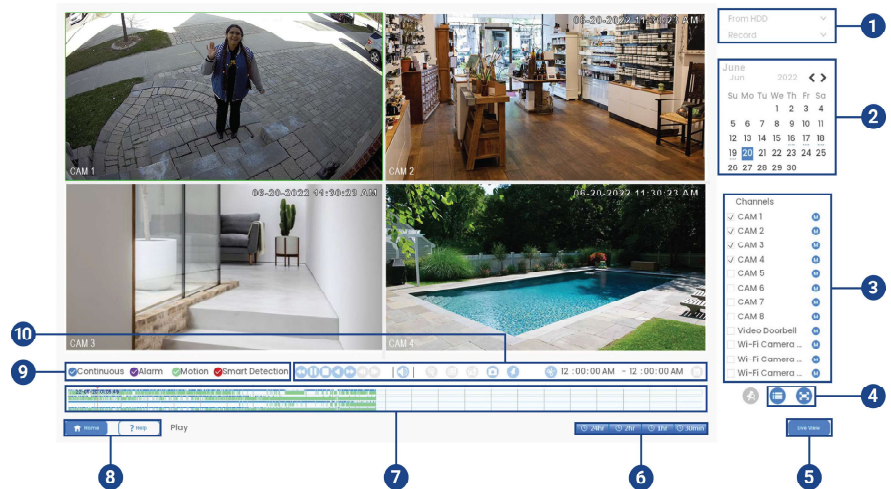10.2 Playback Controls











1. **Select Playback Device:** Choose between searching the recorder's hard disk drive or a USB flash drive (not included).
2. **Calendar:** Select the date to playback.
3. **Channel Selection:** Select channels and video quality for playback.

4. Viewing Modes:

-  **Bookmark List:** Shows all bookmarked recordings for a single channel on the selected date (requires bookmarked recordings — see below for details).
 -  **File List:** Shows all available recordings for the selected date and channel(s) in list format.
 -  **Fullscreen:** Shows video in fullscreen. Right-click to return to split-screen viewing.
5. **Live View:** Click to return to the live view display of connected cameras.
 6. **Playback Bar Time Scale:** Select the length of the time period shown on the playback bar.
 7. **Playback Bar:** Click inside the bar to select a playback time.
 8. **Main Menu & Help Menu:** Click to go to either the Main Menu or the Help Menu.
 9. **Recording Type Filters:** Click to show/hide recording types.







10. Playback Controls:

-  **Slow Playback:** Click repeatedly to slow the video down by half speed up to 16× slower than normal. Click again to return to regular speed.
-  **Play / Pause**
-  **Stop**
-  **Play Backwards**
-  **Fast Playback:** Click repeatedly to double the speed of the video up to 16× faster than normal. Click again to return to regular speed.
-  **Previous Frame:** Go to the previous frame when video is paused.
-  **Next Frame:** Go to the next frame when video is paused.
-  **Volume / Mute:** Click on the volume bar to set the volume for audio in playback. Click the icon to mute/unmute.



NOTE

- You must be viewing an audio camera in single channel to hear audio. You must also be using an HDMI monitor with built-in speakers, or connect an external speaker to the recorder in order to hear audio.
- Audio recording and / or use of listen-in audio without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

-  **Digital Zoom:** Click to enable digital zoom. Click-and-drag over the camera image to zoom in on the selected area. Right-click to return to the full camera image. You can then repeat to zoom in on a different area, or click the icon again to disable zoom.
-  **Area Search:** Click to select an area of the camera image and play back all recordings with motion in the selected area. For full details, see 10.4 *Smart Search*, page 37.
-  **Person and Vehicle Filter:** Hover over to reveal **Person** or **Vehicle** options. Click to filter recordings on selected channels to show only Person and/or Vehicle detection events.
-  **Snapshot:** Save a snapshot of the current camera image to a USB flash drive (not included).
-  **Add Bookmark:** Bookmark recordings for easy retrieval.
-  **Video Clip:** Back up a custom video clip to a USB flash drive (not included). For full instructions, see 10.5 *Video Clip Backup*, page 38.

10.3 Playing Back Video from a USB Drive


If you have video files saved to a USB flash drive (not included), you can play them back using the system.

For full instructions on backing up video to a USB flash drive, see 11 *Backup*, page 40.


To play back video from a USB flash drive:

1. Connect the USB thumb drive (not included) with video files on it into a free USB port on the recorder.

2. From the Live View display, right-click to open the Quick Menu, then click **Playback**.
3. Click the dropdown and select **From IO Device**.

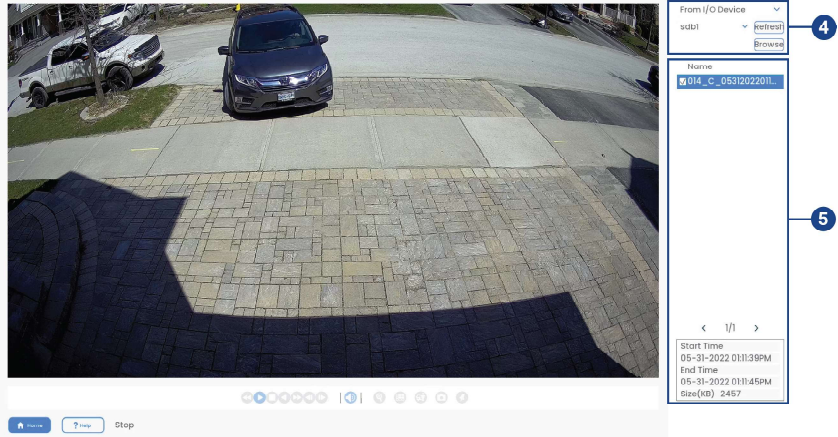

4. Click **Browse** to locate the video file on your USB flash drive.
5. Double-click the video file you want to open from the file list to start playback.

 **NOTE**


If you do not see your USB, click **Refresh**.

10.4 Smart Search



Play back all recordings from a single channel with motion in a specific area of the camera image.

To perform a Smart Search:

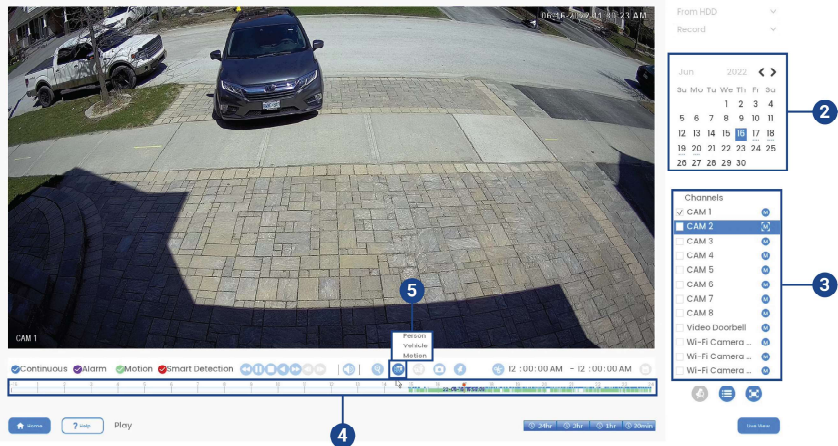1. From the Live View display, right-click to open the Quick Menu, then click **Playback**.



2. Use the calendar on the right to select the day to playback.
3. Check a single channel you want to play back. Click the icon to the right of the channel name to choose the video quality (**M** for Main Stream, **S** for Sub Stream).
4. Click inside the video bar to select the playback time. The system will begin playing back video from the selected time.


5. Click  to configure an area for Smart Search.
6. The camera image appears with a grid overlay. Click or click-and-drag to add / remove squares from the grid. Solid blue areas mark the area of the image that will be searched for motion events.
7. Click  to begin Smart Search.

10.5 Video Clip Backup


Video clip backup allows you to select a duration of video during playback mode and save it to a USB device (not included).


To use video clip backup:


1. Connect the USB thumb drive (not included) to a free USB port on the recorder.
2. From the Live View display, right-click to open the Quick Menu, then click **Playback**.

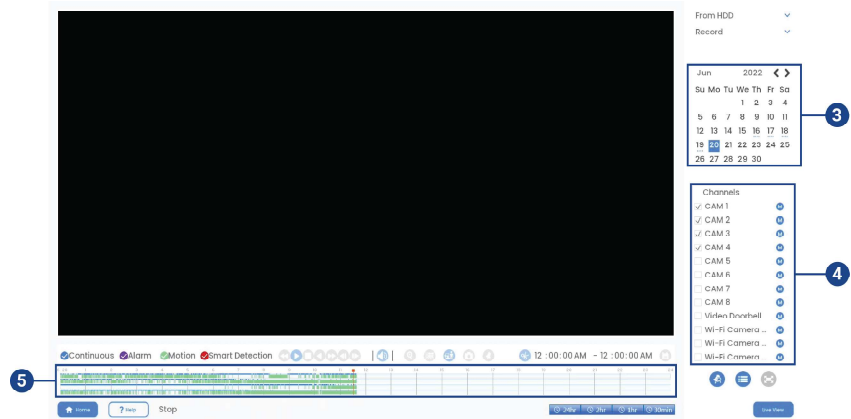

3. Use the calendar on the right to select the day to playback.
4. Check the channels you want to play back. Click the icons to the right of each channel name to choose the video quality (M for Main Stream, S for Sub Stream).
5. Click inside the video bar to select the playback time. The system will begin playing back video from the selected time.

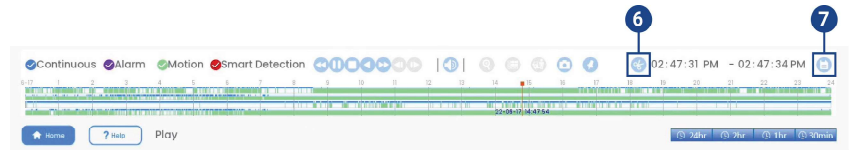

6. Click  to mark the beginning of the video clip, then click again to mark the end of the video clip.

7. Click  to open the backup menu.

Backup

8

I	Name(Type)	Free Space/Total Space	Device Status
1	<input checked="" type="checkbox"/> sdb1(USB USB)	1.08 GB/1.86 GB	Idle

I	<input checked="" type="checkbox"/> Camera	Type	Start Time	End Time	Size(KB)
1	<input checked="" type="checkbox"/> 4	M	06-17-2022 02:47:31PM	06-17-2022 02:47:3...	1532

Needed Space/Free Space:1.49 MB/1.08 GB

9

8. Select a filetype for your backup file.
9. Click **Backup**.

Backup video files to external USB flash drive (not included).

11.1 Formatting the USB Flash Drive

It is recommended to format your USB thumb drive (not included) before using it with the system.



CAUTION

Formatting the USB device will permanently erase all data. **This step cannot be undone.**

Prerequisite:

- Connect a USB flash drive (not included) to a free USB port on the unit.

To format a USB flash drive:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **System**, then **Backup**.

3. Device Name: sdb(Usb Usb) | Format: 1.08 GB/1.86 GB(free/total)

Storage Path: / | Browse

Record Channel: 1

Type: All | Main Stream

Period: Today
06-20-2022 12:00:00 AM - 06-20-2022 11:59:59 PM

File Format: DAV | Search | Remove

0	Camera	Type	Start Time	End Time	Size(kB)	Play

0.00 KB(Needed Space) | Backup

3. Click **Format** next to the **Device Name**.
4. Select a format mode:
 - **FAT32**: Recommended — offers the greatest compatibility with other devices.
 - **NTFS**: Advanced users only — should only be used on drives larger than 32GB where file sizes will be larger than 4GB.
5. Click **OK**.

11.2 Backing Up Video

You can save video recordings from your system to a USB flash drive. Ensure you format new drives before backing up video (see 11.1 *Formatting the USB Flash Drive*, page 40 for details).

To back up video:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

2. Click **System**, then **Backup**.

The screenshot shows the backup configuration interface. The form includes the following fields:

- Device Name: sdb1(USB USB)
- Format: 1.08 GB/1.86 GB(Free/Total)
- Storage Path: /New folder/
- Record Channel: 1
- Type: All
- Period: Today
- File Format: DAV

The table below shows the search results:

ID	Camera	Type	Start Time	End Time	Size (KB)	Play
1	[x]1	C	06-20-2022 12:00:00AM	06-20-2022 12:00:02AM	2688	[Play]
2	[x]1	M	06-20-2022 12:00:03AM	06-20-2022 12:00:07AM	4480	[Play]
3	[x]1	M	06-20-2022 12:00:07AM	06-20-2022 12:00:36AM	10240	[Play]
4	[x]1	C	06-20-2022 12:00:37AM	06-20-2022 12:00:42AM	8448	[Play]
5	[x]1	M	06-20-2022 12:00:43AM	06-20-2022 12:01:05AM	11520	[Play]
6	[x]1	C	06-20-2022 12:01:06AM	06-20-2022 12:01:09AM	2660	[Play]
7	[x]1	M	06-20-2022 12:01:10AM	06-20-2022 12:02:37AM	47296	[Play]
8	[x]1	C	06-20-2022 12:02:38AM	06-20-2022 12:02:52AM	10176	[Play]
9	[x]1	M	06-20-2022 12:02:53AM	06-20-2022 12:05:00AM	66608	[Play]
10	[x]1	C	06-20-2022 12:05:00AM	06-20-2022 12:05:03AM	3684	[Play]
11	[x]1	M	06-20-2022 12:05:03AM	06-20-2022 12:06:48AM	67536	[Play]
12	[x]1	C	06-20-2022 12:06:48AM	06-20-2022 12:07:02AM	8448	[Play]

23.04 GB(Needed Space)

3. Configure the following:

- **Device Name:** Select the USB device you would like to back up files to.
- **Storage Path:** Click **Browse** to locate a folder path on the USB drive to save your files to.
- **Record Channel:** Select the channel you would like to search or select **All** to search all channels.
- **Type:** Select the recording type you would like to search for or select **All** to search all recording types.
- **Period:** Select the period for your search, then enter the start and end time.
- **File Format:** Select **DAV** to save files to save files to **.dav** format. You can playback **.dav** files using the Lorex video player software.

4. Click **Search**. A list of files that match your search criteria appears.

5. Check files you would like to backup.

6. Click **Backup****NOTE**

HD video files saved on the system may take up a large amount of disk space. The size of video files selected and the amount of free space on your USB device is shown on screen.

11.3 Using Video Clip Backup

Video clip backup allows you to select a duration of video during playback mode and save it to a USB device (not included). For full instructions on video clip backup, see 10.5 *Video Clip Backup*, page 38.

11.4 Viewing Backed Up Files

Use the free Lorex Player to play back **.dav** files.

11.4.1 Viewing Backed Up Files on PC

1. Download and install the **Lorex Player for PC** from the recorder's product page at lorex.com

2. Double-click one of the files on the left to begin playback.



OR

Click to open a back up video file in another location

3. Use the **Lorex Player** controls to control playback or select other files for playback.




NOTE

For a full overview of Lorex Player controls, see 11.4.3 *Lorex Player Controls*, page 43.

11.4.2 Viewing Backed Up Files on Mac

1. Download and install the **Lorex Player for Mac** from the recorder's product page at lorex.com
2. Double-click the downloaded file in Safari to extract the **Lorex Player** app file.
3. Drag the **Lorex Player** app to your Desktop or Applications list. Double-click **Lorex Player** to open the application.


4. Double-click one of the files on the left to begin playback.

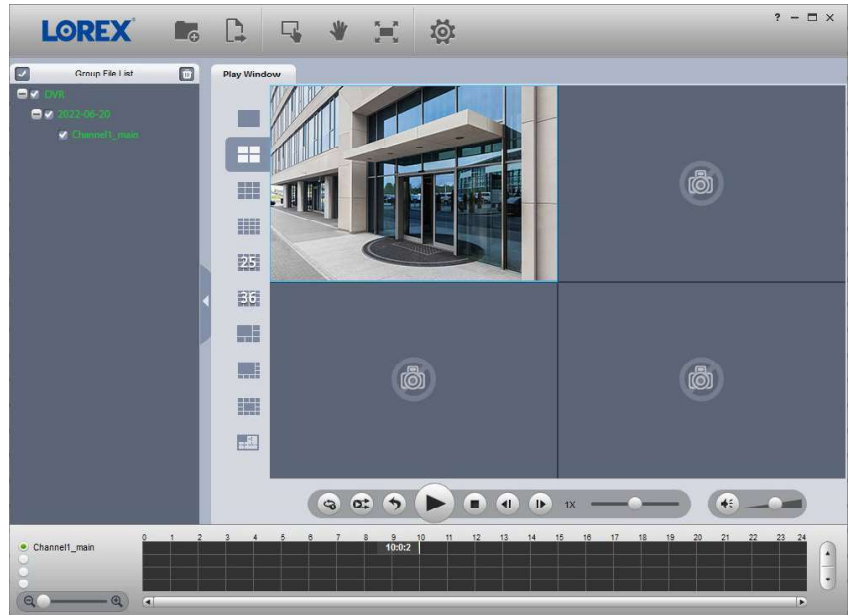


OR













Click to open a back up video file in another location

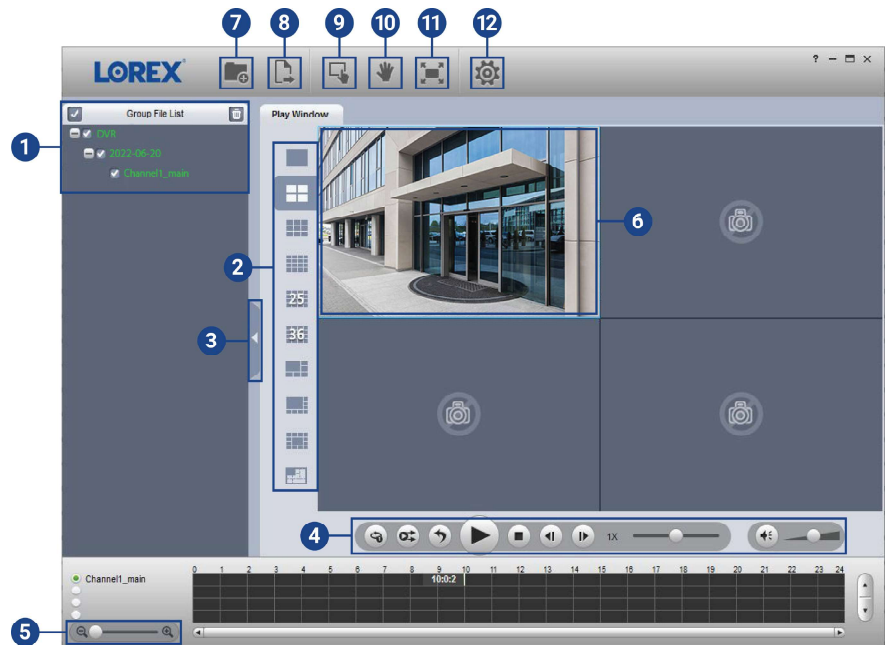
5. Use the **Lorex Player** controls to control playback or select other files for playback.

 NOTE
For a full overview of Lorex Player controls, see 11.4.3 <i>Lorex Player Controls</i> , page 43.

11.4.3 Lorex Player Controls



1. **File List:** Double-click to open a file.
2. **Viewing Mode:** Select between single-channel viewing and various split-screen options.
3. **Hide/Show File List**
4. **Playback Controls:**
 - : Playback files in sequence.
 - : Synchronize playback times.
 - : Play/pause playback.
 - : Stop playback.
 - : Previous frame.
 - : Next frame.
 - : Playback speed.
 - : Volume control.
5. **Zoom Timeline**
6. **Display Area:** Double-click a video file to expand. Click the controls inside the display area to do the following:
 - : View information about the video file.
 - : Start/stop a manual recording from the video file.
 - : Take a snapshot from the video file.
 - : Close the video file.
7. **Add Files:** Click to open backed up video files.
8. **Export Files:** Export a video file to a different format.
9. **Digital Zoom:** Click, then click-and-drag over a camera image to zoom in. Right-click to return to the full image.
10. **Drag:** Click, then click-and-drag to move around a camera image that has been digitally zoomed in.
11. **Fullscreen:** Click to open the player in full screen. Press **ESC** to exit full screen.
12. **Settings:** Click to open the configuration menu for the player. From here you can control the default file formats and save locations for snapshots and control the aspect ratio.

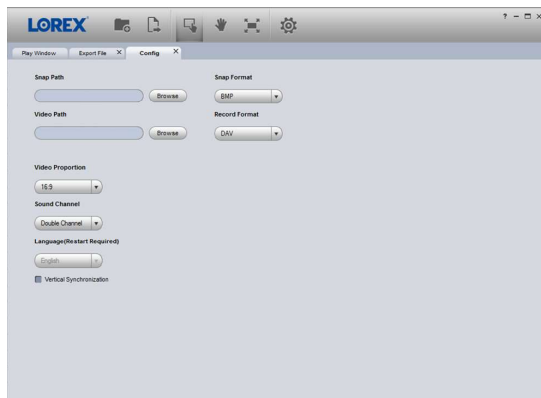

Use motion detection on your camera to capture activity, trigger alarms, and receive notifications. Setting up your recorder to only record on motion detection can save hard disk drive space and eliminate the need to view a whole entire days worth of recording to see if an incident occurred. You can set motion detection zones to monitor certain areas in the camera's field-of-view and decrease or increase the motion sensitivity.



NOTE


To avoid false notifications, do not use motion detection in high-traffic areas.

12.1 Configuring Motion Detection

Select channels that you want to enable motion detection on and adjust preferences.


To configure motion detection:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Event Settings** tab from the side panel, then the **Motion Detection** tab from the top panel.

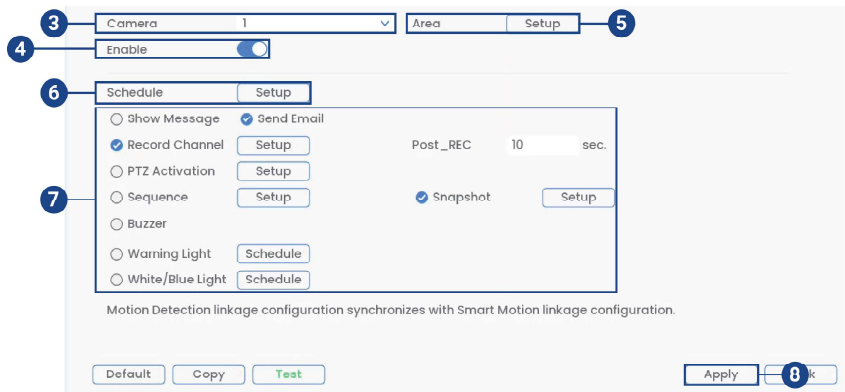





3. Select a camera to configure motion detection.
4. Check to enable motion detection on the selected camera.

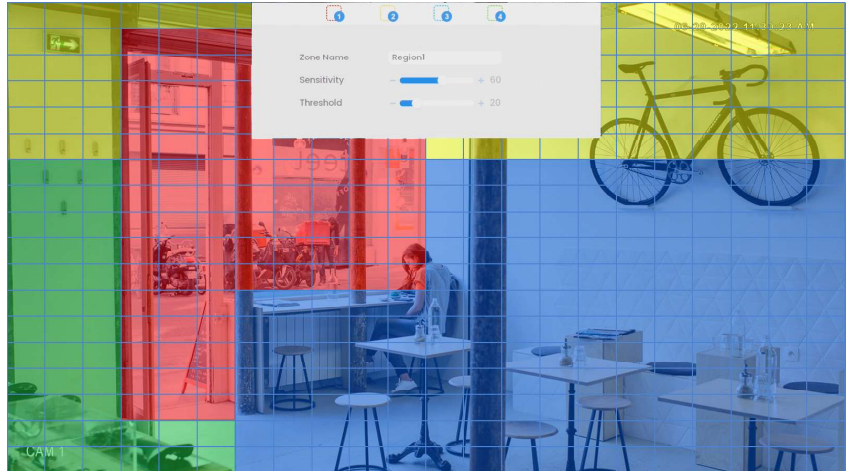5. Click **Setup** next to **Area** to configure which areas of the image will be enabled for motion detection. A grid will appear on the monitor.

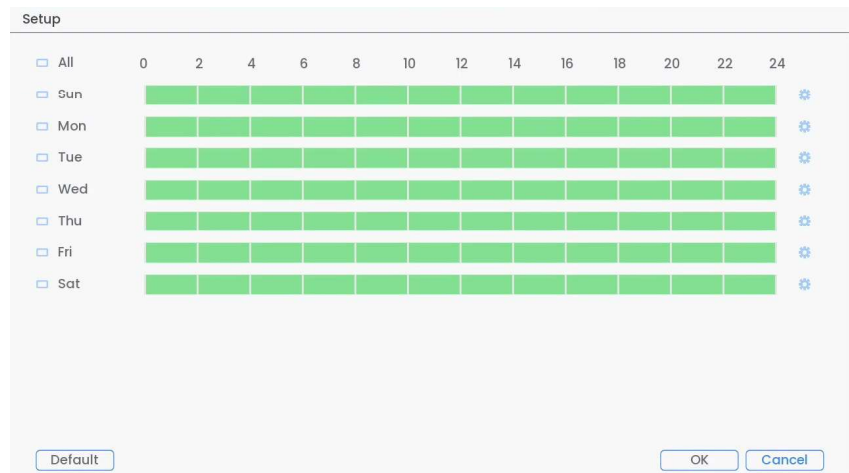

- The camera image appears with a red grid overlay. This means the entire image is enabled for motion detection.
 - Click or click-and-drag to add / remove boxes from the active area. Cells that have been removed from the active area appear transparent.
 - Hover near the top of the image to reveal zone selection. You can set up to 4 different zones with different sensitivity and threshold values.
 - Right-click when finished.
6. Click **Setup** next to **Schedule** to choose which days and times of the week to enable motion detection:



- Click or click-and-drag along each of the green timelines to quickly add or remove time from each day's schedule in 30-minute segments.
- Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
- To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.

7. Choose how the system will react when motion is detected:

Show Message Send Email
 Record Channel Post_REC 10 sec.
 PTZ Activation
 Sequence Snapshot
 Buzzer
 Warning Light
 White/Blue Light

- **Show Message:** Check to enable an on-screen pop-up when one of your cameras detects motion. On-screen pop-up shows the channels an event occurred on and the type of event.
- **Send Email:** Check to enable email alerts. You must configure email alerts before you will be able to receive them (see 19.6.9 *Configuring Email Alerts*, page 105).
- **Record Channel:** Select the channels that will record when motion is detected on the selected channel. Set the length of recording following a motion detection event in the **Post_REC** field.
- **PTZ Activation:** Set connected PTZ cameras to start a tour, pattern, or go to a preset location.
- **Sequence:** Sequence mode will begin. Select the numbered tiles next to this option to include the corresponding channels in the sequence.
- **Snapshot:** Select the numbered tiles next to this option to save a snapshot of the corresponding channels.
- **Buzzer:** Check to enable the system buzzer.
- **Warning Light:** Check to enable the warning light when motion is detected. Click **Schedule** to set the warning light schedule. To adjust the warning light settings, refer to section 14.1 *Configuring Warning Light* 14.1 *Configuring Warning Light*, page 52.
- **Dual Warning Light (White/Blue Light):** Check to enable the dual warning light when motion is detected. Click **Schedule** to set the dual warning light schedule. To adjust the dual warning light settings, refer to section 14.2 *Configuring Dual Warning Light*, page 52.



NOTE

Warning Light and Dual Warning Light cannot be enabled at the same time.

8. Click **Apply** to save changes.
9. (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels.

Lorex Active Deterrence cameras feature bright, customizable dual warning lights and siren. Active Deterrence features can be used in combination with other detection features as long as they are supported by your camera, including motion detection, smart motion detection, face detection, face recognition, and virtual fence. By enabling automatic deterrence, these visual and audio alerts will trigger when motion is detected, in turn deterring unwanted visitors (see 13.1 *Automatic Deterrence Settings*, page 48). You can also trigger the lights and sirens manually from the recorder and remotely on the Lorex Home app (see 13.2 *Manually Activate Deterrence Features*, page 50).



Refer to your camera's documentation to locate the warning light, dual warning light, and embedded speaker for siren on your camera.

For a complete list of compatible Lorex deterrence cameras, navigate to your recorder series at lorex.com/compatibility.

13.1 Automatic Deterrence Settings

Set preferences for automatic warning light and dual warning light triggering on compatible Lorex deterrence cameras.


To configure deterrence settings:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Event Settings** tab from the side panel, then the **Motion Detection** tab from the top panel.


 The screenshot shows the 'Event Settings' configuration page for 'Motion Detection'. At the top, there are dropdown menus for 'Camera' (set to 1) and 'Area', with 'Setup' buttons next to them. Below these is an 'Enable' toggle switch which is turned on. A 'Schedule' section contains several options: 'Show Message' (unchecked), 'Send Email' (checked), 'Record Channel' (checked), 'PTZ Activation' (unchecked), 'Sequence' (unchecked), and 'BUZZER' (unchecked). Each option has a 'Setup' button. To the right of these options are 'Post_REC' (set to 10 sec) and 'Snapshot' (checked) with a 'Setup' button. At the bottom, there are 'Warning Light' and 'White/Blue Light' options, each with a 'Schedule' button. A note at the bottom states: 'Motion Detection linkage configuration synchronizes with Smart Motion linkage configuration.' At the very bottom, there are 'Default', 'Copy', and 'Test' buttons on the left, and an 'Apply' button with a 'Back' arrow on the right.




3. Select the channel of a connected deterrence camera.
4. Check **Enable**.

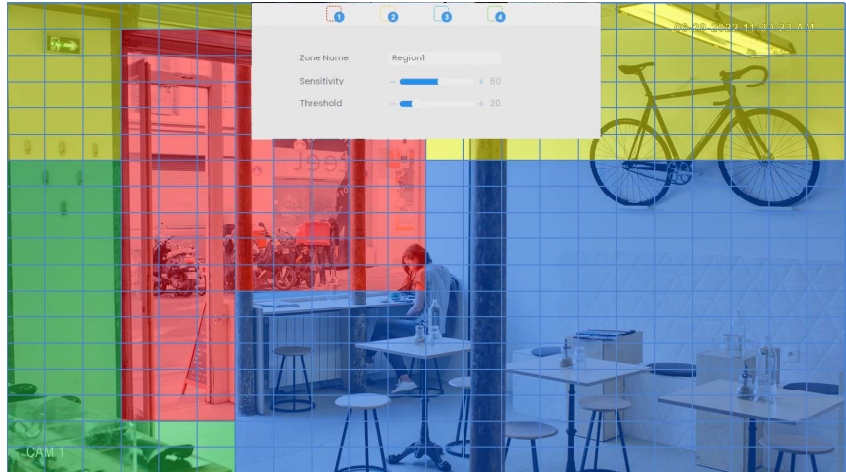5. Click **Setup** next to **Area** to set an active area for automatic deterrence.

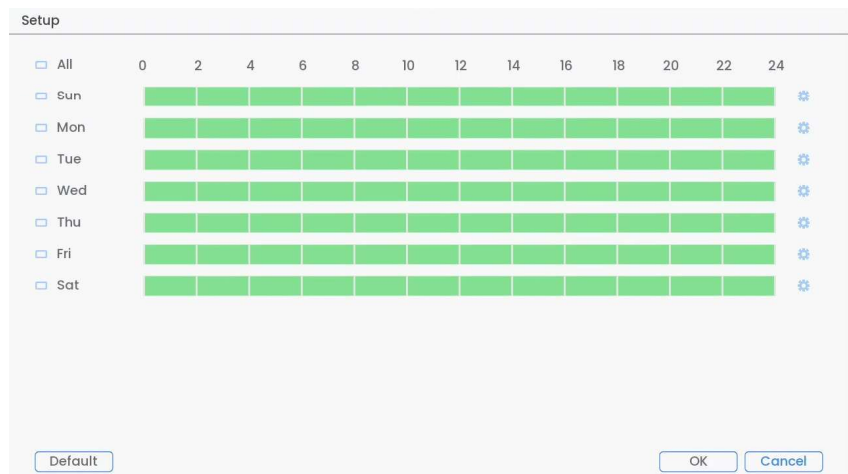

- The camera image appears with a red grid overlay. This means the entire image is enabled for motion detection.
 - Click or click-and-drag to add / remove boxes from the active area. Cells that have been removed from the active area appear transparent.
 - Hover near the top of the image to reveal zone selection. You can set up to 4 different zones with different sensitivity and threshold values.
 - Right-click when finished.
6. Click **Setup** next to **Schedule** to set the weekly schedule for automatic deterrence.



- Click or click-and-drag along each of the green timelines to quickly add or remove time from each day's schedule in 30-minute segments.
- Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
- To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.

-
7. Check to activate one of the automatic deterrence lights after a motion detection event:
- **Warning Light:** Check to enable the warning light when motion is detected. Click **Schedule** to set the warning light schedule. To adjust the warning light settings, refer to section 14.1 *Configuring Warning Light*, page 52.
 - **Dual Warning Light (White/Blue Light):** Check to enable the dual warning light when motion is detected. Click **Schedule** to set the dual warning light schedule. To adjust the dual warning light settings, refer to section 14.2 *Configuring Dual Warning Light*, page 52.

**NOTE**




Warning Light and Dual Warning Light cannot be enabled at the same time.

8. Click **Apply** to save changes,
 9. (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels.




13.2 Manually Activate Deterrence Features

The system has multiple options for manually activating deterrence features.


To activate deterrence features on a single camera:

- Hover the mouse pointer near the top of the camera image in Live View to reveal the Camera Toolbar. Click  to activate the warning light, click  to activate the siren, or click  on the far right to activate the dual warning light.



- Activate deterrence features using the Lorex Home app. Go to your camera's Live View and press the deterrence buttons for siren , warning light , and dual warning light .


For more information on using the app, see 20 *Connecting Remotely using the Lorex Home Mobile App*, page 123.

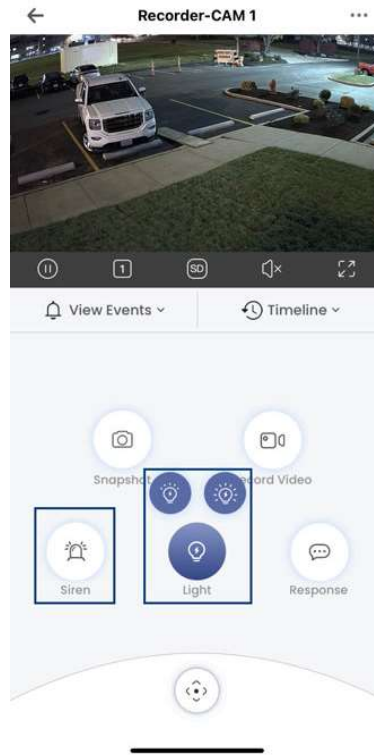

To activate deterrence features of all connected cameras:

- Push and hold the front panel panic button on the recorder for 3 seconds.



- From the Live View display, click the panic button  on the Navigation Bar.

Warning Light & Dual Warning Light Settings

Set the warning light and dual warning light settings to help increase visibility around your surveillance area and alert everyone of your camera's presence, while also enhancing the camera's image at night.



14.1 Configuring Warning Light

Set preferences for warning light on compatible Lorex deterrence cameras. For a complete list of compatible cameras, navigate to your recorder series at lorex.com/compatibility.

To configure warning light:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Light** tab from the side panel, then the **Warning Light** tab on the top panel.

3 — Camera 1

4 — Delay 30 sec.

5 — Mode Always On Flicker

Flicker Frequency Low

Refresh Apply 6

3. Select a camera to configure warning light.
4. Enter how long the warning light will stay on after a motion detection event.
5. Select **Always On** for a solid white light, or **Flicker** for a flashing light. If you select **Flicker**, set how quickly the light will flash under **Flicker Frequency**.
6. Click **Apply** to save changes.

14.2 Configuring Dual Warning Light

Set preferences for dual warning light on compatible Lorex deterrence cameras. For a complete list of compatible cameras, navigate to your recorder series at lorex.com/compatibility.

To configure warning light:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Light** tab from the side panel, then the **White/Blue Light** tab on the top panel.

3 Camera 1

4 Delay 30 sec.

5 Mode White Blue Flicker
Flicker Frequency Low

Refresh Apply 6


3. Select a camera to configure dual warning light.
4. Enter how long the dual warning light will stay on after a motion detection event.
5. Select **White Always On** or **Blue Always On** for a solid white light or for a flashing light select between **White Blue Flicker**, **White Flicker**, or **Blue Flicker**. If you select a flicker light, set how quickly the light will flash under **Flicker Frequency**.
6. Click **Apply** to save changes.

The system supports detection of people and vehicles with compatible cameras only. This helps deliver more relevant notifications when using the Lorex Home app for remote viewing. You can also link warning light and dual warning light deterrence to person and/or vehicle detection on compatible Lorex deterrence cameras for an added level of smart security.



15.1 Ensuring Accurate Person & Vehicle Detection

The following are important camera installation notes to ensure accurate person and/or detection. Refer to the documentation that came with your camera or search for your camera model number at lorex.com for full mounting instructions.

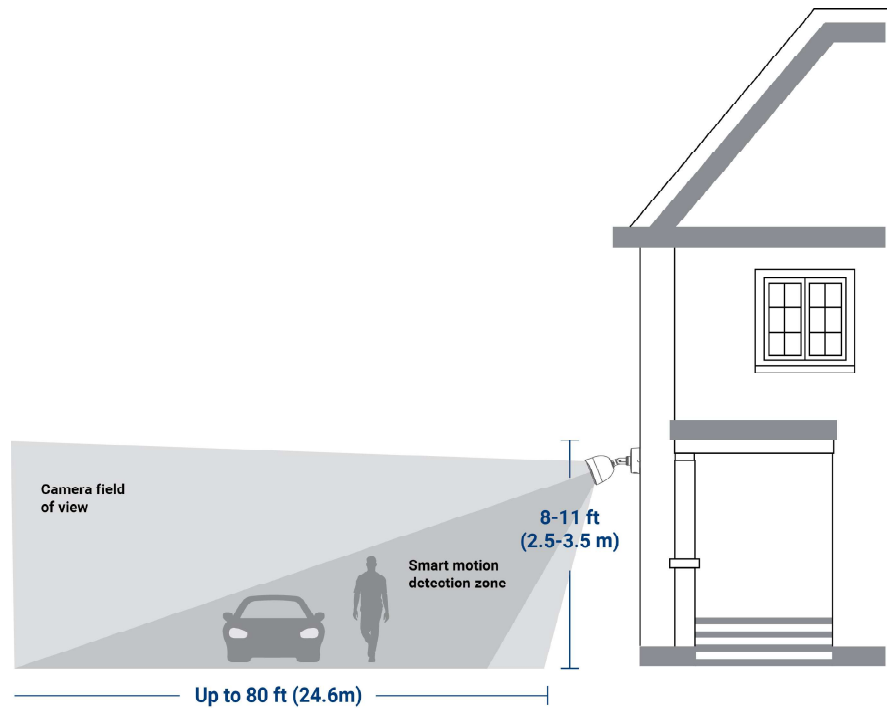

Person Detection

Angle	Height	Minimum Distance	Maximum Distance
15°	8.2ft (2.5m)	2.8ft (0.86m)	20ft (6.12m)
15°	9.8ft (3m)	4.5ft (1.39m)	19.7ft (6.03m)
15°	11.5ft (3.5m)	6.3ft (1.93m)	19.3ft (5.90m)

Vehicle Detection


Angle	Height	Minimum Distance	Maximum Distance
15°	8.2ft (2.5m)	3.5ft (1.07m)	80ft (24.6m)

- Angle the camera so that objects of interest appear in the bottom 2/3 of the camera image
- Choose a location where objects of interest will be no further than 20ft (6.1m) from the camera
- Angle the camera 15° down from the level position
- Install the camera between 8.2-11.5ft (2.5-3.5m) off of the ground

Accuracy of person and vehicle detection will be influenced by multiple factors, such as the object’s distance from the camera, the size of the object, and the height and angle of the camera. Night vision will also impact the accuracy of detection.

15.2 Configuring Person & Vehicle Detection


The system allows you to monitor for smart motion events and differentiate between a person or vehicle. Adjust preferences for person and/or vehicle detection per channel.

 **NOTE**

Smart Motion Detection cannot be used simultaneously as Face Detection. You will need to disable Face Detection on all channels to enable Smart Motion Detection.

To configure person and vehicle detection:

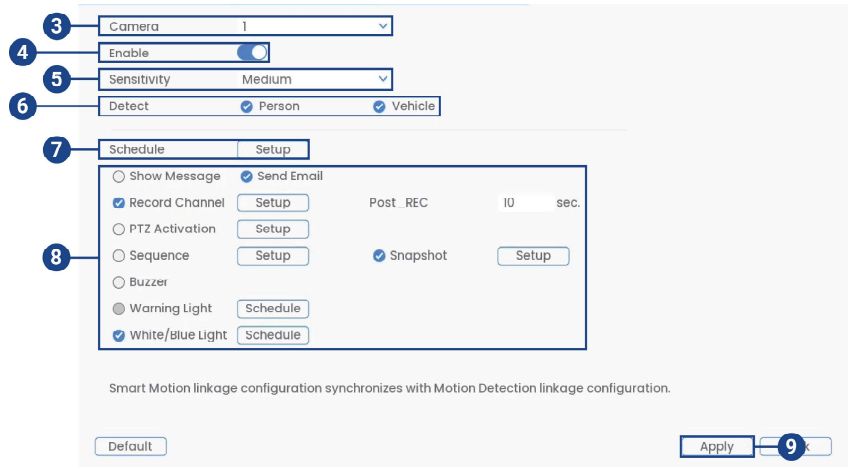


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Event Settings** tab from the side panel, then the **Smart Motion** tab from the top panel.



3. Select a camera to configure smart motion detection.
4. Select the smart motion detection sensitivity level. Low is the least sensitive, and high is the most sensitive. The default/recommended settings is medium.
5. Check to enable person and/or vehicle detection.

6. Click **Setup** next to **Schedule** to choose which days and times of the week to enable motion detection:

The screenshot shows a 'Setup' window for configuring motion detection. It features a grid with days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat) listed on the left and time segments (0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, 24) on the top. Each cell in the grid is filled with a green bar, indicating that motion detection is enabled for all days and times. To the right of each day's row is a gear icon for fine-tuning. At the bottom left is a 'Default' button, and at the bottom right are 'OK' and 'Cancel' buttons.

- Click or click-and-drag along each of the green timelines to quickly add or remove time from each day's schedule in 30-minute segments.
- Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
- To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.

7. Choose how the system will react when smart motion is detected:

Show Message Send Email
 Record Channel Setup Post_REC 10 sec.
 PTZ Activation Setup
 Sequence Setup Snapshot Setup
 Buzzer
 Warning Light Schedule
 White/Blue Light Schedule

- **Show Message:** Check to enable an on-screen pop-up when one of your cameras detects motion. On-screen pop-up shows the channels an event occurred on and the type of event.
- **Send Email:** Check to enable email alerts. You must configure email alerts before you will be able to receive them (see 19.6.9 *Configuring Email Alerts*, page 105).
- **Record Channel:** Select the channels that will record when motion is detected on the selected channel. Set the length of recording following a motion detection event in the **Post_REC** field.
- **PTZ Activation:** Set connected PTZ cameras to start a tour, pattern, or go to a preset location.
- **Sequence:** Sequence mode will begin. Select the numbered tiles next to this option to include the corresponding channels in the sequence.
- **Snapshot:** Select the numbered tiles next to this option to save a snapshot of the corresponding channels.
- **Buzzer:** Check to enable the system buzzer.
- **Warning Light:** Check to enable the warning light when motion is detected. Click **Schedule** to set the warning light schedule. To adjust the warning light settings, refer to section 14.1 *Configuring Warning Light*, page 52.
- **Dual Warning Light (White/Blue Light):** Check to enable the dual warning light when motion is detected. Click **Schedule** to set the dual warning light schedule. To adjust the dual warning light settings, refer to section 14.2 *Configuring Dual Warning Light*, page 52.



NOTE

Warning Light and Dual Warning Light cannot be enabled at the same time.

8. Click **Apply** to save changes.
9. (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels.

15.3 Searching for Person & Vehicle Detection Events (Smart Search)

Search for Person and Vehicle detection on a specific channel or the entire system. You can also choose to back up events (USB flash drive required – not included).


To search for Person and Vehicle detection events:


1. From the Live View display, right-click to open the Quick Menu, then click **Smart Search**.

- Click the **Smart Motion** tab from the side panel.

The screenshot shows the Smart Motion Detection interface. At the top, there are filters for Camera (All), Type (All), and Period (Today). A search button is located to the right. Below the filters is a table with columns: ID, Camera, Type, Start Time, End Time, and Search. The table contains 16 rows of event data. A play icon in the Search column of row 10 is highlighted with a blue circle and the number 7. A search button is highlighted with a blue circle and the number 6.

ID	Camera	Type	Start Time	End Time	Search
1	7	Vehicle	2022-06-20 12:52:14	2022-06-20 12:52:41	🔍
2	5	Vehicle	2022-06-20 12:52:12	2022-06-20 12:52:40	🔍
3	8	Vehicle	2022-06-20 12:52:06	2022-06-20 12:52:21	🔍
4	8	Vehicle	2022-06-20 12:51:53	2022-06-20 12:52:05	🔍
5	7	Vehicle	2022-06-20 12:51:51	2022-06-20 12:52:13	🔍
6	8	Person	2022-06-20 12:51:51	2022-06-20 12:52:20	🔍
7	4	Person	2022-06-20 12:51:44	2022-06-20 12:52:05	🔍
8	8	Vehicle	2022-06-20 12:51:40	2022-06-20 12:51:52	🔍
9	7	Vehicle	2022-06-20 12:51:28	2022-06-20 12:51:50	🔍
10	5	Vehicle	2022-06-20 12:51:28	2022-06-20 12:51:57	🔍
11	6	Vehicle	2022-06-20 12:51:17	2022-06-20 12:51:39	🔍
12	8	Vehicle	2022-06-20 12:51:15	2022-06-20 12:51:39	🔍
13	4	Vehicle	2022-06-20 12:51:14	2022-06-20 12:52:21	🔍
14	3	Person	2022-06-20 12:51:01	2022-06-20 12:51:22	🔍
15	5	Vehicle	2022-06-20 12:50:30	2022-06-20 12:51:11	🔍
16	7	Vehicle	2022-06-20 12:50:20	2022-06-20 12:51:18	🔍

- Select the camera's channel to search for events, or select **All** channels.
- Choose the type of smart motion you want to search for.
- Choose the period for your search, then enter the start and end time.
- Click **Search**. Events that match your search criteria appear below.
- Click the play icon  in the **Search** column to view the event. If you want to back up events, check the events you want to back up, then click **Backup**.


 WARNING
<p>Facial recording without consent is illegal in certain jurisdictions. Lorex Technology does not assume liability for any use of its product that fails to conform with local laws.</p>

The Face Detection feature allows you to detect and capture faces in the camera’s field-of-view while triggering alarms and/or notifications. The Face Recognition feature is used to compare captured faces with the Face Database, which can also be set to trigger an alarm and/or send notifications.

Face detection is compatible with certain Lorex cameras. For a complete list of compatible cameras, navigate to your recorder series at lorex.com/compatibility.

16.1 Ensuring Face Detection Accuracy


The following are important camera installation notes to ensure accurate Face Detection. For full camera mounting instructions, see your camera’s documentation at lorex.com.

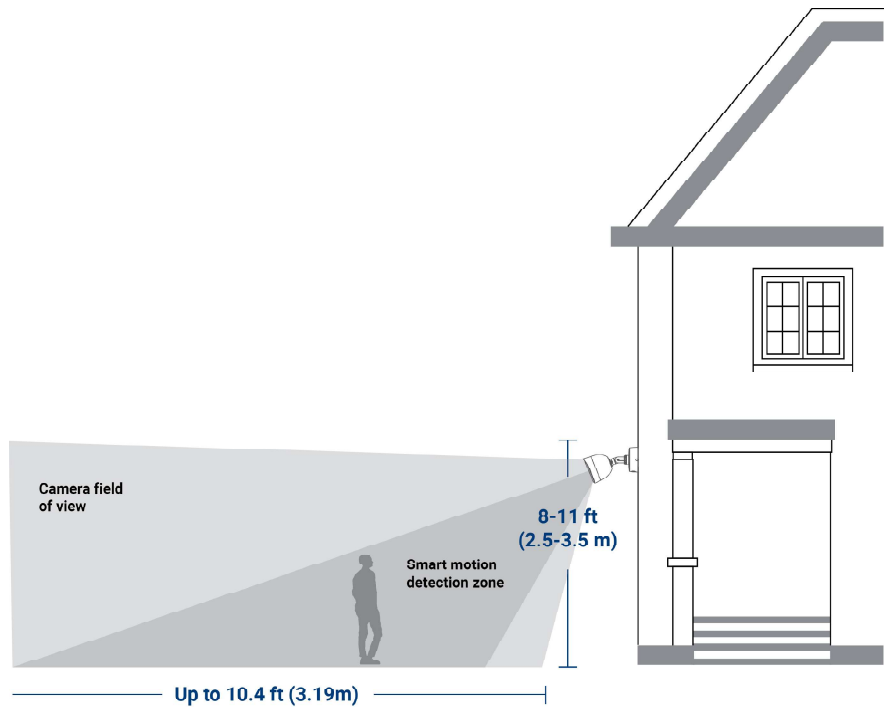

Angle	Height	Minimum Distance	Maximum Distance
15°	8.2ft (2.5m)	2.8ft (0.86m)	10.4ft (3.19m)
15°	9.8ft (3m)	4.5ft (1.39m)	9.9ft (3.02m)
15°	11.5ft (3.5m)	6.3ft (1.93m)	9ft (2.75m)

- Install in a bright area and avoid facing direct sunlight with strong backlights and dark shadows
- Choose a location where objects of interest will be no further than 10.4ft (3.19m) from the camera
- Position the camera about 9.8ft (3m) off the ground to detect the full proportion of a face
- Angle the camera around 15° down from the level position
- Point the camera directly where objects of interest will be facing


High Accuracy Face Detection Vs. Low Accuracy Face Detection:

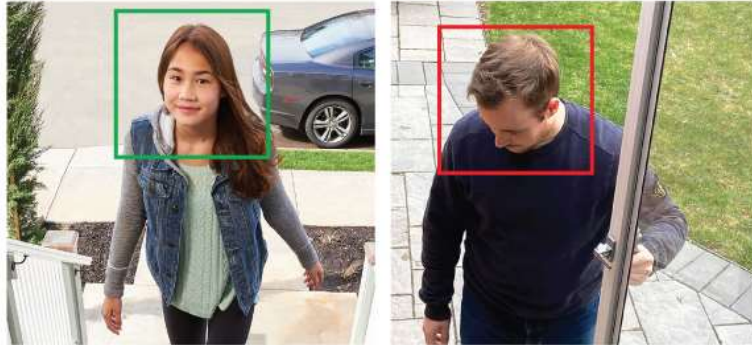

Accuracy will be influenced by lighting conditions and the distance/angle of a person’s face to the camera. To distinguish facial features, the camera must be positioned head on with a clear view of a person’s face. Obscured and partially/fully covered faces will not be accurately captured. To improve the range of face detection in low light conditions, color night vision will switch to black & white. If you cannot meet these requirements for installation, it may be best to follow the guidelines for person and vehicle detection instead.


16.2 Configuring Face Detection

The system allows you to monitor for face detection events. Select channels that you want to enable face detection on and adjust preferences.

	NOTE
<p>Face detection cannot be used simultaneously with other detection settings. Disable motion detection, smart motion detection, and virtual fence on all channels to enable face detection.</p>	

To configure face detection settings:

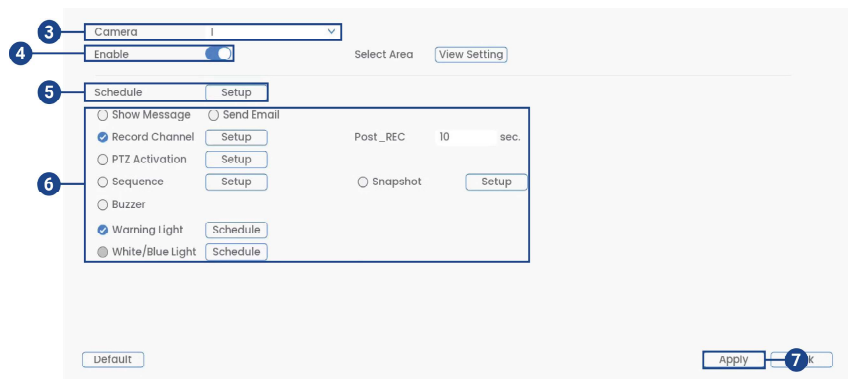


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Face Settings** tab from the side panel, then the **Face Detection** tab from the drop-down menu.



3. Select a channel with a compatible camera.
4. Check to enable face detection on the select channel.

5. Click **Setup** next to **Schedule** to choose which days of the week to enable face detection:

The screenshot shows a 'Setup' dialog box with a grid of days and time slots. The days are listed on the left: All, Sun, Mon, Tue, Wed, Thu, Fri, and Sat. The time slots are listed at the top: 0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, and 24. Each day has a corresponding row of red bars representing the schedule. There are checkboxes next to each day name. At the bottom, there are buttons for 'Default', 'OK', and 'Cancel'.

- Click or click-and-drag along each of the red timelines to quickly add or remove time from each day's schedule in 30-minute segments.
- Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
- To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.

6. Choose how the system will react to face detection:

Show Message Send Email
 Record Channel Setup Post_REC 10 sec.
 PTZ Activation Setup
 Sequence Setup Snapshot Setup
 Buzzer
 Warning Light Schedule
 White/Blue Light Schedule

- **Show Message:** Check to enable an on-screen pop-up when one of your cameras detects motion. On-screen pop-up shows the channels an event occurred on and the type of event.
- **Send Email:** Check to enable email alerts. You must configure email alerts before you will be able to receive them (see 19.6.9 *Configuring Email Alerts*, page 105).
- **Record Channel:** Select the channels that will record when motion is detected on the selected channel. Set the length of recording following a motion detection event in the **Post_REC** field.
- **PTZ Activation:** Set connected PTZ cameras to start a tour, pattern, or go to a preset location.
- **Sequence:** Sequence mode will begin. Select the numbered tiles next to this option to include the corresponding channels in the sequence.
- **Snapshot:** Select the numbered tiles next to this option to save a snapshot of the corresponding channels.
- **Buzzer:** Check to enable the system buzzer.
- **Warning Light:** Check to enable the warning light when motion is detected. Click **Schedule** to set the warning light schedule. To adjust the warning light settings, refer to section 14.1 *Configuring Warning Light*, page 52.
- **Dual Warning Light (White/Blue Light):** Check to enable the dual warning light when motion is detected. Click **Schedule** to set the dual warning light schedule. To adjust the dual warning light settings, refer to section 14.2 *Configuring Dual Warning Light*, page 52.



NOTE

Warning Light and Dual Warning Light cannot be enabled at the same time.

7. Click **Apply** to save changes.

16.3 Displaying the Face Preview Panel

Display captured faces from face detection in the Face Preview Panel, located on the right side of your camera's Live View display.

To display the face preview panel:

1. From the Live View display, right-click to open the Quick Menu, then click **Live Mode**.

- Click **AI Mode**. The Face Preview Panel will appear on the right side of the screen.




- To disable the Face Preview Panel, click **Continuous**.

16.4 Searching for Face Detection Events (Smart Search)


Search for face detection events on a specific channel or the entire system. You can also choose to back up events (USB flash drive required – not included).

To perform a smart search:

- From the Live View display, right-click to open the Quick Menu, then click **Smart Search**.
- Click the **Face Detection** tab from the side panel.

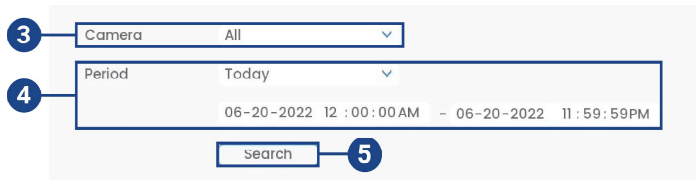

- Select a camera to search for detection events, or select **All** cameras.
- Choose a period for your search, then enter the start and end time.
- Click **Search**.

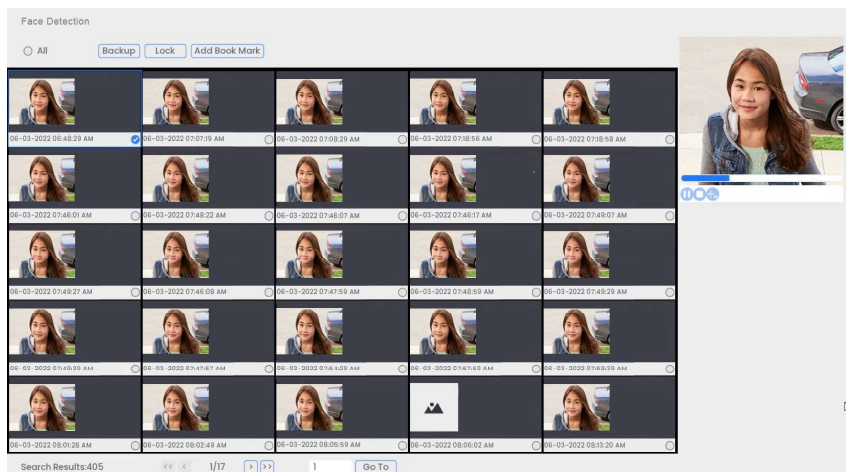

6. Events that match your search criteria are displayed. You now have the following options:
- Click a thumbnail to preview the event. Double-click the preview window to view in full screen.
 - Check thumbnails to perform other actions:
 - **Backup:** Back up events.
 - **Lock:** Lock events.
 - **Add Book Mark:** Bookmark events.

16.5 Configuring the Face Database

The system allows you to create a detailed face database to use with the face recognition feature. The accuracy rate of face recognition depends on the face database. A good face database needs to be continually growing, with a variance in lighting, angles, and facial expressions.


16.5.1 Create a Face Database

Create a detailed collection of identities in the face database using two methods.


- Register faces through imported images (USB required — not included)
- Register faces captured through face detection

To register faces through imported images:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Face Settings** tab from the side panel, then the **Face Database** tab from the drop-down menu.

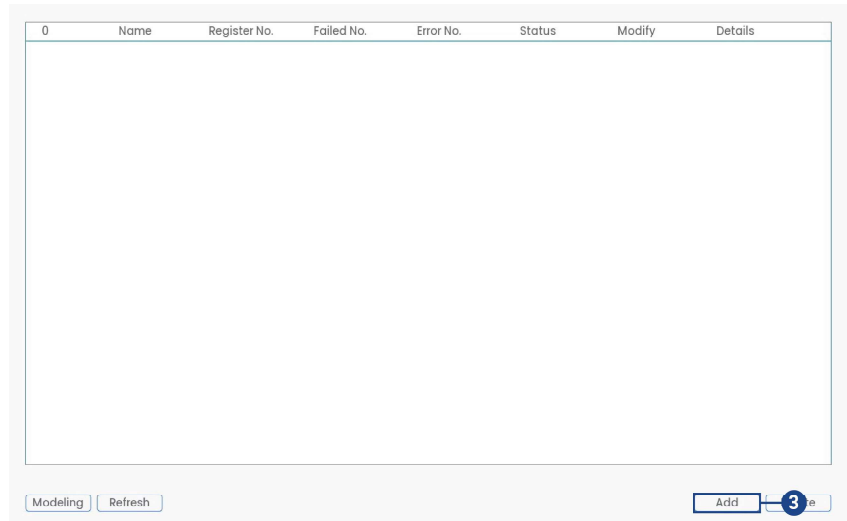

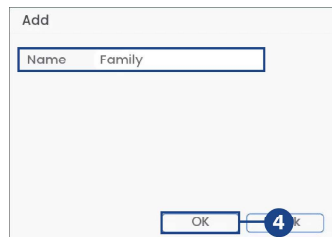


3. Click **Add**.

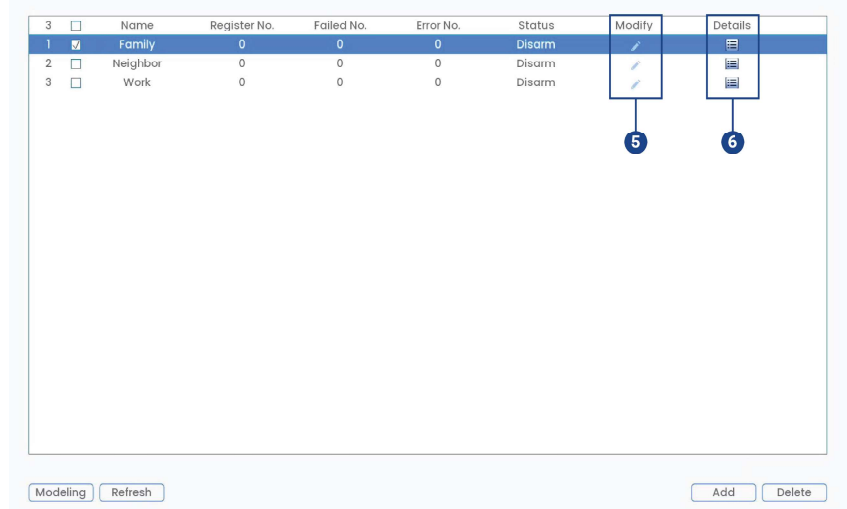

4. Enter a **Name** for the face database, then click **OK**.



5. To edit the database name, click the **Modify** icon .
6. Click the **Details** icon  to view the face database details and add new face images.

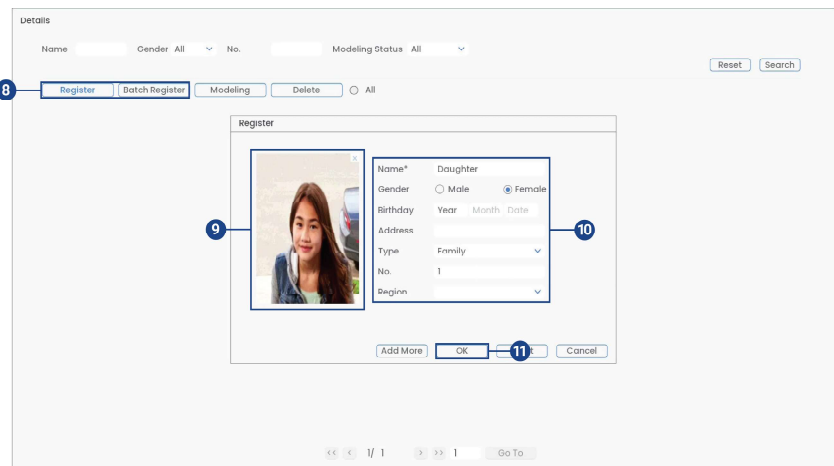

7. Connect your USB (not included) to one of the system's free USB ports.
8. Click **Register** to upload one face image at a time or **Batch Register** to upload more than one face image at a time.
9. Double-click to upload a face image from your connected USB (not included).
10. Fill out additional details for the face database entry.
11. Click **OK** to upload the face image(s).


To register faces captured through face detection:



NOTE


The Face Preview Panel must be enabled to register a face image through face detection. To enable the Face Preview Panel, see section 16.3 *Displaying the Face Preview Panel*, page 62.

1. From the Face Preview Panel, double-click the captured face detection image that you want to register.

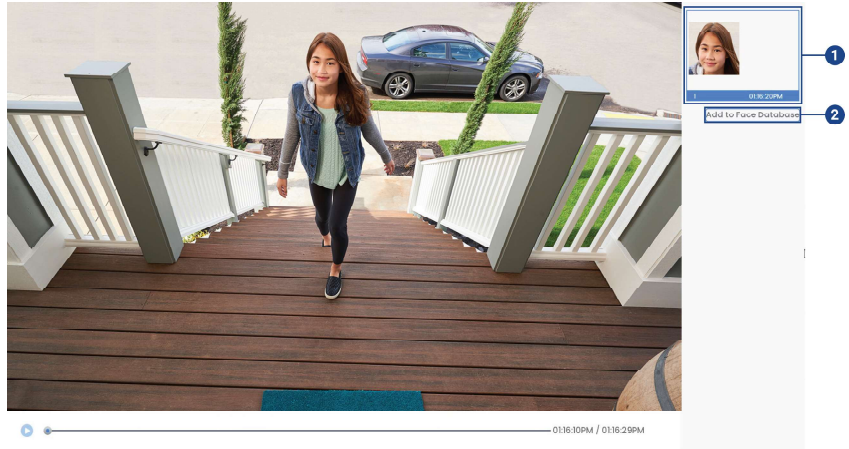

2. Click **Add to Face Database**.

Register



3

Name*

Gender Male Female

Birthday Year Month Date

Province

Type

Region

Address

No.

	<input type="checkbox"/>	Name	Register No.	Failed No.	Error No.
4	<input type="checkbox"/>	Family	5	0	0
	<input checked="" type="checkbox"/>	Neighbor	0	0	0
	<input type="checkbox"/>	Work	0	0	0

5

3. To create a new face database, enter a name and fill out the rest of the details.
4. To add to an existing database, check the face database the face image applies to.
5. Click **OK** to register the captured face image.


16.5.2 Search for Registered Faces in the Database

You can quickly search through a Face Database by entering the registered face details.


To search through the face database:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Events**, then **Event Settings**. Click the **Face Settings** tab from the side panel, then the **Face Database** tab from the drop-down menu.

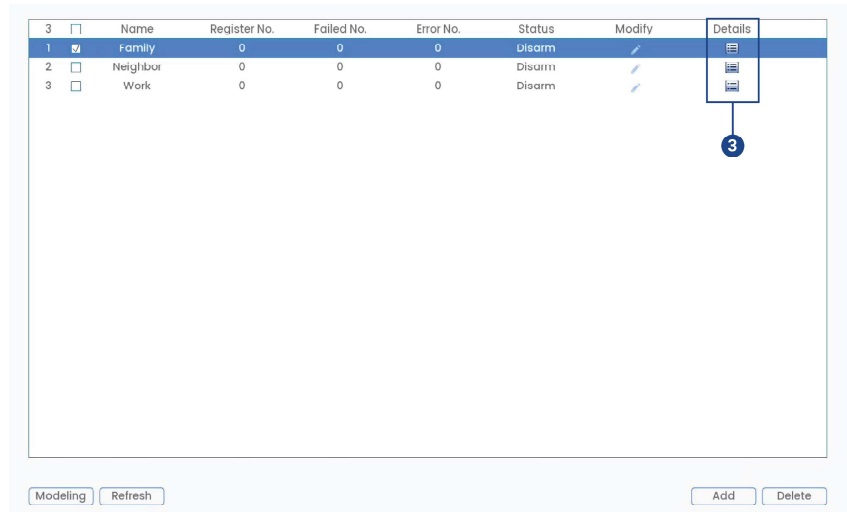

- Click the **Details** icon for the face database that you want to search through.

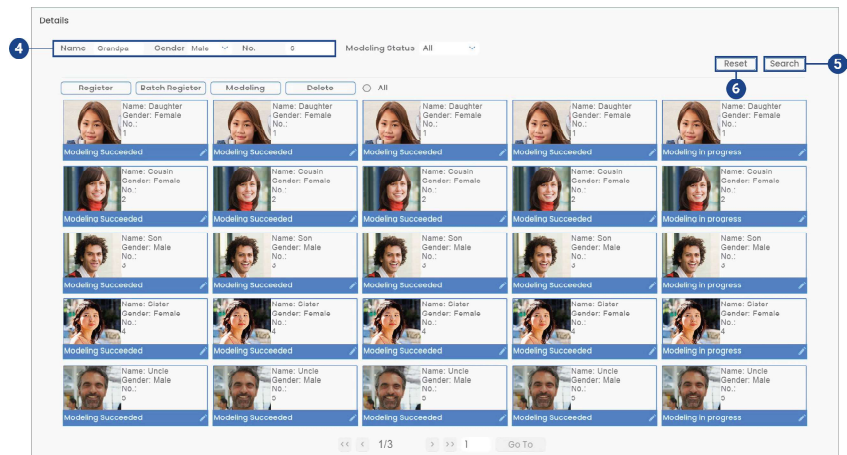

- Enter the assigned **Name**, **Gender**, or the **No.** (ID number).
- Click **Search**.
- (*OPTIONAL*) Click **Reset** to clear the search.


16.5.3 Deleting Registered Faces or a Face Database

You can easily delete registered face images from a face database as well as delete one or more face databases.


To delete registered faces in a face database:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Events**, then **Event Settings**. Click the **Face Settings** tab from the side panel, then the **Face Database** tab from the drop-down menu.

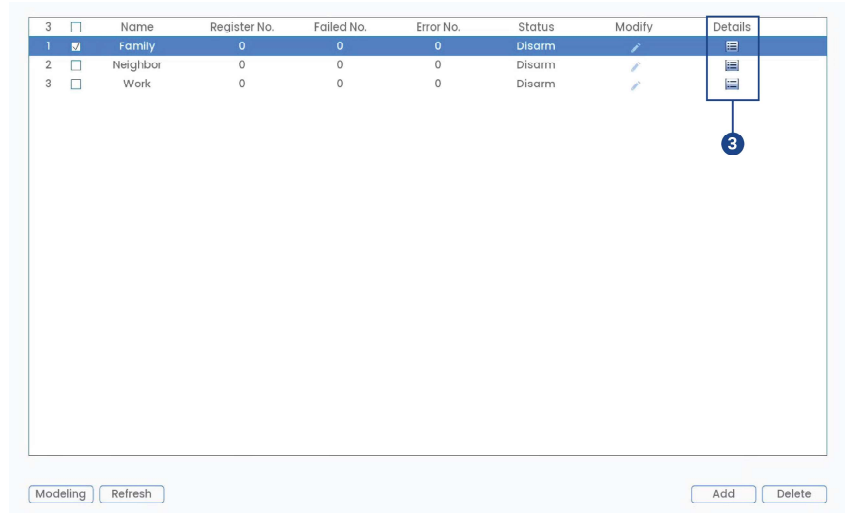

- Click the **Details** icon for the face database that you want to delete registered face images from.

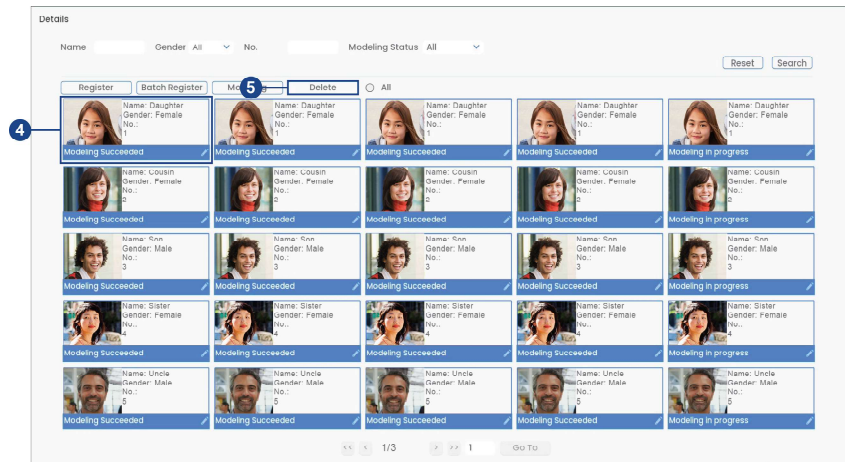


- Click the registered face image that you want to delete.
- Click **Delete**.

To delete a face database:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Events**, then **Event Settings**. Click the **Face Settings** tab from the side panel, then the **Face Database** tab from the drop-down menu.

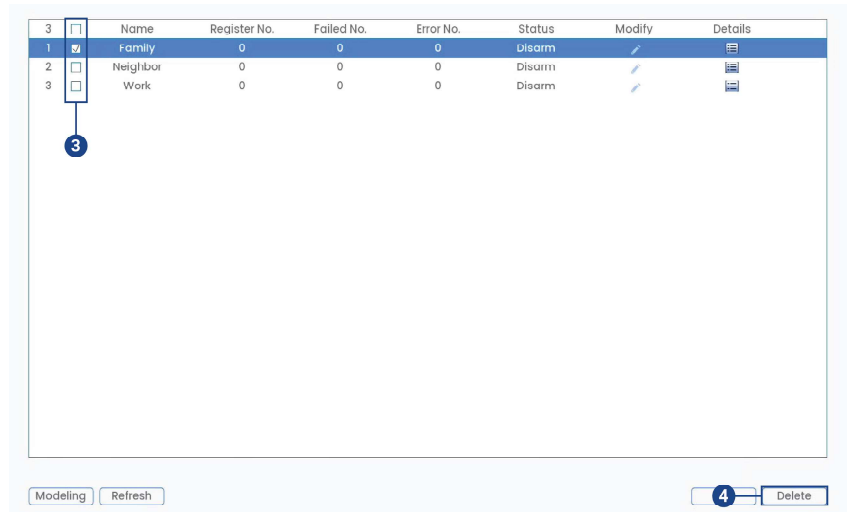

- Check the face database(s) that you want to delete.
- Click **Delete**.

16.6 Configuring Face Recognition


Use the face recognition feature to compare and match faces against an existing face database of identities. Before you configure for face recognition, make sure you have a face database to link with. See section 16.5 *Configuring the Face Database*, page 64 for more details.

16.6.1 Configuring General Alarm Mode for Face Recognition


General Alarm is used to link face recognition with existing face databases. This way you can be alerted when someone in one of your face databases is detected.



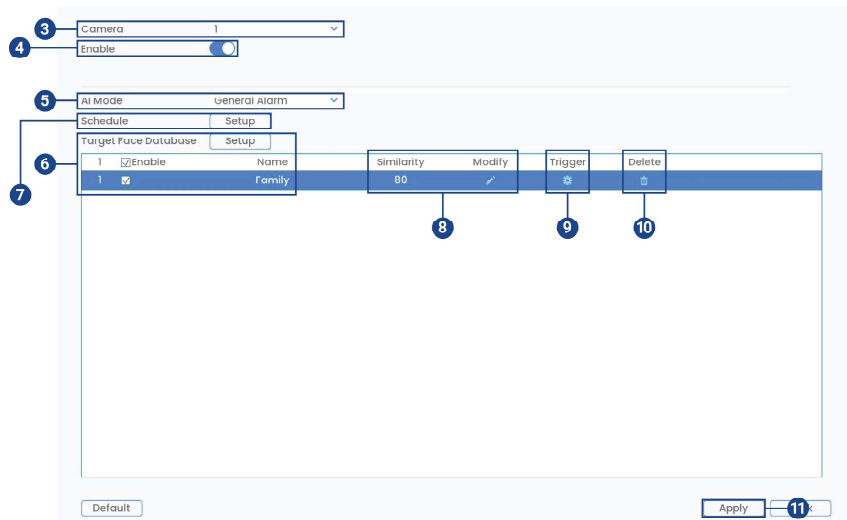

To configure general alarm mode for face recognition:


- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **Events**, then **Event Settings**. Click the **Face Settings** tab from the side panel, then the **Face Recognition** tab from the drop-down menu.

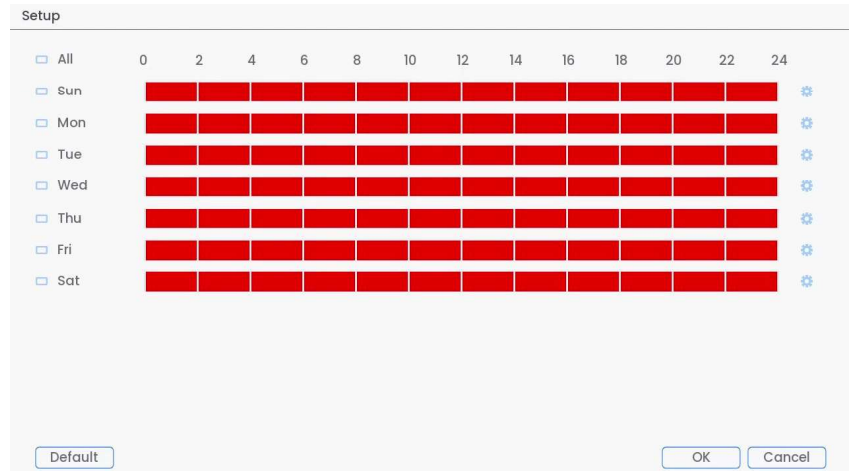

3. Select a channel with a compatible camera.
4. Check to enable face recognition on the selected channel.
5. Select the **General Alarm** mode.
6. Click **Setup** next to **Target Face Database** and select the face database(s) that you want to match face recognition with. Click **OK**, then check to enable the face database(s) for face recognition.
7. Click **Setup** next to **Schedule** to choose which days of the week to enable face recognition:



- Click or click-and-drag along each of the red timelines to quickly add or remove time from each day's schedule in 30-minute segments.
 - Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
 - To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.
8. Click the **Modify** icon  to enter a percentage between 50% to 100% for calculating the face recognition similarity with the linked face database(s).

9. Click the **Trigger** icon  to choose how the system will react to face recognition:

Trigger


Show Message Send Email
 Record Channel Post_REC 10 sec.
 PTZ Activation
 Sequence Snapshot
 Buzzer
 Warning Light
 White/Blue Light

- **Show Message:** Check to enable an on-screen pop-up when one of your cameras detects motion. On-screen pop-up shows the channels an event occurred on and the type of event.
- **Send Email:** Check to enable email alerts. You must configure email alerts before you will be able to receive them (see 19.6.9 *Configuring Email Alerts*, page 105).
- **Record Channel:** Select the channels that will record when motion is detected on the selected channel. Set the length of recording following a motion detection event in the **Post_REC** field.
- **PTZ Activation:** Set connected PTZ cameras to start a tour, pattern, or go to a preset location.
- **Sequence:** Sequence mode will begin. Select the numbered tiles next to this option to include the corresponding channels in the sequence.
- **Snapshot:** Select the numbered tiles next to this option to save a snapshot of the corresponding channels.
- **Buzzer:** Check to enable the system buzzer.
- **Warning Light:** Check to enable the warning light when motion is detected. Click **Schedule** to set the warning light schedule. To adjust the warning light settings, refer to section 14.1 *Configuring Warning Light*, page 52.
- **Dual Warning Light (White/Blue Light):** Check to enable the dual warning light when motion is detected. Click **Schedule** to set the dual warning light schedule. To adjust the dual warning light settings, refer to section 14.2 *Configuring Dual Warning Light*, page 52.



NOTE

Warning Light and Dual Warning Light cannot be enabled at the same time.

10. To remove a face database from the face recognition list, click the **Delete** icon .
11. Click **Apply** to save changes.


16.6.2 Configuring Unfamiliar Face Alarm Mode for Face Recognition

Unfamiliar Face Alarm is used to detect faces that do not match up with any face databases.


To configure unfamiliar face alarm mode for face recognition:




1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

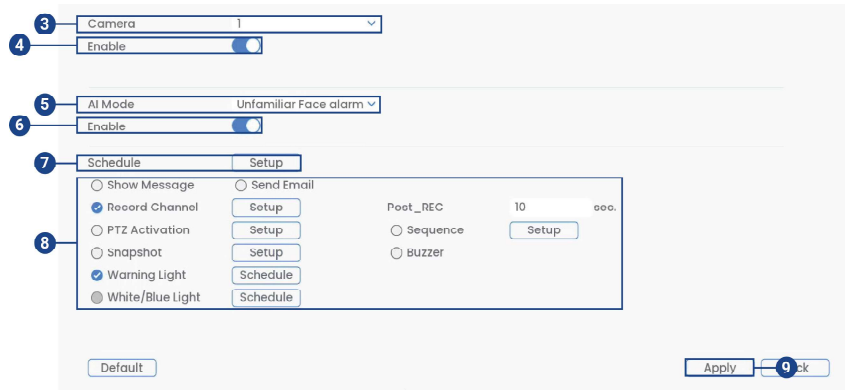- Click **Events**, then **Event Settings**. Click the **Face Settings** tab from the side panel, then the **Face Recognition** tab from the drop-down menu.

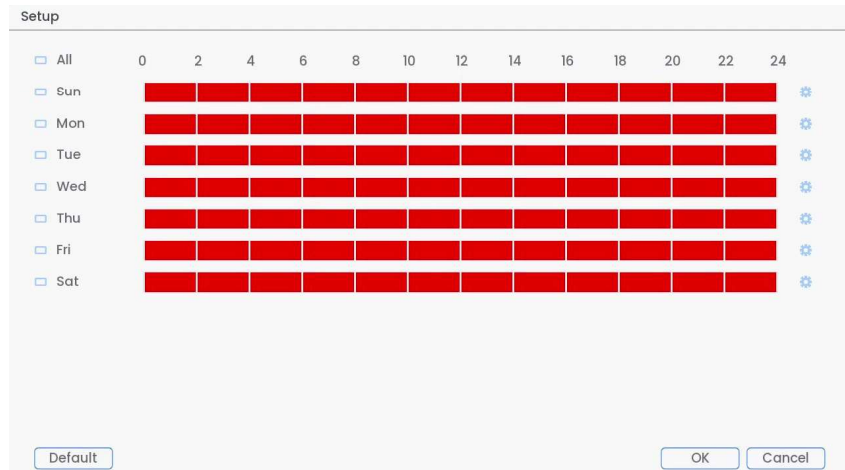

- Select a channel with a compatible camera.
- Check to enable face recognition on the selected channel.
- Select the **Unfamiliar Face Alarm** mode.
- Check to enable the **Unfamiliar Face Alarm** mode.
- Click **Setup** next to **Schedule** to choose which days of the week to enable face recognition:



- Click or click-and-drag along each of the red timelines to quickly add or remove time from each day's schedule in 30-minute segments.
- Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
- To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.

8. Choose how the system will react to face recognition:

Show Message Send Email
 Record Channel Setup Post_REC 10 sec.
 PTZ Activation Setup
 Sequence Setup Snapshot Setup
 Buzzer
 Warning Light Schedule
 White/Blue Light Schedule

- **Show Message:** Check to enable an on-screen pop-up when one of your cameras detects motion. On-screen pop-up shows the channels an event occurred on and the type of event.
- **Send Email:** Check to enable email alerts. You must configure email alerts before you will be able to receive them (see 19.6.9 *Configuring Email Alerts*, page 105).
- **Record Channel:** Select the channels that will record when motion is detected on the selected channel. Set the length of recording following a motion detection event in the **Post_REC** field.
- **PTZ Activation:** Set connected PTZ cameras to start a tour, pattern, or go to a preset location.
- **Sequence:** Sequence mode will begin. Select the numbered tiles next to this option to include the corresponding channels in the sequence.
- **Snapshot:** Select the numbered tiles next to this option to save a snapshot of the corresponding channels.
- **Buzzer:** Check to enable the system buzzer.
- **Warning Light:** Check to enable the warning light when motion is detected. Click **Schedule** to set the warning light schedule. To adjust the warning light settings, refer to section 14.1 *Configuring Warning Light*, page 52.
- **Dual Warning Light (White/Blue Light):** Check to enable the dual warning light when motion is detected. Click **Schedule** to set the dual warning light schedule. To adjust the dual warning light settings, refer to section 14.2 *Configuring Dual Warning Light*, page 52.

NOTE
Warning Light and Dual Warning Light cannot be enabled at the same time.

9. Click **Apply** to save changes.

16.7 Searching for Face Recognition Events (Smart Search)

Search for face recognition events on a specific channel or the entire system. You can also choose to back up events (USB flash drive required – not included).


To perform a smart search:

1. From the Live View display, right-click to open the Quick Menu, then click **Smart Search**.
2. Click the **Face Recognition** tab from the side panel.

3 Camera All v
4 Period Today v
 06-20-2022 12 : 00 : 00 AM - 06-20-2022 11 : 59 : 59 PM
Search 5

3. Select a camera to search for face recognition events, or select **All** cameras.

4. Choose a period for your search, then enter a start and end time.
5. Click **Search**.

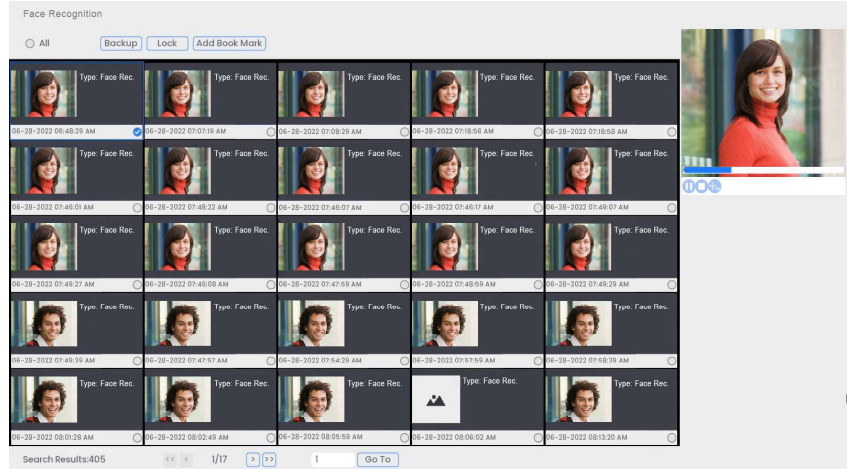

6. Events that match your search criteria are displayed. You now have the following options:
 - Click a thumbnail to preview the event. Double-click the preview window to view in full screen.
 - Check thumbnails to perform other actions:
 - **Backup:** Back up events.
 - **Lock:** Lock events.
 - **Add Book Mark:** Bookmark events.


The Virtual Fence feature allows you to draw a fence line or an area detection to protect any border or area within the camera’s field-of-view. For enhanced security the system can be set to trigger alarms when an object crosses a designated virtual fence.

- **Fence Line:** Fence lines are drawn within the camera’s image to define area boundaries and determine which direction a person and/or vehicle needs to travel to trigger an alarm. If an object crosses the fence line, an alarm is triggered. Fence lines are useful for monitoring when an object is entering/exiting an area, or to monitor areas with flow control.
- **Area Detection:** Area detection is a designated area drawn in the camera’s image to detect motion and determine which direction a person and/or vehicle needs to travel to trigger an alarm. If motion is detected within the area detection, an alarm is triggered. Area detection can be used to protect areas where no one should be present or anywhere that should have no activity during non-work hours.

Virtual Fence is compatible with certain Lorex cameras. For a complete list of compatible cameras, navigate to your recorder series at lorex.com/compatibility.

17.1 Ensuring Virtual Fence Detection Accuracy

The following are important camera installation notes to ensure accurate virtual fence detection. Refer to the documentation that came with your camera or search for your camera model number at lorex.com for full mounting instructions.

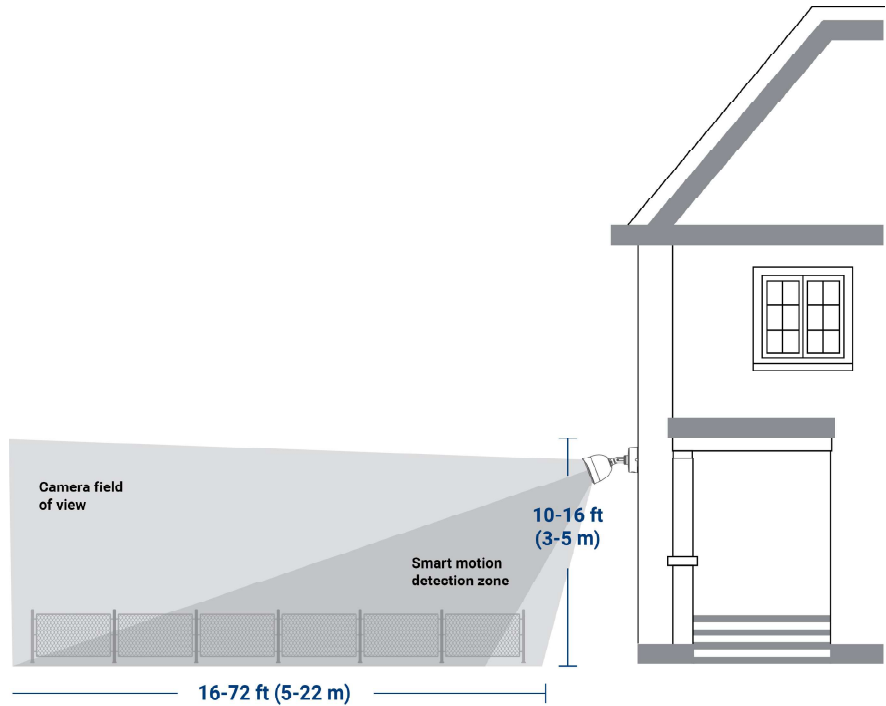

Angle	Height	Minimum Distance	Maximum Distance
15°–45°	10–16ft (3–5m)	16ft (5m)	72ft (22m)

- Install the camera in a simple environment with low-traffic
- Avoid facing the camera in areas with blockage or obstructions such as trees
- Ensure that there is sufficient lighting around the area
- Angle the camera towards indirect light; avoid locations with complex lighting, overexposure, low light, or strong background lights
- If monitoring vehicles, install the camera parallel to roadsides to avoid headlights

17.2 Configuring Virtual Fence

Create fence lines or area detection rules to monitor protected areas and trigger intrusion alarms. Select channels that you want to enable virtual fence on and adjust preferences.




NOTE


Virtual Fence cannot be used simultaneously as Face Detection. You will need to disable Face Detection on all channels to enable Virtual Fence.

To configure virtual fence settings:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Virtual Fence** tab from the side panel.

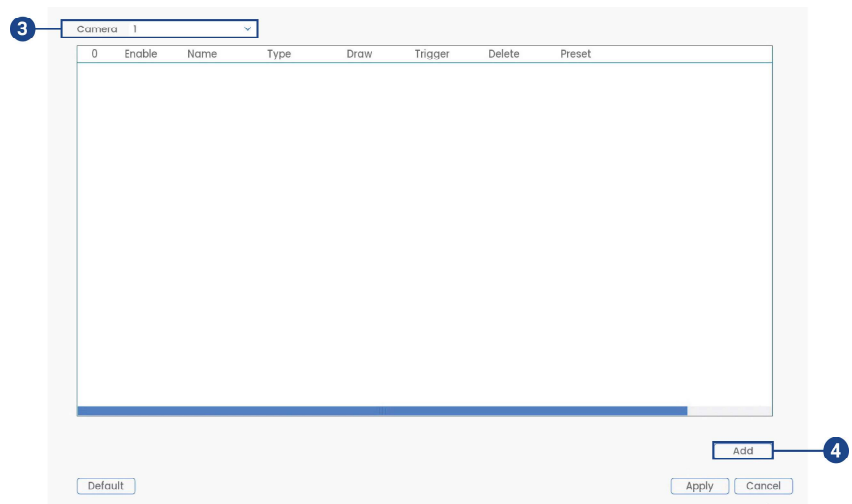

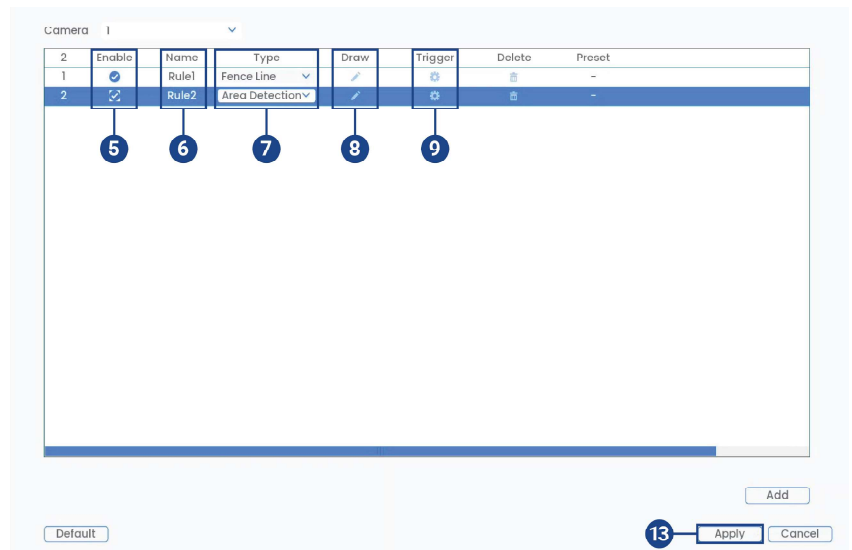

3. Select a channel with a compatible camera.
4. Click **Add** to create a virtual fence.




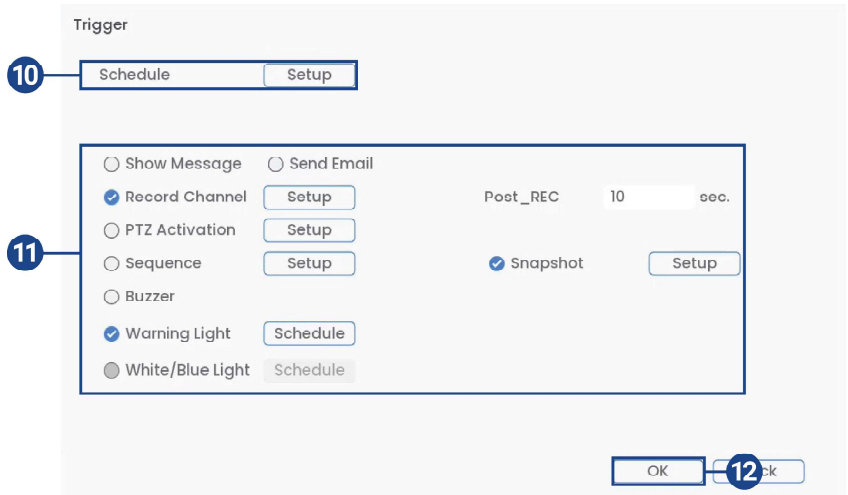
5. Check to enable the rule.
6. Set a name for the rule by double-clicking the mouse over the **Name** of the rule.
7. Select between **Fence Line** or **Area Detection** types.

8. Click the **Draw** icon  and customize the active area for virtual fence.






- **Draw Rule:** Select the draw icon  and click on the camera's live view screen. For fence line, draw a line around the border that you want to establish. For area detection, draw around the area that you want to protect. Continue to click to change the direction of the virtual fence and then right-click to finish. Click the delete icon  to remove a drawn rule.
- **Action:** Check **Appear** to detect if a person and/or vehicle appears in the defined area or check **Cross** to detect if a person and/or vehicle enters or exits the defined area, or check both.
- **Direction:** Determine which direction an object needs to travel to trigger an alarm. You can select **Entry** for movement entering the defined area, or **Exit** for movement exiting the defined area, or **Both** for both types of directions.
- **Target Filter:** Click to disable or enable the detection target filter. When enabled, check **Person** or **Vehicle** or both to enable each type of detection. When the target filter is disabled, virtual fence will not detect any movement.
- Click **OK** to finish.

9. Click the **Trigger** icon  to adjust when and how the system will react to virtual fence detection.



10. Click **Setup** next to **Schedule** to choose which days and times of the week to enable virtual fence:

The screenshot shows a 'Setup' window with a grid of 24-hour segments for each day of the week (Sun-Sat). The segments are currently filled with red, indicating the fence is active for the entire 24 hours of every day. The 'All' checkbox is selected. There are 'Default', 'OK', and 'Cancel' buttons at the bottom.

- Click or click-and-drag along each of the red timelines to quickly add or remove time from each day's schedule in 30-minute segments.
- Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
- To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.

11. Choose how the system will react when virtual fence is triggered:

The screenshot shows a configuration panel for virtual fence reactions. It includes the following options and settings:

- Show Message
- Send Email
- Record Channel (with a 'Setup' button)
- Post_REC: 10 sec.
- PTZ Activation (with a 'Setup' button)
- Sequence (with a 'Setup' button)
- Snapshot (with a 'Setup' button)
- Buzzer
- Warning Light (with a 'Schedule' button)
- White/Blue Light (with a 'Schedule' button')

- **Show Message:** Check to enable an on-screen pop-up when one of your cameras detects motion. On-screen pop-up shows the channels an event occurred on and the type of event.
- **Send Email:** Check to enable email alerts. You must configure email alerts before you will be able to receive them (see 19.6.9 *Configuring Email Alerts*, page 105).
- **Record Channel:** Select the channels that will record when motion is detected on the selected channel. Set the length of recording following a motion detection event in the **Post_REC** field.
- **PTZ Activation:** Set connected PTZ cameras to start a tour, pattern, or go to a preset location.
- **Sequence:** Sequence mode will begin. Select the numbered tiles next to this option to include the corresponding channels in the sequence.
- **Snapshot:** Select the numbered tiles next to this option to save a snapshot of the corresponding channels.
- **Buzzer:** Check to enable the system buzzer.
- **Warning Light:** Check to enable the warning light when motion is detected. Click **Schedule** to set the warning light schedule. To adjust the warning light settings, refer to section 14.1 *Configuring Warning Light*, page 52.
- **Dual Warning Light (White/Blue Light):** Check to enable the dual warning light when motion is detected. Click **Schedule** to set the dual warning light schedule. To adjust the dual warning light settings, refer to section 14.2 *Configuring Dual Warning Light*, page 52.




NOTE

Warning Light and Dual Warning Light cannot be enabled at the same time.

12. Click **OK**.

13. Click **Apply** to save changes.

14. To remove a virtual fence rule, click the **Delete** icon  for that rule.

17.3 Searching for Virtual Fence Events (Smart Search)

Search for virtual events on a specific channel or the entire system. You can also choose to back up events (USB flash drive required – not included).

To perform a smart search:


1. From the Live View display, right-click to open the Quick Menu, then click **Smart Search**.

- Click the **Virtual Fence** tab from the side panel.

The screenshot shows the search interface for Virtual Fence. It includes the following elements:

- 3**: Camera dropdown menu set to '1'.
- 4**: Period dropdown menu set to 'Today', with a date range of '06-20-2022 12:00:00 AM - 06-20-2022 11:59:59 PM'.
- 5**: Event Type dropdown menu set to 'All'.
- 6**: Detect checkboxes for 'Person' and 'Vehicle', both of which are checked.
- 7**: Search button.

- Select a camera to search for virtual events, or select **All** cameras.
- Choose the period for your search, then enter the start and time.
- Select the type of virtual fence for your search, or select **All**.
- Check the detection type or both.
- Click **Search**.

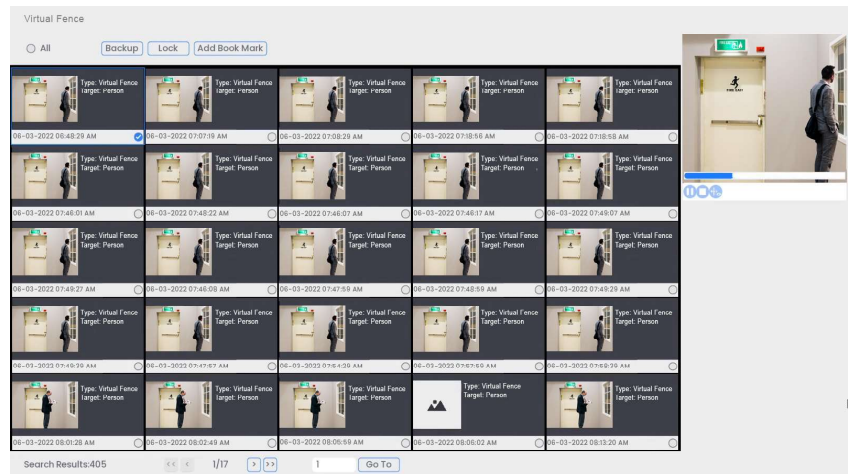

- Events that match your search criteria are displayed. You now have the following options:
 - Click a thumbnail to preview the event. Double-click the preview window to view in full screen.
 - Check thumbnails to perform other actions:
 - Backup:** Back up events.
 - Lock:** Lock events.
 - Add Book Mark:** Bookmark events.

Managing Passwords and User Accounts

Passwords are enabled by default and are required to access the Main Menu or connect to the system using a computer or mobile device. You will be prompted to create a custom password after you connect for the first time.

NOTE

If you forget the password to the system, contact technical support to have it reset.

18.1 User Accounts


The system includes the following default accounts:


- **admin:** The administrator account has full access to the system, may configure all system settings, and can manage user accounts.
- **user:** User accounts are secondary accounts which can be assigned limited access to system settings and camera feeds.

18.1.1 Changing Passwords


You can change the system password of the administrator and user accounts.

To change an account password:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Users**, then the **User** tab from the side panel.
3. Click the **Modify** icon  next to the account you want to change the password for.

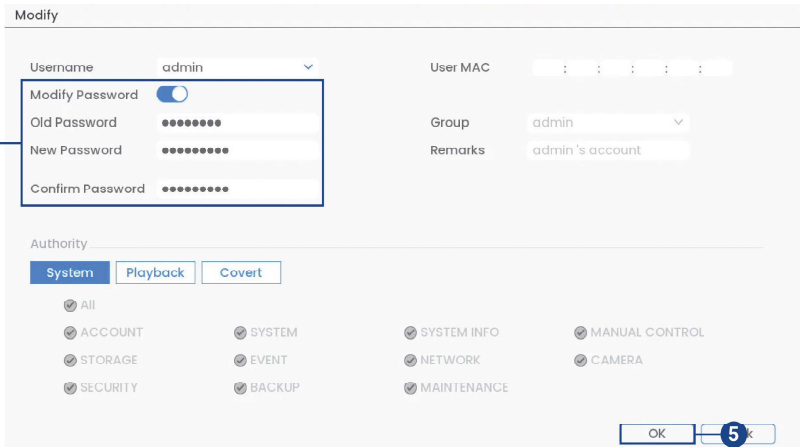

4. Configure the following:

- **Modify Password:** Click to enable () password modification.
- **Old Password:** Enter the current password.
- **New Password:** Enter the new password you want to use for the system.

NOTE

Passwords for the system must be a minimum of 8 characters, and must include at least 2 of the following character types: lowercase, uppercase, numeric, and special characters.

- **Confirm Password:** Re-enter the new password.


5. Click **OK**.

18.1.2 Adding Users


You can allow multiple users to log in to the system. When adding different users, you can assign what menus they have access to. For example, you may want your friend to monitor your system while you are away, while not giving full access to your system.

To add a user:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Users**, then the **User** tab from the side panel.

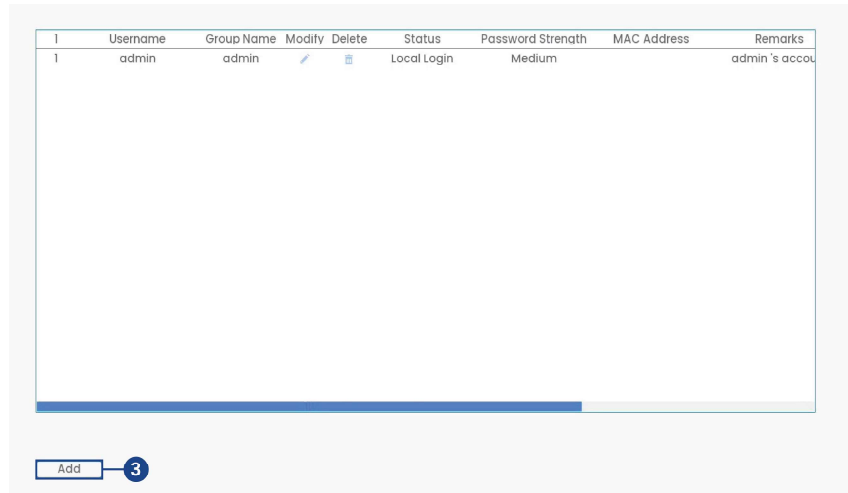

3. Click **Add**.

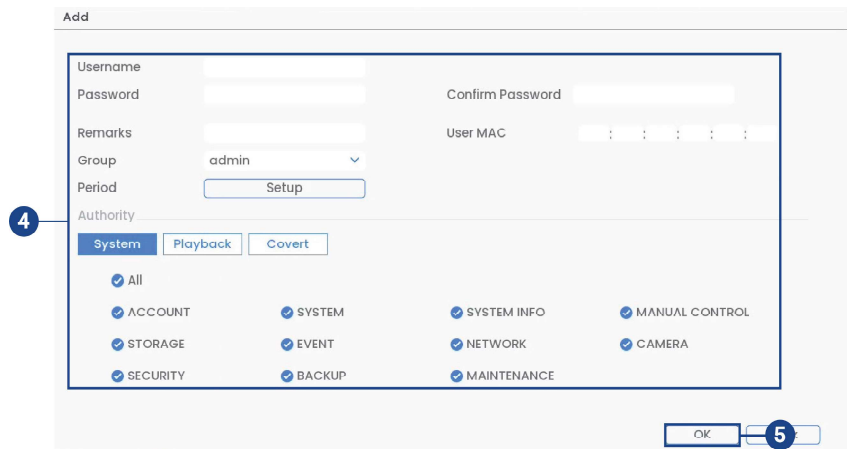


-
4. Configure the following:
 - **Username:** Enter a name for the user account.
 - **Password:** Enter a password for the user account. Enter the password again under **Confirm Password**.
 - **Remarks:** (Optional) Enter a description of the user account.
 - **Group:** Select the group you would like to assign to this user account. A user account cannot be given permissions its group does not have.
 - **Period:** Setup a schedule for when the added user can access the system.
 - **Authority:** Check the permissions you would like the user account to have. Under the **System** tab, select the menus the user account may access. Under the **Playback** tab, select which channels the user account may access recorded video from. Under the **Covert** tab, select the channels the user account may view live video from.
 - **User MAC:** Not supported — leave blank.
 5. Click **OK**.



18.1.3 Modifying Users

Modify account details, such as account username or permissions.


To modify a user:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Users**, then the **User** tab from the side panel.
3. Click the **Modify** icon  next to the account you want to modify.
4. Update account details as needed, then click **OK**.

18.1.4 Deleting Users

Remove a user from the system.

To remove a user:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Users**, then the **User** tab from the side panel.
3. Click the **Delete** icon  next to the account you want to delete.
4. Click **OK**.

18.2 Account Groups

Account groups can be used to easily manage permissions for multiple user accounts. User accounts can be given all the permissions of a group, but cannot be given permissions that the group does not have.

The system includes the following groups by default:

- **admin:** Accounts in the admin group are system administrators. They have full access to the system, may configure all system settings, and can manage user accounts.
- **user:** Accounts in the user group are normal users. They have limited access to system menus.


18.2.1 Adding Groups

Add a new group with unique system permissions.


To add a group:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

2. Click **Users**, then the **Group** tab from the side panel.

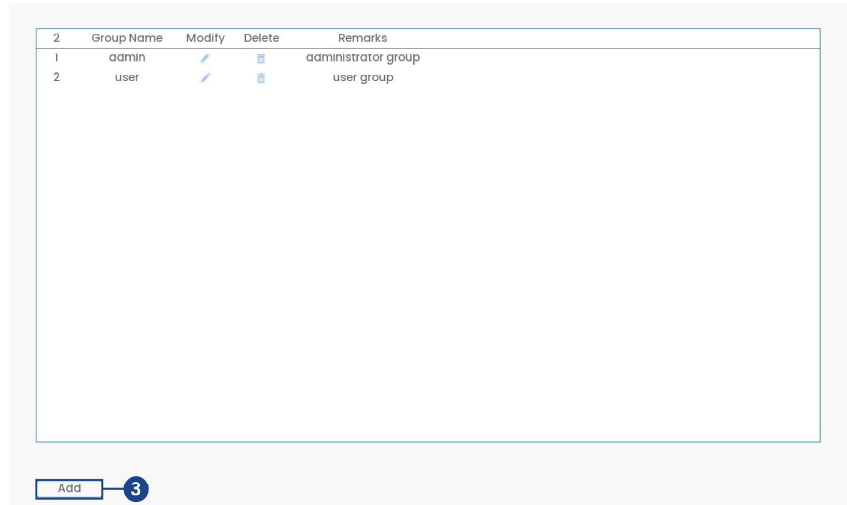

3. Click **Add**.

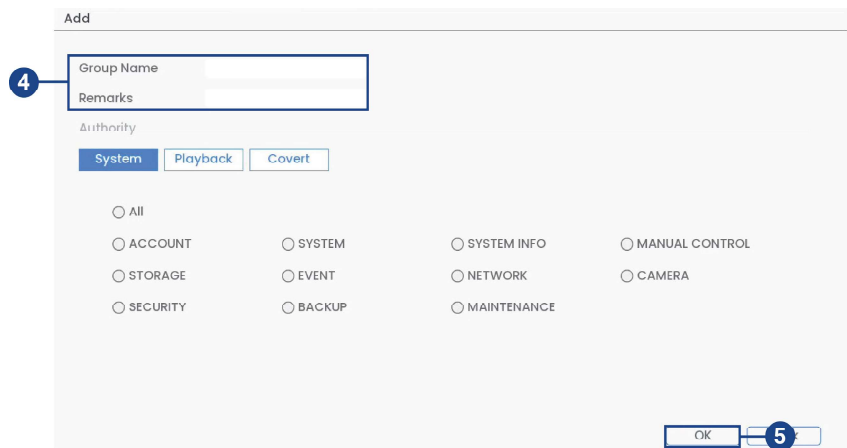

4. Configure the following:
 - **Group Name:** Enter a name for the group.
 - **Remarks:** (Optional) Enter a description of the group.
 - **Authority:** Check the permissions you would like the user account to have. Under the **System** tab, select the menus the user account may access. Under the **Playback** tab, select which channels the user account may access recorded video from. Under the **Covert** tab, select the channels the user account may view live video from.
5. Click **OK**.

18.2.2 Modifying Groups

Change an existing group's name or permissions.

To modify a group:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Users**, then the **Group** tab from the side panel.
3. Click the **Modify** icon next to the group you want to modify.

4. Update group details as needed, then click **OK**.


18.2.3 Deleting Groups


Remove a group.

To delete a group:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Users**, then the **Group** tab from the side panel.
3. Click the **Delete** icon  next to the group you want to delete.
4. Click **OK**.

To access the main menu:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
OR
- Click  on the Navigation Bar.

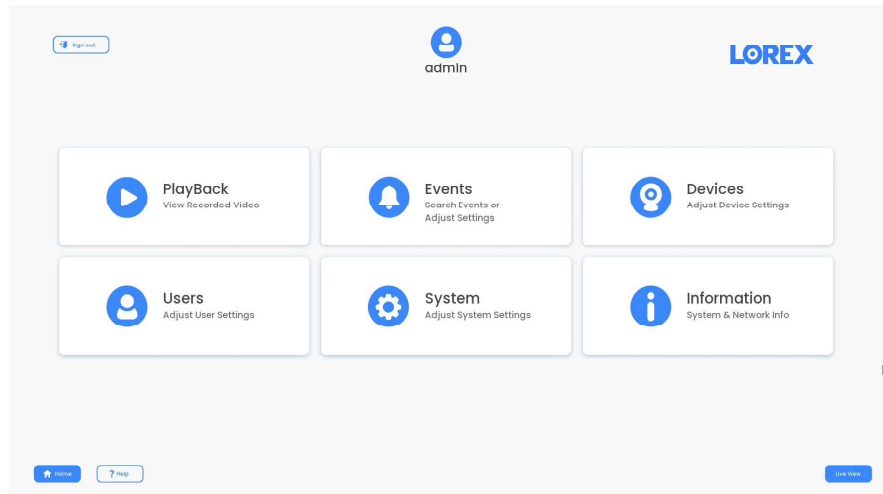**19.1 Playback**

See chapter 10 *Playback*, page 34 for details.

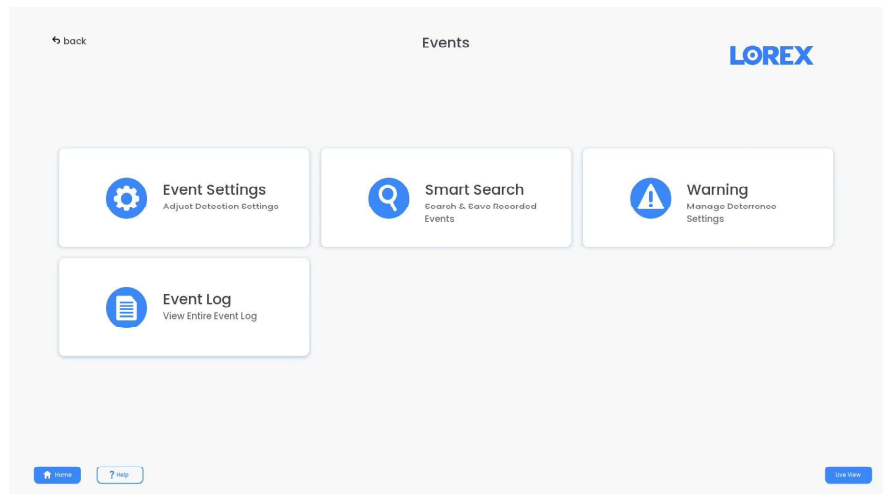19.2 Events


Set preferences for events such as video loss, system warnings, and event logs. The Events menu is also used to set preferences for smart motion detection, deterrence cameras, and smart search.



19.2.1 Video Loss


Configure video loss settings and how the system reacts to a video loss event. **Video loss** means that video from one or more cameras was interrupted or disabled. It could be caused by a number of factors, such as a loose or damaged connection, loss of power to a camera, or a blocked camera lens.

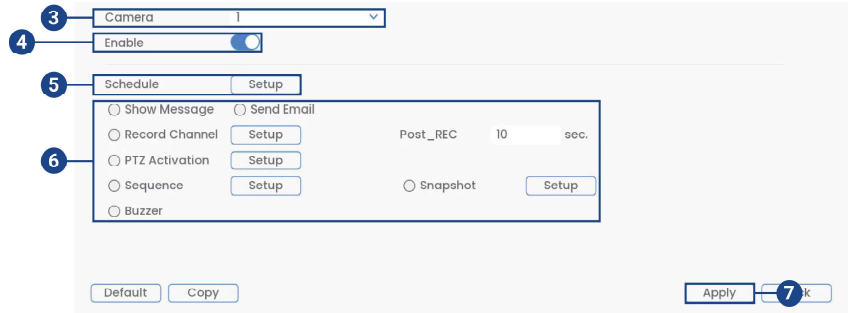


To configure video loss settings:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Event Settings**. Click the **Event Settings** tab from the side panel, then the **Video Loss** tab from the top panel.

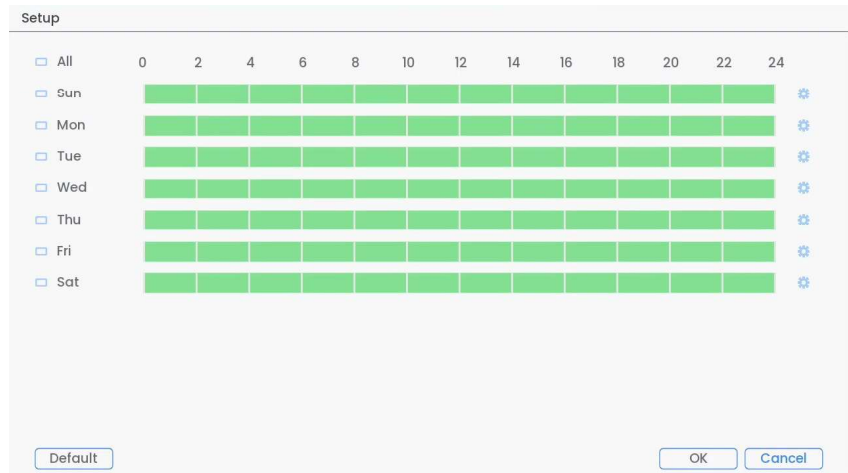

3. Select a channel to configure.
4. Click to enable () / disable () video loss events for the selected channel.
5. Click to set a weekly schedule for video loss events. By default, video loss events are enabled at all times.



- Click or click-and-drag along each of the green timelines to quickly add or remove time from each day's schedule in 30-minute segments.
- Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
- To make fine adjustments to a schedule, click  . This will allow you to set exact start and end times for a schedule.


6. Choose how the system will react when video loss occurs:
 - **Show Message:** Video loss error message will appear on the recorder's display.
 - **Send Email:** Send an email notification with details on the event (requires email configuration — see 19.6.9 *Configuring Email Alerts*, page 105 for details).
 - **Record Channel:** Select the numbered tiles next to this option to record video from the corresponding channels. Set the length of recording following a video loss event in the **Post_REC** field.
 - **PTZ Activation:** Set connected PTZ cameras to start a tour, pattern, or go to a preset location.
 - **Sequence:** Sequence mode will begin. Select the numbered tiles next to this option to include the corresponding channels in the sequence.
 - **Snapshot:** Select the numbered tiles next to this option to save a snapshot of the corresponding channels.
 - **Buzzer:** The recorder will sound an audible alarm.
7. Click **Apply** to save changes.
8. (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).



19.2.2 System Warnings

The system is set to provide warnings for various events and issues. The warning menu is broken into 2 event types: hard disk drive events and network events.

To set preferences for hard disk drive events:

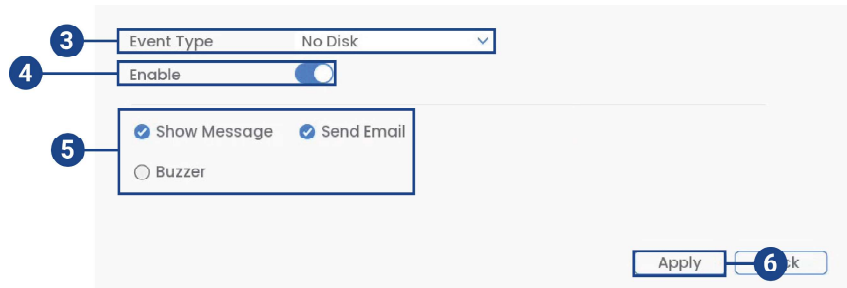1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Events**, then **Warning**. Click the **HardDisk** tab from the side panel.






3. Choose the event type you want to set preferences for:
 - **No Disk:** No hard disk drive detected.
 - **Disk Error:** A hard disk drive error has been detected.
 - **Disk Full:** The hard disk drive is full or almost full. Enter the percentage of disk space remaining that will trigger a warning next to **Less Than**. Disk Full warnings will not occur if hard disk drive overwrite is enabled.
 - **All:** Configure warnings for all hard disk drive events.
4. Click to enable () / disable () the selected event type.
5. Choose how the system will react when the selected event occurs:
 - **Show Message:** Error message will appear on the recorder's display.
 - **Buzzer:** The recorder will sound an audible alarm.
 - **Send Email:** Send an email notification with details on the event (requires email configuration — see 19.6.9 *Configuring Email Alerts*, page 105 for details).
6. Click **Apply** to save changes.

To set preferences for network events:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

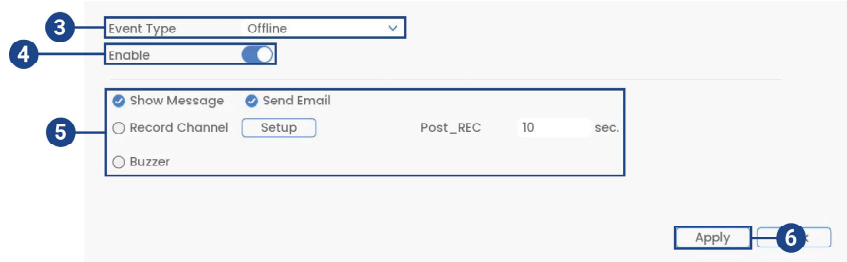- Click **Events**, then **Warning**. Click the **Network** tab from the side panel.




- Choose the event type you want to set preferences for:
 - **Offline:** The system has lost connection to the network.
 - **IP Conflict:** More than one device on your network has the same IP address.
 - **MAC Conflict:** More than one device on your network has the same MAC address.
 - **All:** Configure warnings for all network events.
- Click to enable () / disable () the selected event type.
- Choose how the system will react when the selected event occurs:
 - **Show Message:** Error message will appear on the recorder's display.
 - **Send Email:** Send an email notification with details on the event (requires email configuration — see 19.6.9 *Configuring Email Alerts*, page 105 for details).
 - **Record Channel:** For **Offline** events only. Select the numbered tiles next to this option to record video from the corresponding channels. Set the length of recording following a network disconnection event in the **Post_REC** field.
 - **Buzzer:** The recorder will sound an audible alarm.
- Click **Apply** to save changes.

19.2.3 Searching Event Logs


Search all channels for events, including motion detection and video loss.

To search for events:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **Events**, then **Event Log**.

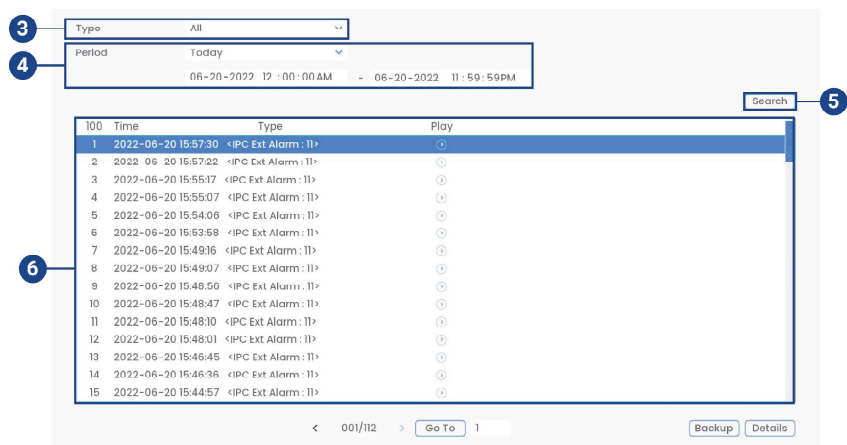

- Select an event type to search for.
- Enter a start and end time for your search.
- Click **Search**.

6. Events that match your search criteria are displayed:
- The **Type** column is formatted to show <[Event Type]: [Channel Number]>.
 - Click **Details** to see more information on the selected event.
 - Motion events have more options than other events. You can view the event by clicking  in the **Playback** column, or back up the video clip to a USB flash drive (not included) by clicking **Backup**.

19.3 Backup

See chapter 11 *Backup*, page 40 for details.

19.4 Display

Set the system's monitor resolution, listen-in audio, sequence mode, and other display settings.

19.4.1 Setting the Recorder's Output Resolution

The first time you power up the system and complete the Lorex Setup Wizard, the system will automatically match the resolution of the connected monitor. You can set the recorder to a different output resolution at any time.




CAUTION

If you need to switch the monitor used with the system, make sure you set the recorder to an output resolution supported by the new monitor before switching.

To change the output resolution:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **Display**. Click the **Display** tab from the side panel.

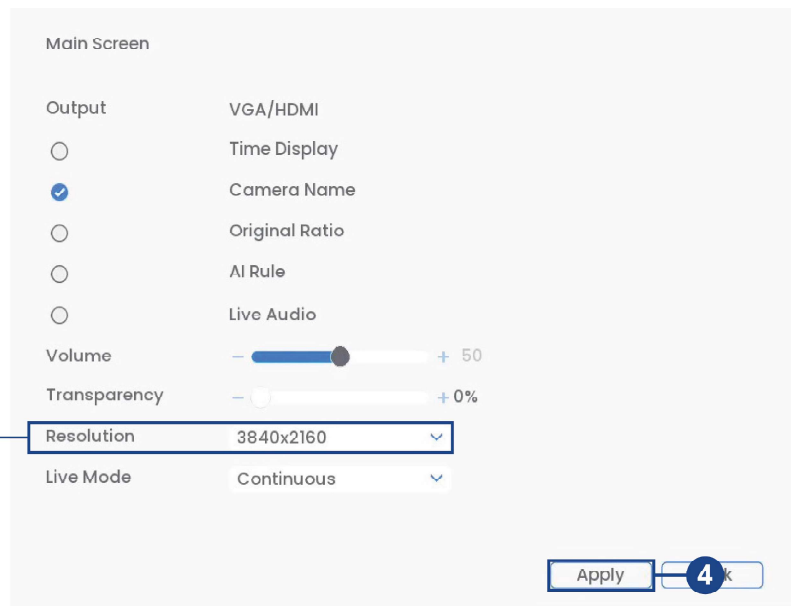

3. Set the resolution to match the highest resolution supported by your monitor. For example, select **3840×2160** for 4K monitors, or **1920×1080** for 1080p.
4. Click **Apply** to save changes. The recorder will restart before changes take effect.

19.4.2 Listen-In Audio


Enable and set volume for camera audio feeds in the Live View display.

**NOTE**

Audio will only be heard if you are viewing an audio-enabled camera in single-channel view. You will also need an HDMI monitor with built-in speakers, or an external speaker connected to the recorder's **Audio Out** port (see , page for details).

To set preferences for listen-in audio:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **Display**. Click the **Display** tab from the side panel.

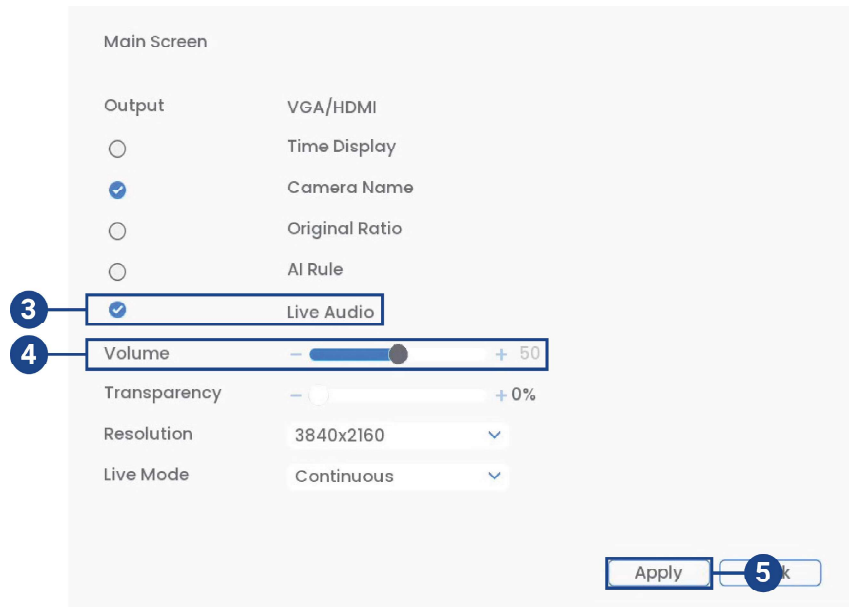

3. Check **Live Audio**.
4. Set the desired volume for live audio.
5. Click **Apply** to save changes.


19.4.3 Menu Transparency

Set the level of transparency for system menus.

To set menu transparency:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Information**, then **Display**. Click the **Display** tab from the side panel.

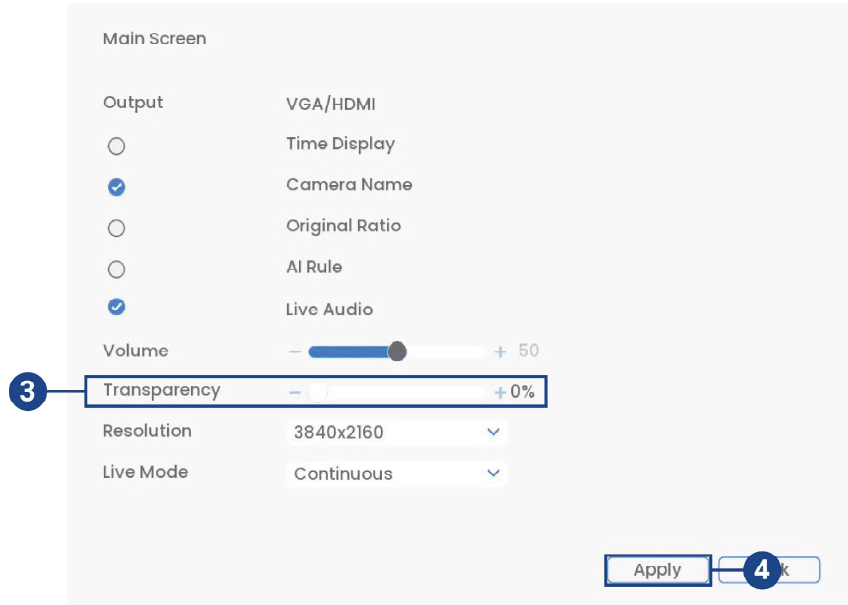


- Set the desired transparency value. The transparency of the current menu will update instantly to show how other menus will be affected.
- Click **Apply** to save changes.

19.4.4 General Display Settings


Configure miscellaneous display settings.

To configure general display settings:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **Information**, then **Display**. Click the **Display** tab from the side panel.

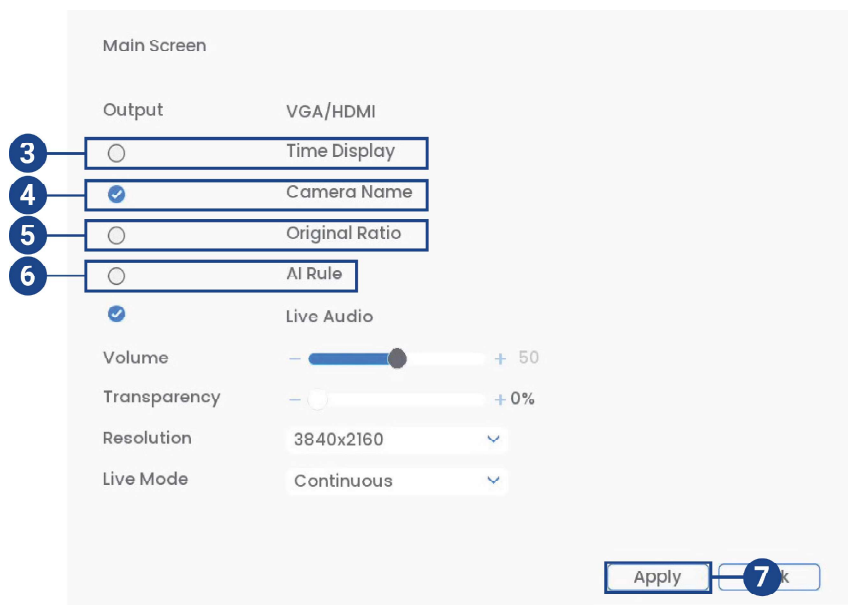


3. Check to display system time during Live View.

 **NOTE**

Disabling time display will not affect timestamps in recorded video.

4. Check to display camera names during Live View.
5. Check **Original Ratio** to display camera images in their original proportions.
6. Click **Apply** to save changes.

 **NOTE**


You can also adjust where the time and channel name overlays are positioned on screen. See 19.5.3 *Changing On-Screen Overlay*, page 95 for details.



19.4.5 Configuring Sequence Mode


Sequence mode cycles through connected channels to give you an overview of what is happening on all cameras. You can customize the order that channels appear in Sequence mode, as well as configure which viewing modes should be used.


To configure Sequence mode:

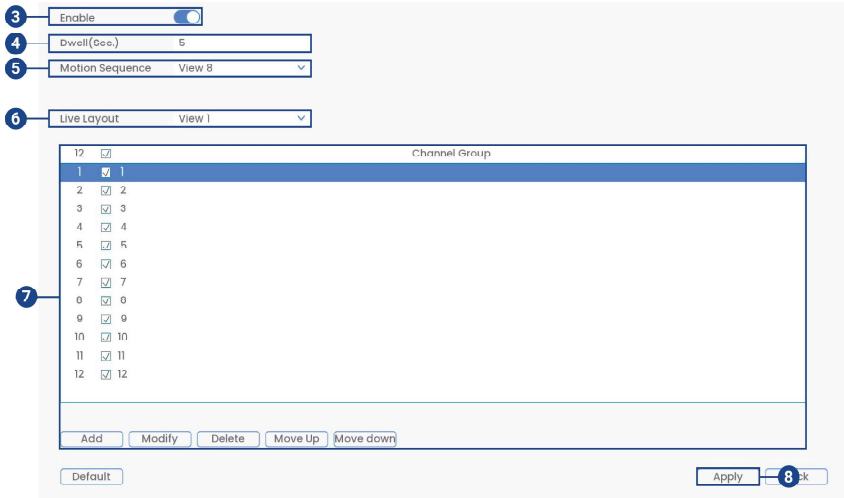1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **Display**. Click the **Sequence** tab from the side panel.



3. Click to enable () / disable () Sequence mode.

 **NOTE**


- Enabling Sequence mode is not necessary for configuration.
- You can also enable Sequence mode from Live View by clicking  on the Navigation Bar, or by right-clicking to open the Quick Menu and clicking **Sequence**.

4. Enter the time in seconds to remain on each channel or split screen during Sequence mode.
5. Choose how many channels will appear on screen when Sequence mode is triggered by motion detection (must be configured separately — see , page for details).
6. Select a viewing mode to configure. It is recommended to start with **View 1** and make your way to **View 9**. By default, all viewing modes are included in the Sequence mode cycle.
7. Configure the order of channels shown on screen for each viewing mode. Uncheck channels / channel groups that you want to remove from the Sequence mode cycle.

8. Click **Apply** to save changes.

19.5 Devices (Camera)


Configure image settings, recording parameters, channel overlay, and privacy masking.

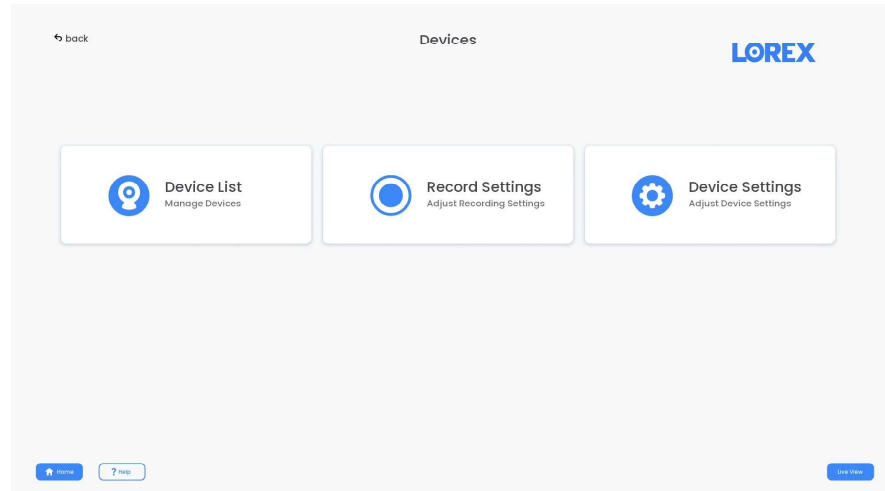

19.5.1 Adjusting Camera Image Settings

Adjust the color and image quality settings of your cameras.

1. From the Live View display, right-click to open the Quick Menu, then click **Image Settings**.

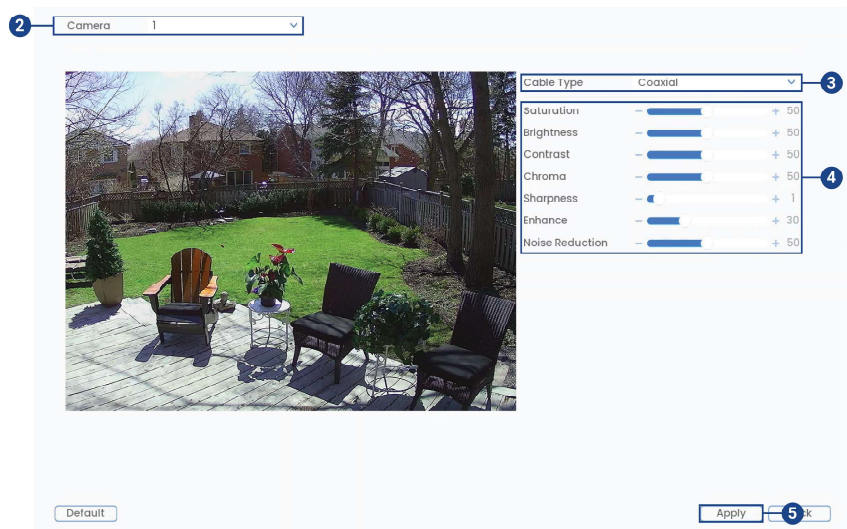

2. Select the channel you want to configure.
3. Select **COAXIAL** for cameras connected using BNC cabling, or **UTP** for balun installations.
4. Configure the color settings for the selected channel.
5. Click **Apply** to save changes.

19.5.2 Configuring Snapshot Recording

The system can be set to record snapshot images when a camera detects motion. These snapshots can be viewed through the Playback menu or attached to email alerts and push notifications. The Snapshot tab in the Recording menu controls the quality and recording parameters for each camera.

To configure snapshot recording:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Devices**, then **Record Settings**. Click the **Snapshot** tab from the side panel.

The screenshot shows a configuration window for snapshots. It includes the following fields and controls:

- Camera:** 1
- Type:** Scheduled
- Size:** (CIF)352x240
- Quality:** 4
- Interval:** 1 sec.
- Snapshot:** 1 /Time
- Buttons:** Default, Copy, Apply

3. Configure the following settings for snapshots saved automatically from motion detection or the snapshot schedule:
 - **Camera:** Select the camera you would like to configure.
 - **Type:** Select **Schedule** for the system to take snapshots according to the snapshot schedule (see 19.6.14 *Setting the Snapshot Schedule*, page 109). Select **Event** for the system to take snapshots according to the event schedule.
 - **Size:** Select the resolution for snapshots.
 - **Quality:** Select the snapshot image quality between **1** (lowest) and **6** (highest).
 - **Interval:** Enter the interval between snapshots in seconds.
4. Under **Snapshot**, select the number of snapshots the system will take when the snapshot button is pressed.
5. Click **Apply** to save changes.
6. (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).


19.5.3 Changing On-Screen Overlay

Remove or change the location of the date/timestamps and channel names. You can also change channel names from this menu.

To change the on-screen overlay:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Devices**, then **Device Settings**. Click the **Overlay** tab from the side panel.

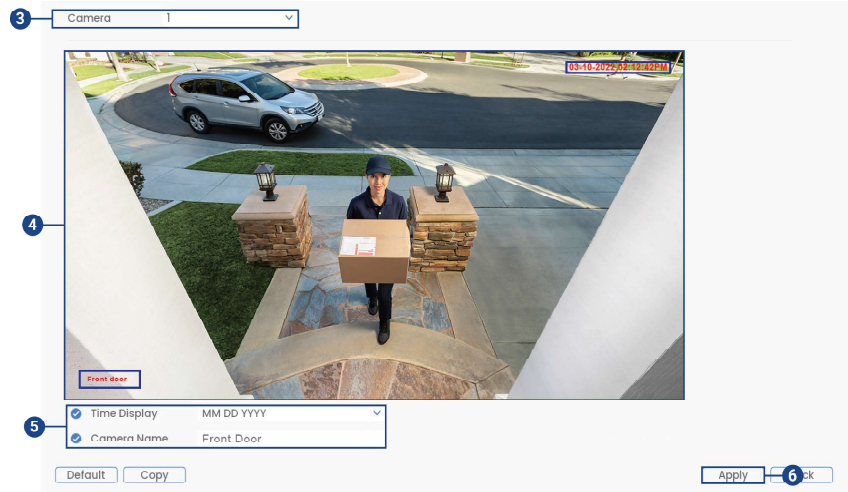


- Select the camera you want to configure.
- Click-and-drag the blue boxes on the camera image to adjust the location of the date/time and channel name.
- Use the checkboxes to enable/disable overlays. If needed, use the text field next to **Camera Name** to adjust the camera name.
- Click **Apply** to save changes.
- (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).

19.5.4 Configuring Privacy Masking


Privacy Masking blocks out certain parts of the camera's image with a black box, allowing you privacy based on your needs. You can configure up to 4 privacy zones per channel.

To configure privacy masking:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **Devices**, then **Device Settings**. Click the **Overlay** tab from the side panel, then the **Privacy Masking** tab from the top panel.

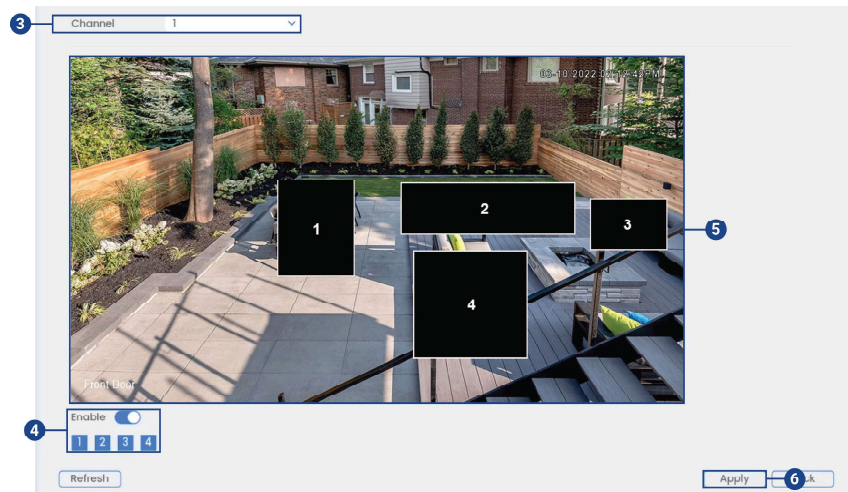

- Select the camera you want to configure.


4. Check to enable () privacy masking, then select 1-4 privacy masking boxes per channel.
5. Click-and-drag the outer white line around the privacy masking box to resize.
6. Click **Apply** to save changes.

19.5.5 Connecting Multi-Format Cameras (Cable Type)

The recorder works with multiple types of HD analog cameras. By default, the system is set to automatically detect the type of camera so it works instantly with the recorder. If you experience issues with image clarity or camera performance, you can set certain channels to a specific HD standard.

To manually change the camera format:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Devices**, then **Device Settings**. Click the **Cable Type** tab from the side panel.

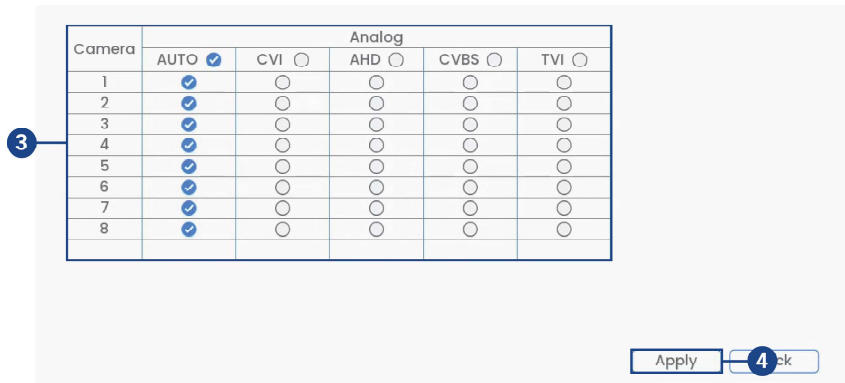

3. By default, all channels are set to **AUTO** to automatically detect the camera's format. Change the selection for each channel as needed.
4. Click **Apply** to save changes.

19.5.6 Camera Firmware Upgrade (CVI Upgrade)

Manually upgrade camera firmware. This is typically only necessary if directed to do so by Lorex technical support.


Prerequisite:

- Connect a USB flash drive (not included) to the recorder with the **.bin** camera firmware file (s) preloaded.

To manually upgrade camera firmware:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Devices**, then **Device Settings**. Click the **CVI Upgrade** tab from the side panel.

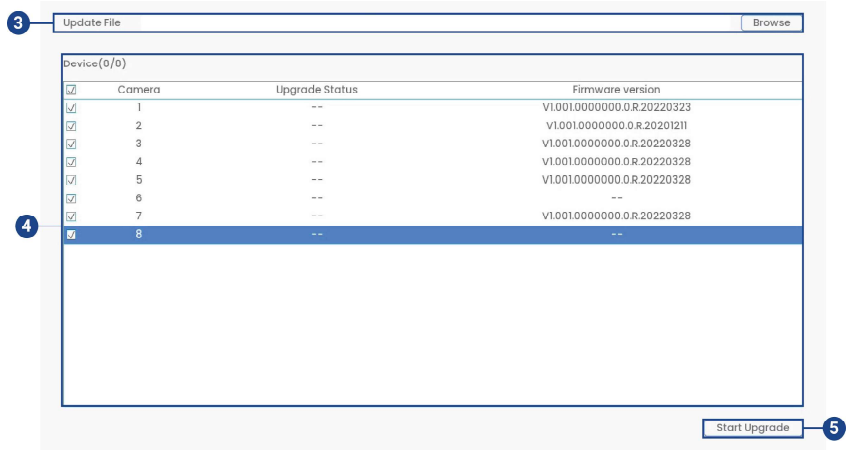

- Click **Browse** to search for the **.bin** firmware file on the USB flash drive.
- Check cameras you would like to upgrade using the selected firmware file.
- Click **Start Upgrade**.

19.6 System

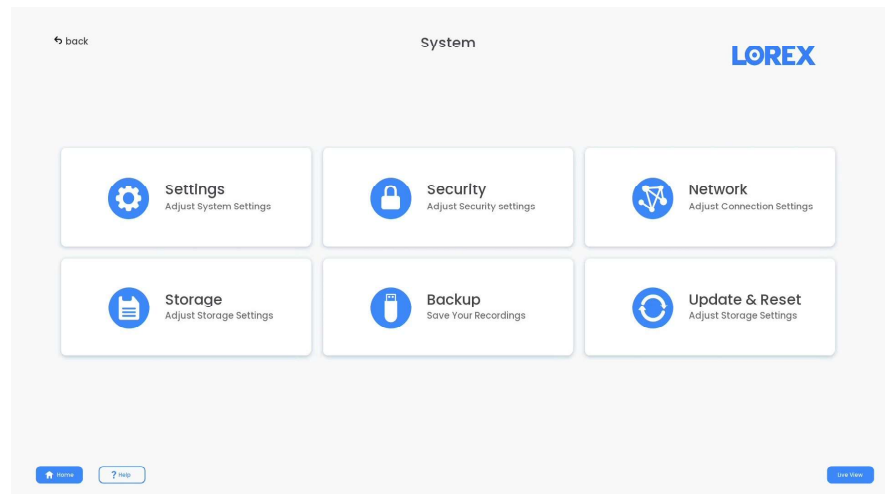

Configure general system settings (date & time, time zone, and DST), security, network parameters, recording schedule, and set preferences for hard disk drives connected to the system. You can also check for firmware updates over the Internet and restore the system to default settings.

19.6.1 Configuring General System Settings

Configure miscellaneous system settings.

To configure general system settings:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Settings**. Click the **General** tab from the side panel.

The screenshot shows the 'General' settings page for a device. The settings are as follows:

Device Model	D881A8
Device No.	8
Language	English
Video Standard	NTSC
Sync Remote Device	<input type="checkbox"/> (Include language, format and time zone)
Instant Playback	5 min.
Logout Time	60 min.
IPC Time Sync	<input checked="" type="checkbox"/>
Interval	24 hr. (1 - 168)
Navigation Bar	<input checked="" type="checkbox"/>
Mouse Sensitivity	Slider from Slow to Fast

Buttons: Apply, Check

- Configure the following:

- **Device Model:** Shows the model number of your system.
- **Device No.:** Select the remote control address of the system.
- **Language:** Set the system languages. Available options are English, French, and Spanish.
- **Video Standard:** Select NTSC (North America) or PAL (Europe).
- **Sync Remote Device:**
- **Instant Playback:** Select the amount of time (in minutes) the system will go back when instant playback is activated in live view.
- **Logout Time:** Select the idle time (in minutes) before the system will logout the current user.
- **IPC Time Sync:**
- **Interval:**
- **Navigation Bar:** Check to enable the Navigation Bar that comes up when you left click in live view.
- **Mouse Sensitivity:** Use the slider to adjust the mouse speed.

- Click **Apply** to save changes.

19.6.2 Setting Date & Time

As part of the initial setup, you will set the system date & time. This menu allows you to adjust the date & time, and configure settings for Daylight Savings Time (DST) and Network Protocol Time (NTP).



CAUTION

It is important to always ensure your system date and time are accurate. **Inaccurate time stamps may render your footage unusable for court evidence.**

To set system date and time:



- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Settings**. Click the **General** tab from the side panel, then the **Date & Time** tab from the top panel.


- Configure system time:

- **System Time:** Set the current date and time.
- **Time Zone:** Select your system time zone.
- **Date Format:** Choose how the date and time appear.
- **Date Separator:** Choose the symbol that separates date from time.
- **Time Format:** Choose from 12-hour or 24-hour time.



- Configure Daylight Savings Time (DST) settings:

- **DST:** Click to enable () / disable () Daylight Savings Time.
- Select **Week** to set the start and end time based on a day and week (e.g., 2nd Sunday of March), or select **Date** to set the start and end time to a specific date.
- **Start Time / End Time:** Set start and end times for DST. Format will change depending on your selection for either Week or Date.

- Configure Network Time Protocol (NTP) settings:

 **NOTE**


Your system must have a constant connection to the Internet to use NTP.

- **NTP:** Click to enable () / disable () Network Protocol Time.
- **Server Address:** (Advanced users only) Enter a custom NTP server.
- **Port:** (Advanced users only) Enter a custom NTP port.
- **Interval:** Select how often the system will sync time with the NTP server.

- Click **Apply** to save changes.

19.6.3 Configuring Holidays


You can set certain days as holidays. Holidays have a special recording schedule.

 **NOTE**


Ensure you adjust the holiday recording schedule to your preferences. See 9.3 *Setting the Recording Schedule*, page 30 for details.

To configure holidays:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **System**, then **Settings**. Click the **General** tab from the side panel, then the **Holiday** tab from the top panel.

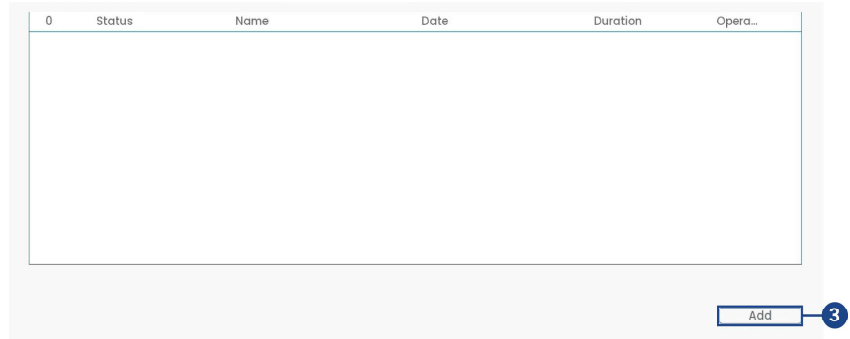

3. Click **Add**.

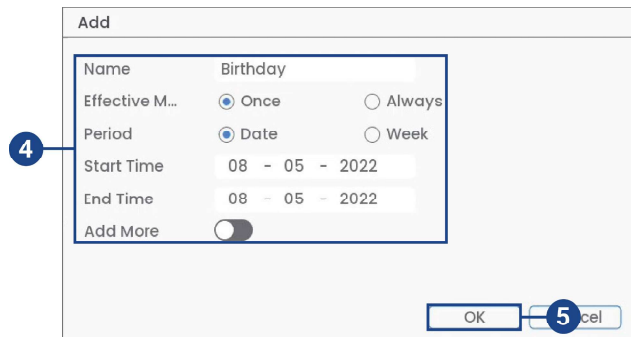

4. Configure the following:
 - **Name:** Enter a name for this holiday.
 - **Effective Mode:** Select **Once** for the holiday to occur only this year or **Always** for the holiday to be repeated each year.
 - **Period:** Select **Date** to select a specific date, or select **Week** to select holidays based on which week they fall on.
 - **Start Time / End Time:** Set the start and end time for this holiday.
5. Click **OK**.


19.6.4 Configuring IP Filter



Configure permissions for external IP addresses attempting to access the unit.


To configure the IP filter:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

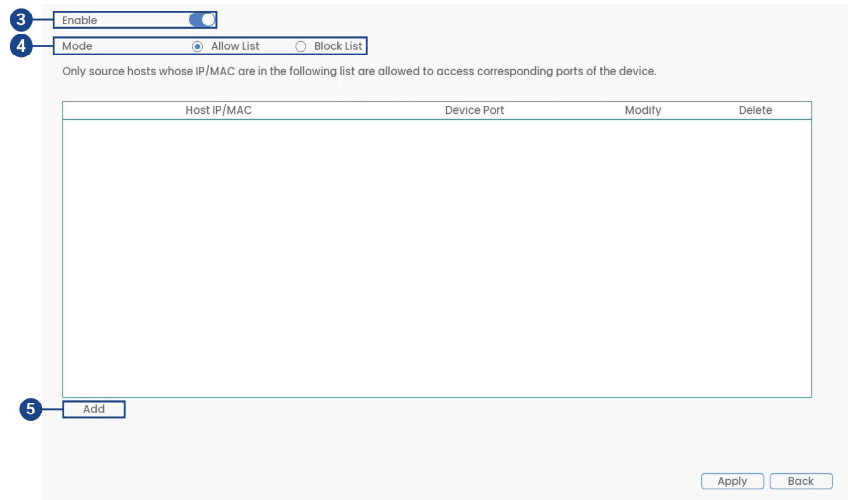- Click **System**, then **Security**. Click the **Security** tab from the side panel, then the **Firewall** tab from the top panel.



- Click to enable () / disable () the selected filter type.
- Under **Mode**, select which type of filter to apply:
 - Allow List:** IP addresses that are permitted to access the recorder.
 - Block List:** IP addresses that are not permitted to access the recorder.
- Click **Add** to enter an IP address.

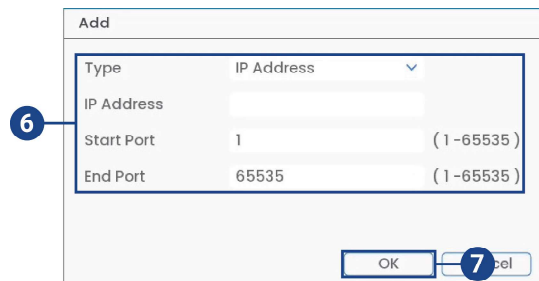

- Configure the following:
 - Type:** Select the address type.
 - IP Address:** Enter a single IP address for the selected filter type.
 - Start Port:** The port you want to open.
 - End Port:** The port you want to end at.
- Click **OK**.
- Click **Apply** to save changes.


19.6.5 Configuring IP Filter — Sync Time



Configure permissions for external IP addresses that are permitted to sync the recorder's time.


To configure the IP filter:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

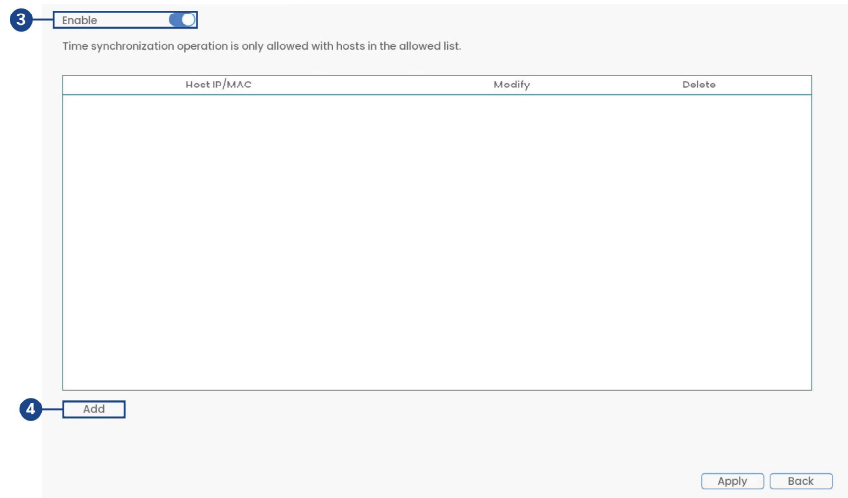- Click **System**, then **Security**. Click the **Security** tab from the side panel, then the **Sync Time-Allowlist** tab from the top panel.



- Click to enable () / disable () the selected filter type.
- Click **Add**.
- Configure the following:

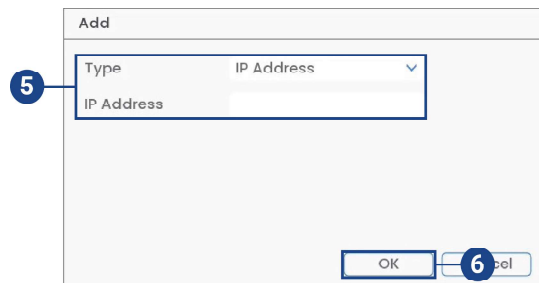

- **Type:** Select the address type.
 - **IP Address:** Enter a single IP address for the selected filter type.
- Click **OK**.
 - Click **Apply** to save changes.


19.6.6 Configuring HTTPS (Advanced)

Set up an SSL Certificate to enable HTTPS login.

To configure an HTTPS connection:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Security**. Click the **HTTPS** tab from the side panel.

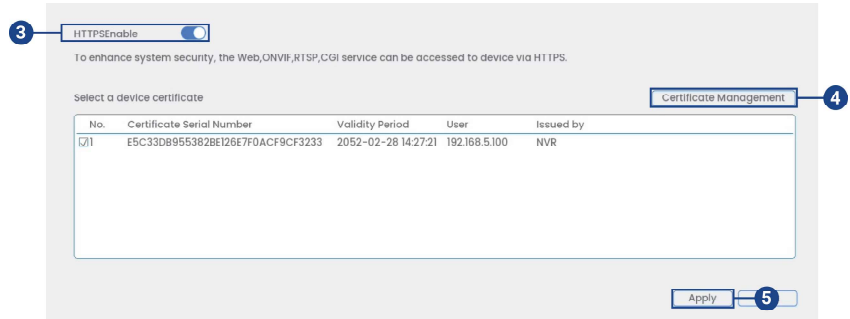


- Check to enable HTTPS.
- Click **Certificate Management** to create a certificate or import a third-party certificate.
- Click **Apply** to save changes.

19.6.7 Selecting DHCP or Static IP Address (TCP/IP)



The TCP/IP menu allows you to configure IP address settings.

To configure basic networking settings:

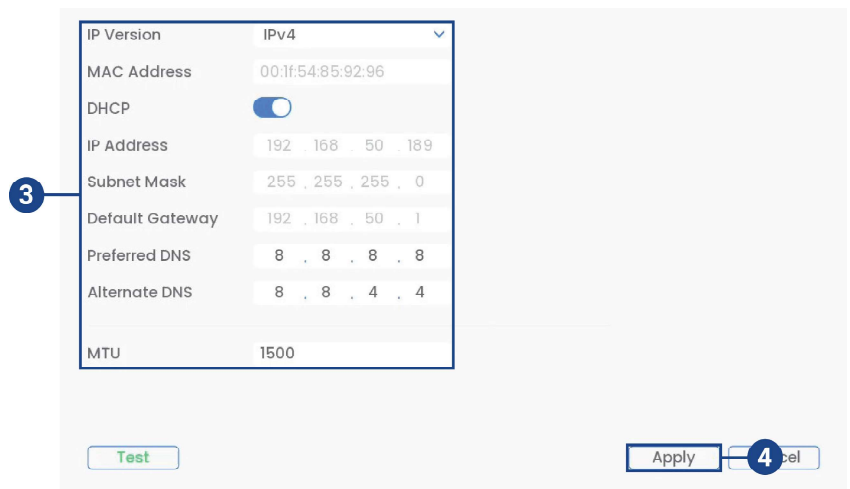- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **System**, then **Network**. Click the **TCP/IP** tab from the side panel.



- Configure the following settings:

- IP Version:** Select **IPv4** or **IPv6**.
- DHCP:** Click to enable () / disable () DHCP. It is recommended to enable DHCP to let the system automatically obtain an IP address from the router. If you are an advanced user, disable DHCP to assign a static IP address to the system. **To assign a static IP address, configure the following:**
 - IP Address:** Enter the IP address you would like to assign to the system. Make sure that no other device on your network is using the same IP address.
 - Subnet Mask:** Enter the subnet mask for your network.
 - Default Gateway:** Enter the gateway address for your network.
 - Preferred DNS:** Enter the address of your primary DNS server.
 - Alternate DNS:** Enter the address of your secondary DNS server.
- MTU: (Advanced users only)** Enter the value for the network card.

- Click **Apply** to save changes.

19.6.8 Configuring System Ports (Connection)

Configure ports used by the system. If you are using DDNS connectivity, port forwarding is required for the **HTTP Port** (default: **80**) and **TCP Port** (Client Port) (default: **35000**).



NOTE

Port forwarding is not required unless you are using DDNS for remote access. Using mobile apps does not require port forwarding or DDNS setup.

To configure system ports:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **System**, then **Network**. Click the **Port Number** tab from the side panel.

IP Version	IPv4
MAC Address	00:f5:54:85:92:96
DHCP	<input checked="" type="checkbox"/>
IP Address	192 . 168 . 50 . 189
Subnet Mask	255 . 255 . 255 . 0
Default Gateway	192 . 168 . 50 . 1
Preferred DNS	8 . 8 . 8 . 8
Alternate DNS	8 . 8 . 4 . 4
MTU	1500

Test Apply Cancel

- Configure the port numbers as needed.
- Click **Apply**.

19.6.9 Configuring Email Alerts

You can configure the system to send out email alerts for motion detection or other events.



NOTE

To send out motion detection alerts, you must enable the **Send Email** option for motion detection on each camera you would to receive alerts from. For details, see , page .


To configure email alerts:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

2. Click **System**, then **Network**. Click the **Email** tab from the side panel.


The screenshot shows an email configuration panel with the following fields and controls:

- 3** Enable:
- Mail Select: Lorex Mail (dropdown)
- SMTP Server: mysmtplorexddns.net
- Port: 2525 (1 - 65535)
- Username: (empty)
- Password: (empty)
- EmailSchedule: Setup (button)
- Anonymous:
- 4** Receiver: Receiver1 (dropdown)
- Email Address: installedcustomer@... (text)
- Sender: noreply@lorexddns.net (text)
- Subject: ALERT (text)
- Attachment:
- Encryption Type: None (dropdown)
- Sending Interval: 3 min. (text)
- Health:
- Sending Interval: 60 min. (30 - 1440) (text)
- 5** Test (button)
- Apply (button)
- 6** OK (button)

3. Click to enable () email alerts.

4. Configure the following:

If you want to use Lorex's email server (recommended):


- **Mail Select:** Select **Lorex Mail**.
- **Receiver:** Select up to 3 email addresses that will receive alerts. Enter each email address into the field **Email Address** below.
- **Subject:** Enter a subject line for email alerts.
- **Attachment:** Enable () to include a image attachment of the camera.

**NOTE**

You must enable the **Snapshot** option for motion detection on each camera you would to receive attachments. For details, see , page .

- **Sending Interval:** Enter the interval in minutes between email alerts.
- **Health:** Check to enable health check emails. Health check emails will be sent periodically to ensure that the system is functioning normally.
- **Sending Interval:** Enter the interval in minutes for health check emails.

If you want to use your own email server (advanced):

- **Mail Select:** Select the mail server you want to use, or select **Customize** to use your own.
- **SMTP Server:** Enter the SMTP server address.
- **Port:** Enter the port used by the SMTP server.
- **Username:** Enter the SMTP user name.
- **Password:** Enter the SMTP password.
- **Email Schedule:** Click to setup a weekly schedule for email alerts.
- **Receiver:** Select up to 3 email addresses that will receive alerts. Enter each email address into the field **Email Address** below.
- **Sender:** Enter the sender's email address.
- **Subject:** Enter a subject line for email alerts.
- **Attachment:** Enable () to include a image attachment of the camera.

**NOTE**

You must enable the **Snapshot** option for motion detection on each camera you would to receive attachments. For details, see , page .

- **Encrypt Type:** Select **SSL** or **TLS** if your server uses encryption. Select **None** if your server does not use encryption.
- **Sending Interval:** Enter the interval in minutes between email alerts.
- **Health:** Check to enable health check emails. Health check emails will be sent periodically to ensure that the system is functioning normally.
- **Sending Interval:** Enter the interval in minutes for health check emails.

5. Click **Test** to send a test email to ensure settings are configured properly.6. Click **Apply** to save changes.**19.6.10 P2P Setting**

The P2P Setting menu is used only to enable / disable remote access to the system using a P2P connection.


**CAUTION**

P2P connection is the primary method used for remote access to your security system using the Lorex Home app. If you disable P2P connectivity, you will only be able to access your system over the Internet using DDNS. See , page for details.

To change P2P setting:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

2. Click **System**, then **Network**. Click the **P2P** tab from the side panel.

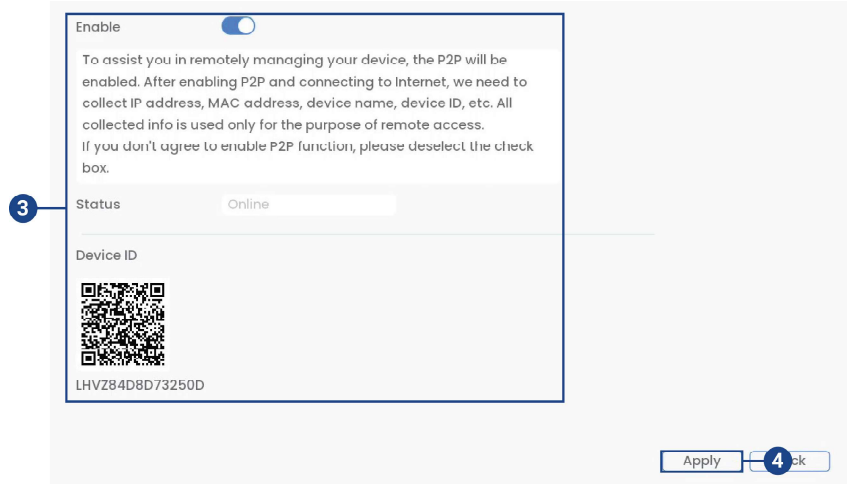

3. Click to enable () / disable () P2P connectivity.
4. Click **Apply** to save changes.

19.6.11 Configuring hard disk drive Overwrite


When the hard disk drive is full, the system will overwrite the oldest recordings by default. This is recommended, as it makes sure that your system will continue to record without any input from you. You can also set the system to stop recording once the hard disk drive is full.

To configure hard disk drive overwrite:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **System**, then **Storage**. Click the **Basic** tab from the side panel.



3. Ensure **HDD Full** is set to **Overwrite** to overwrite the oldest recordings when the hard disk drive is full.



4. Click **Apply** to save changes.

19.6.12 Configuring Recording File Length

Select how the system will store video files.

To configure recording length:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Storage**. Click the **Basic** tab from the side panel.



- Next to **Package Mode**, select **Time Length** for the system to package recording files based on recording length, or **File Size** to package based on file size. The field next to the drop-down will change between minutes and megabytes (MB) depending on your selection.



NOTE

Selecting **Stop** for the system to stop recording when the hard disk drive is full.

- Click **Apply** to save changes.

19.6.13 Configuring Pre-Recording

The system can pre-record video when motion detection events occur.

To configure pre-recording:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **System**, then **Storage**. Click the **Schedule** tab from the side panel, then the **Record** tab from the top panel.



- Select the channel you would like to configure or select **All**.
- Set the duration for pre-recording in seconds.
- Click **Apply** to save changes.
- (OPTIONAL) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).

19.6.14 Setting the Snapshot Schedule





You can set a schedule for recording snapshots from the cameras.

To set the snapshot schedule:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Storage**. Click the **Schedule** tab from the side panel, then the **Snapshot** tab from the top panel.



- Under **Camera**, select the channel you would like to configure or select **All**.
- Configure the schedule as needed:
 - Check **Continuous**, **Motion (Motion Detection)**, **Alarm**, or **Smart Detection (Smart Motion Detection)** to select the recording type you would like to configure.
 - Click-and-drag on each day to customize the recording schedule. The schedule is set up as a grid, with each block representing two hours.
 - Click  beside 2 or more days to link schedules (). This allows you to quickly change multiple schedules at once.
 - To make fine adjustments to a schedule, click . This will allow you to set exact start and end times for a schedule.
 - To disable all recording of the selected type on the selected day, click .
- Click **Apply** to save changes.
- (*OPTIONAL*) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).

19.6.15 Formatting the hard disk drive

If you install a new hard disk drive, you must format the hard disk drive using the system before you will be able to record.




CAUTION

Formatting the hard disk drive erases **all data** on the hard disk drive. **This step cannot be undone.**

To format hard disk drives:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Storage**. Click the **HDD Manager** tab from the side panel.

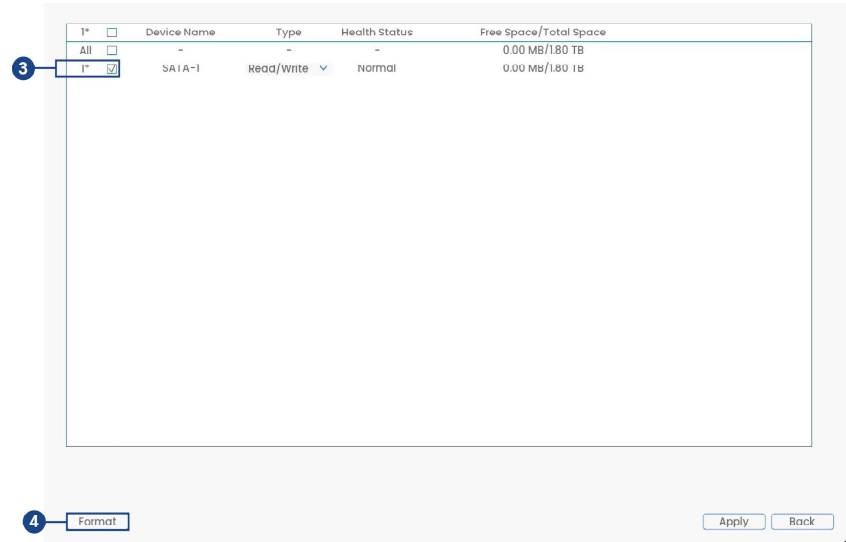

- Check the hard disk drive you want to format.
- Click **Format**. The system will restart to complete the formatting process.


19.6.16 Configuring hard disk drive Type

The system supports the following hard disk drive types:

- **Read-write HDD:** Normal recording hard disk drive.
- **Read-only HDD:** The system can playback data from this hard disk drive, but it will not record to it.

To configure hard disk drive types:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **System**, then **Storage**. Click the **HDD Manager** tab from the side panel.

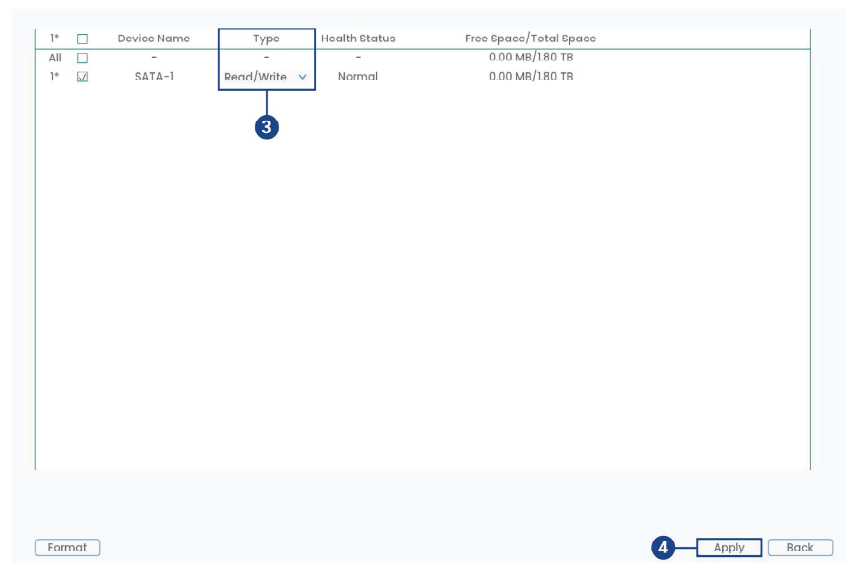

- Under **Type** next to the hard disk drive you want to configure, select **Read/Write** or **Read only**.

- Click **Apply** to save changes.

19.6.17 Recording Calculator (Record Estimate)

Use the recording calculator to get an estimate of your maximum recording time in days for the installed hard disk drive, or how much hard disk drive space would be required to retain a specific amount of days.

To obtain a recording estimate:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **System**, then **Storage**. Click the **Record Estimate** tab from the side panel.

<input checked="" type="checkbox"/>	Camera	Modify	Bit Rate(kbps)	Record Time	Resolution	Frame Rate(FPS)
<input checked="" type="checkbox"/>	1		4096	24	(4K)3840x2160	7
<input checked="" type="checkbox"/>	2		4096	24	(4K)3840x2160	7
<input checked="" type="checkbox"/>	3		4096	24	(4K)3840x2160	7
<input checked="" type="checkbox"/>	4		4096	24	(4K)3840x2160	7
<input checked="" type="checkbox"/>	5		4096	24	(4K)3840x2160	7
<input checked="" type="checkbox"/>	6		4096	24	(1080P)1920x1080	30
<input checked="" type="checkbox"/>	7		4096	24	(4K)3840x2160	7
<input checked="" type="checkbox"/>	8		4096	24	(1080P)1920x1080	30
<input checked="" type="checkbox"/>	9		1024	24	(1440x1080)1440x1080	15
<input checked="" type="checkbox"/>	10		1024	24	(4MP)2560x1440	15
<input checked="" type="checkbox"/>	11		2048	24	(4MP)2560x1440	15
<input checked="" type="checkbox"/>	12		1024	24	(1080P)1920x1080	30

3 Recording Days
Disk Requirement

Capacity 2.000
TB = 2000
GB
Select

4 Time 5
Days

Note: The record estimate data is for reference only. Please be cautious when evaluating record period.

- Select **Recording Days** for the total number of days worth of recordings your hard disk drive can store, or select **Disk Requirement** for the total storage needed to record for a specific number of days.
- For **Recording Days** mode, click **Select** to choose your hard disk drive from a list to output the total number of days your hard disk drive can store. For **Disk Requirement** mode, enter a number of days to output the total amount of storage required.



19.6.18 FTP (Advanced)

Send recordings and/or snapshots to an FTP server.

To configure FTP settings:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Storage**. Click the **FTP** tab from the side panel.

- Click to enable () / disable () FTP connection, and select either **FTP** or **SFTP** depending on your configuration.
- Configure the following:
 - **Server Address:** Enter the FTP server's address.
 - **Port:** Enter the FTP port.
 - **Username:** Enter your FTP username.
 - **Password:** Enter your FTP password.
 - **Anonymous:** Enable if your FTP server supports anonymous login.
 - **Storage Path:** Enter the path to save recordings and/or snapshots to..
 - **File Size:** Enter the recording file length in minutes.
 - **Camera:** Select a camera to set FTP recording preferences for.
 - **Day:** Select a day of the week to configure FTP recording settings for, or select **All** to apply to all days of the week.
 - **Period 1 ~ Period 2:** Select up to 2 periods of time where the system will save recordings to the FTP. Check **Alarm**, **MD** (Motion Detection), or **Continuous** beside each period to determine which recording type will be uploaded to the FTP.
 - **Image Upload Interval:** Enter the interval between snapshots in seconds.
 - **Camera:** Setup a camera to set the snapshots for.
- Click **Apply** to save changes.

19.6.19 Save System Settings to a USB Flash Drive

The system allows you to save your current system configuration to a USB flash drive (not included). This is useful if you want to backup your current settings.



NOTE

This function only saves settings created in system menus. It does not save or backup any video.


Prerequisite:

- Connect a USB flash drive (not included) to a free USB port on the unit.

To save system settings:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Information**, then **Update & Reset**. Click the **Import/Export** tab from the side panel.

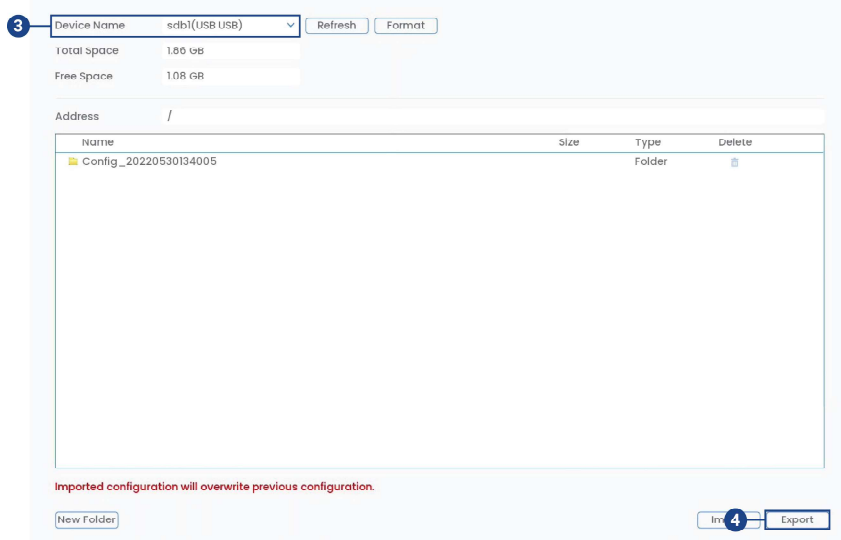

- Under **Device Name**, select the USB device where you would like to save the configuration.
- Click **Export** to save your current system configuration.

19.6.20 Import System Settings from a USB Flash Drive


If you have backed up your system configuration, you can import it to apply all your saved menu settings.

Prerequisite:

- Connect a USB flash drive (not included) to a free USB port on the unit with an exported system configuration (see 19.6.19 *Save System Settings to a USB Flash Drive*, page 113 for full details).

To import system settings:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **Information**, then **Update & Reset**. Click the **Import/Export** tab from the side panel.

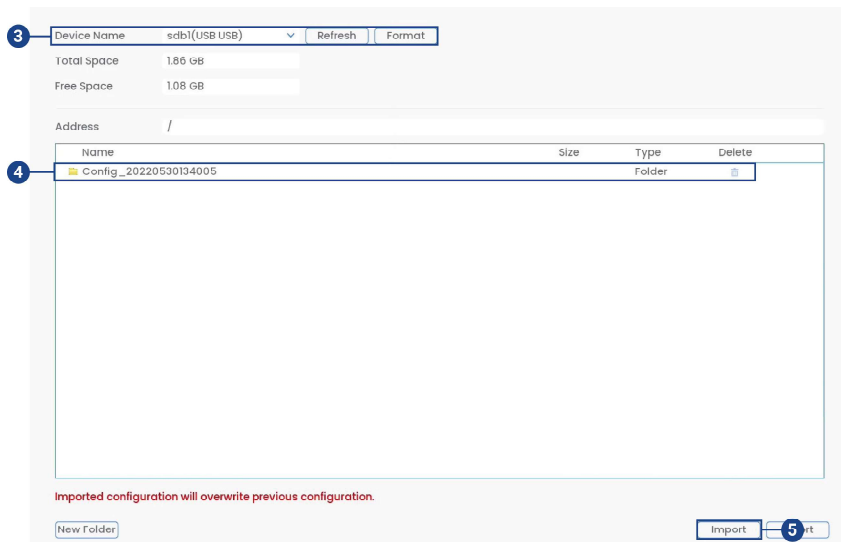


3. Under **Device Name**, select the USB device where a system configuration has been saved.
4. Click the folder with the configuration files you would like to restore. Configuration file folders are labeled **Config** and then the time and date the configuration was saved (e.g., *Config_20200611133747*).
5. Click **Import** to save your current system configuration.

19.6.21 Restoring Default Settings

Reset the system to default settings.

To restore default settings:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **System**, then **Update & Reset**. Click the **Default** tab from the side panel.

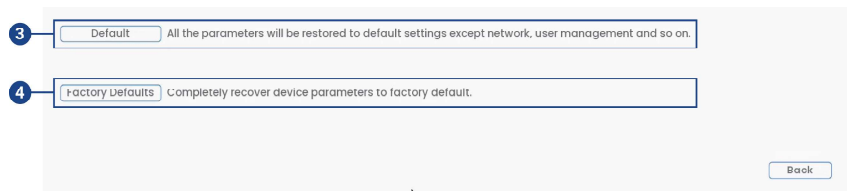

3. Click **Default** to reset all parameters to default settings, except for network, user management, and so on.
4. Click **Factory Default** to reset the unit to its out-of-box state. The system will restart automatically. Do not power down the unit or disconnect the power cable.

19.6.22 Upgrading Firmware Manually


The primary method for upgrading system firmware is automatically over the Internet. The system also supports firmware upgrades from a USB thumb drive (not included).

Prerequisite:

- Save the **.bin** firmware file for your unit onto a USB flash drive (not included), and connect the drive to one of the system's free USB ports.

To upgrade firmware manually:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **System**, then **Update & Reset**. Click the **Update** tab from the side panel.

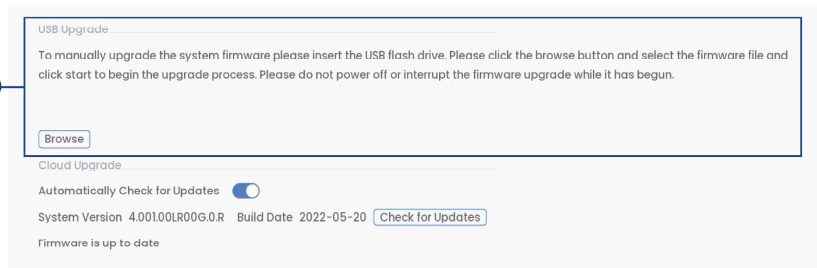

3. Click **Browse**.
4. Click on the **.bin** firmware file for your recorder.
5. Click **Start**.


19.6.23 Automatic Firmware Upgrades


Firmware upgrades provide enhanced functionality. The system will automatically check for firmware upgrades if it is connected to the Internet.

To configure automatic firmware upgrade:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **System**, then **Update & Reset**. Click the **Update** tab from the side panel.

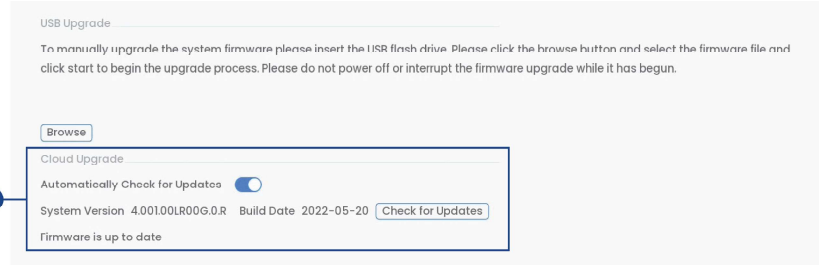

- Ensure **Automatically Check for Updates** is enabled (). Click **Check for Updates** to check if a newer version is available.
- If a newer version is found, click **Upgrade Now** to upgrade the system.

19.7 Information

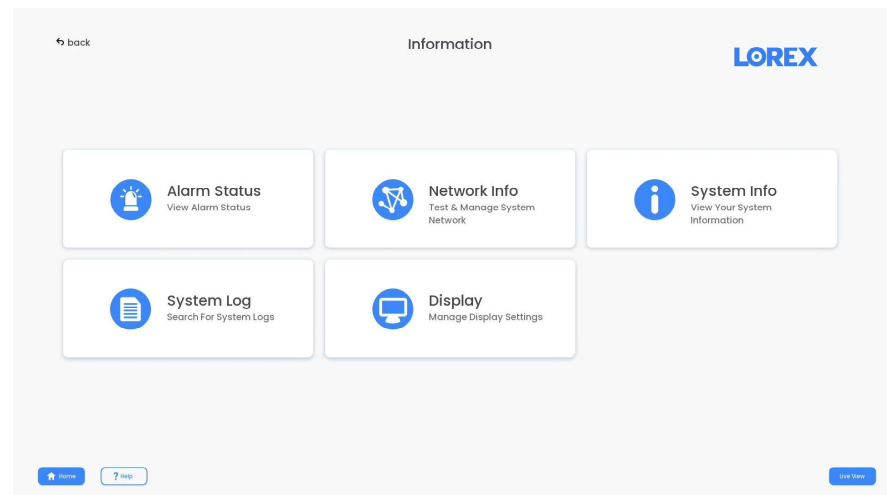

Menus that show you different types of system information.

19.7.1 Alarm Status

Shows you a complete summary of system events. Additional info such as channels that are currently detecting motion is also shown.

Alarm Type	Alarm
Motion Detection	1

To access the Alarm Status menu:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **Alarm Status**.

The following alarms are shown in the Alarm Status menu:

- **No HDD:** No hard disk drive is detected.
- **Ext Disk Error:** hard disk drive error detected.
- **Disk Full:** hard disk drive is full.
- **Net Disconnection:** System is not connected to the network (offline).
- **IP Conflict:** More than one device on the network is using the same IP address.
- **MAC Conflict:** More than one device on the network is using the same MAC address.
- **Video Loss:** Shows disconnected channels.
- **Motion Detection:** Shows channels with active motion alarms.

19.7.2 Online User

The Online User menu shows a list of users connected to the system using computers or mobile devices.

Username	IP Address	User Login Time	Blocked


Blocked 60 sec.

To access the Online User menu:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **Network Info**. Click the **Online User** tab from the side panel.

19.7.3 Network Load

The Load menu shows you the network traffic your system is sending and receiving.

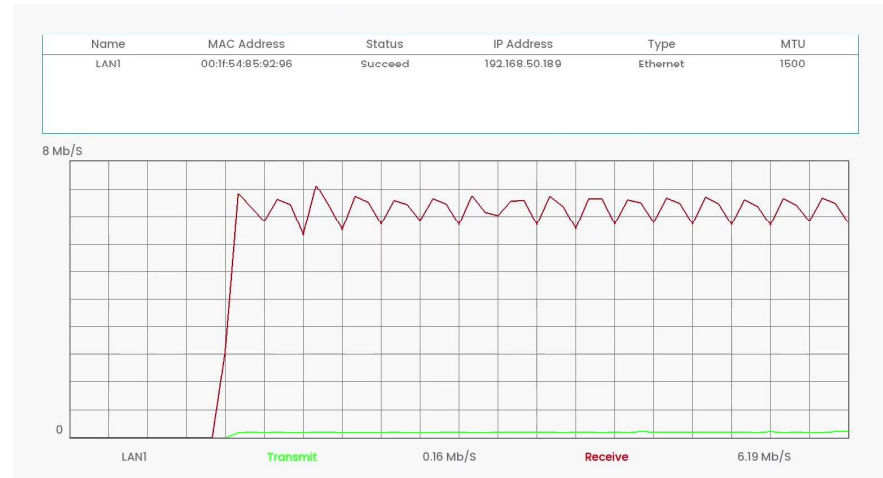**To access the Load menu:**

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **Network Info**. Click the **Network Load** tab from the side panel.

19.7.4 Test

The Test menu allows you to test if your system can connect to other devices over the LAN or Internet. You can enter the IP address of a device and click **Test** to determine if your system can connect to it.

The screenshot displays the Network Test menu. It includes the following fields and controls:

- Destination IP:** A text input field with a 'Test' button to its right.
- Test Result:** A section for displaying the outcome of the test.
- Packet Sniffer Backup:** A section with a dropdown menu for 'Device Name' (currently set to 'sdb1(USB USB)') and a 'Refresh' button.
- Address:** A text input field with a 'Browse' button to its right.

Below these fields is a table with the following data:

Name	IP	Packet Sniffer Size	Packet Sniffer Backup
LAN1	192.168.50.189	0KB	⊕

To access the Network Test menu:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **Network Info**. Click the **Test** tab from the side panel.

19.7.5 Version

The Version sub-menu allows you to view information about the current firmware installed on the system.

Version

Device ID	LHVZ8574B50611B
Device Model	D863A6
Firmware Version	00001
IE Version	3.2.7.16163302
Build Date	05-27-2022
SN	ND012205018037
IP Address	192.168.5.64
MAC Address	00:1f:54:88:7a:5d
Domain Name	DDNS setup is not available
HDD Capacity	0G/3680G
Video Format	NTSC
Client Port	35000
HTTP Port	80
P2P Status	Online



To access the Version menu:

1. From the Live View display, right-click to open the Quick Menu, then click **Info**.

19.7.6 Disk

Information related to the hard disk drives installed in the system, including capacity, status, and type.













1*	Device Name	Type	Total Space	Free Space	Health Status
All	-	-	1.80 TB	0.00 MB	-
1*	SATA-1	Read/Write	1.80 TB	0.00 MB	Normal

To access the disk menu:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **System Info**. Click the **Disk** tab from the side panel.

19.7.7 BPS

The BPS menu shows the bitrates of connected cameras. The bitrate is the amount of data the camera is sending to the system.


Camera	Kbps	Resolution	Wave
1	4097	3840*2160	
2	4000	3840*2160	
3	4145	3840*2160	
4	4154	3840*2160	
5	4075	3840*2160	
6	4092	1920*1080	
7	4059	3840*2160	
8	3899	1920*1080	
9	774	1440*1080	
10	1169	2560*1440	
11	2373	2560*1440	
12	990	1920*1080	

To access the BPS menu:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **System Info**. Click the **BPS** tab from the side panel.

19.7.8 Log

The Log menu allows you to search for system logs.

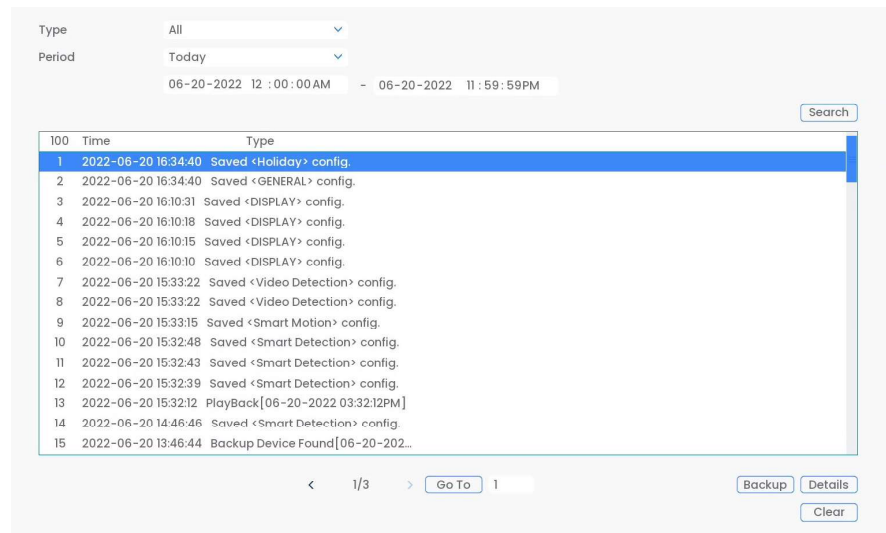

The screenshot shows the Log menu interface with the following details:

- Type:** All
- Period:** Today
- Time Range:** 06-20-2022 12:00:00 AM - 06-20-2022 11:59:59PM
- Search:** Search button
- Log List:**

100	Time	Type
1	2022-06-20 16:34:40	Saved <Holiday> config.
2	2022-06-20 16:34:40	Saved <GENERAL> config.
3	2022-06-20 16:10:31	Saved <DISPLAY> config.
4	2022-06-20 16:10:18	Saved <DISPLAY> config.
5	2022-06-20 16:10:15	Saved <DISPLAY> config.
6	2022-06-20 16:10:10	Saved <DISPLAY> config.
7	2022-06-20 15:33:22	Saved <Video Detection> config.
8	2022-06-20 15:33:22	Saved <Video Detection> config.
9	2022-06-20 15:33:15	Saved <Smart Motion> config.
10	2022-06-20 15:32:48	Saved <Smart Detection> config.
11	2022-06-20 15:32:43	Saved <Smart Detection> config.
12	2022-06-20 15:32:39	Saved <Smart Detection> config.
13	2022-06-20 15:32:12	Playback[06-20-2022 03:32:12PM]
14	2022-06-20 14:46:46	Saved <Smart Detection> config.
15	2022-06-20 13:46:44	Backup Device Found[06-20-202...
- Navigation:** < 1/3 > Go To 1
- Buttons:** Backup, Details, Clear

To search for system logs:


1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Information**, then **System Log**.
3. Under **Type**, select the type of event to search for, or select **ALL**.
4. Set the period for your search, then enter a start and end time.
5. Click **Search**.

19.8 Copying Settings to Another Channel

Some areas of the main menu allow you quickly copy over the settings from one channel to one or multiple other channels on the system.

To copy channel settings:

1. Configure at least one channel to your preference.
2. Click **Apply** to save the settings for that channel.
3. Click **Copy**.

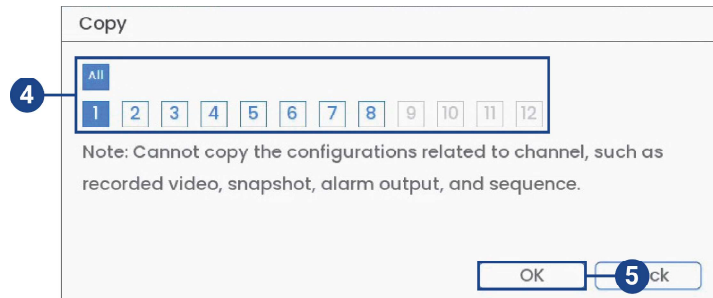



4. Click the numbered boxes to indicate the channels you want to copy settings to, or click **All** to copy to all channels.
5. Click **OK**.

19.9 Help Menu

Offers additional information and support on using the system through QR code access.

To access the help menu:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click  on the bottom left of the screen.
3. Select one of the following:

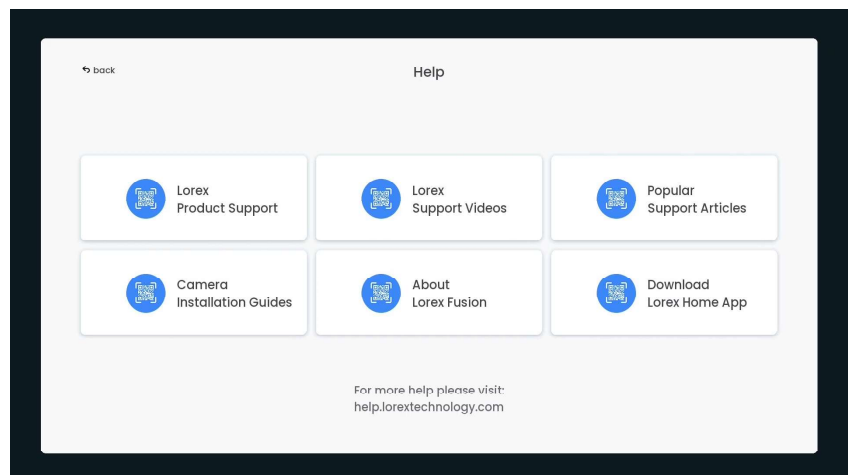



19.10 Sign Out Menu

Sign out, shut down, or restart the system.

To access the sign out menu:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.


2. Click  on the top left of the screen.
3. Select one of the following:

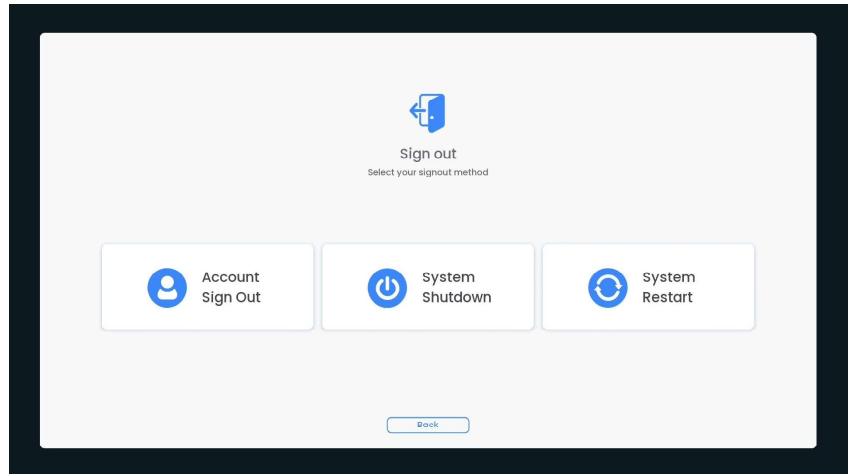

- **Account Sign Out:** Log out the account that is currently active.
- **System Shutdown:** Power off the system.
- **System Restart:** Manually shut the system off, and then restart.

Connecting Remotely using the Lorex Home Mobile App

You can connect to your security system over the Internet using our free Lorex Home app for iOS and Android devices. Securely connect to your system from anywhere with no recurring fees for live viewing.

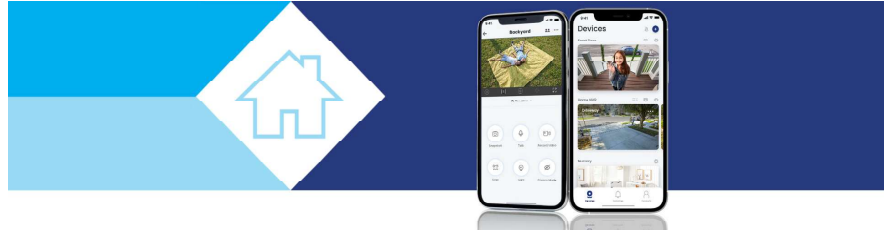

The Lorex Home app allows you to:

- View live video from cameras
- Play back recorded video from the hard disk drive
- Manually record video clips or take a snapshot of live video
- Activate deterrence features including dual warning lights and sirens*
- Set preferences for push notifications, informing you of motion detection and other system events

For advanced support for the app, go to your recorder's product support page. Visit help.lorexttechnology.com and search your recorder's model number.

* On supporting devices.

Pan/Tilt/Zoom (PTZ) cameras are specialty cameras that move according to commands given by the recorder. You can move PTZ cameras manually using the recorder's on-screen display, or create preset locations and patterns for the camera to follow automatically.



21.1 Connecting PTZ Cameras to the Recorder

Lorex HD PTZ cameras connect to your recorder just like any other camera with no need to run special wiring — these cameras can accept PTZ commands directly through the video cable.

If you are using a standard definition PTZ camera, you will need to run the camera's RS485 cabling to the recorder in order to send PTZ commands.

To connect standard definition PTZ cameras:



STEP 1: Physical connection

1. Connect the BNC video cable to one of the video inputs on the recorder.
2. Connect the RS485 cables. Connect the **A (TX+)** cable to the **positive (+) terminal**, and connect the **B (TX-)** cable to the **negative (-) terminal**.
3. Connect the PTZ camera's power adapter to a power outlet.




CAUTION

When the PTZ camera powers on, it will perform an initial diagnostics check. The camera will move around during this process, so ensure the camera module is not resting against another object or surface.

STEP 2: Camera configuration

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

- Click **Events**, then **Device Settings**. Click the **Pan/Tilt/Zoom** tab from the side panel.

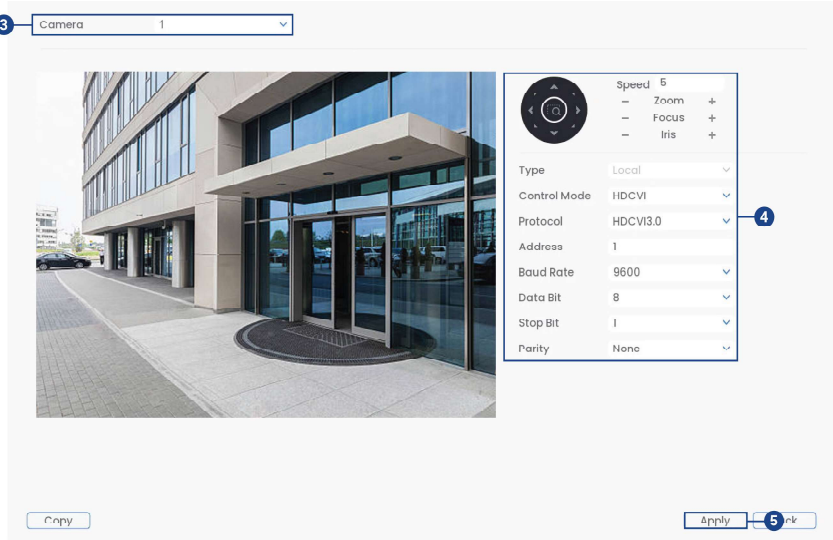

- Select the camera you want to configure.
- Configure the highlighted fields as needed.



NOTE

For Lorex HD PTZ cameras, there is no need for configuration — leave all fields at their default values. For third-party PTZ cameras, select **Serial** next to **Control Mode**. For the correct settings to use in the remaining fields, please reference your camera documentation.

- Click **Apply** to save changes.
- (*OPTIONAL*) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).



NOTE

If you copy settings over to connect multiple PTZ cameras, please note that each camera requires a unique address. You cannot use the same address for 2 different cameras.

21.2 Basic PTZ Controls

Controlling PTZ cameras.




NOTE

Ensure you have completed initial setup of your PTZ camera in order to control the camera using the recorder. See for more details.

To access the PTZ controls:

- Open the Live View screen for your PTZ camera in single-channel view (fullscreen). Right-click to open the Quick Menu, then click **Pan/Tilt/Zoom**.
- Right-click again to close PTZ controls.


To use the PTZ controls:

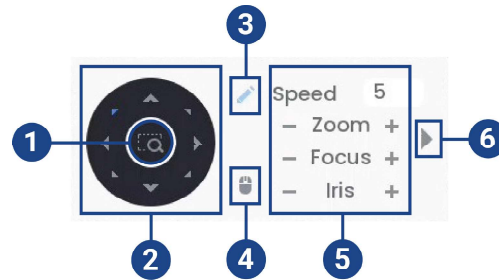

1. **Navigation Controls:** Click the directional arrows to move the PTZ camera manually.
2. **Zoom-to-Area:** Click, then click-and-drag to draw a box on the camera image. The PTZ camera will zoom in to the selected area.
3. **Draw** — not supported.
4. **Mouse Tracking:** Click to enable/disable mouse tracking. When enabled, click-and-drag in the direction you would like the PTZ camera to move. The camera will follow the path of the mouse cursor.
5. **PTZ Settings:**
 - **Speed:** The speed of PTZ camera movement. A higher value means the camera will move faster.
 - **Zoom:** Optical zoom level. Click + to zoom in, and – to zoom out.
 - **Focus:** Manually control focus level. Click + to focus on objects further from the camera, or – to focus on objects closer to the camera.
 - **Iris:** Controls the amount of light coming through the lens. Click + to allow more light, or – for less.
6. **Advanced:** Expand to show advanced options. For a full overview, see 21.3 *Advanced PTZ Controls*, page 126.

21.3 Advanced PTZ Controls


Using advanced options for PTZ cameras, including presets, tours, patterns, etc.


 NOTE
Ensure you have completed initial setup of your PTZ camera in order to control the camera using the recorder. See for more details.

To access the advanced PTZ controls:

- Open the Live View screen for your PTZ camera in single-channel view (fullscreen). Right-click to open the Quick Menu, then click **Pan/Tilt/Zoom**.
- Click the arrow on the far-right side of the PTZ control panel to access advanced options.
- Right-click again to close PTZ controls.

To use advanced PTZ controls:

 NOTE
Depending on your PTZ camera model, some of the features in the advanced menu may not be supported. Refer to your camera documentation to confirm which features are supported by your camera.

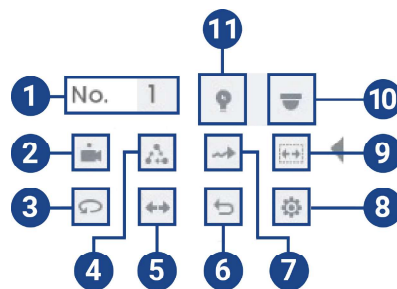



1. **No.:** Enter the ID number for a preset, tour, or pattern you want to activate.
2. **Preset:** Move the camera to the preset number specified in the **No.** field. For instructions on setting up preset locations, see 21.4 *Presets*, page 127.
3. **AutoPan:** Set the camera to rotate 180° back and forth.
4. **Tour:** Perform the tour number specified in the **No.** field. For instructions on creating a tour, see 21.5 *Tours*, page 127.
5. **Flip:** Rotate the camera 180° from its current position.
6. **Reset:** Move the camera to the home position.
7. **Pattern:** Perform the pattern number specified in the **No.** field. For instructions on creating a pattern, see 21.6 *Patterns*, page 127.
8. **Configuration:** Click to open the configuration menu, where you can configure presets, tours, patterns and autoscans.
9. **AutoScan:** Move the camera between a predetermined left and right point. For instructions on creating an autoscans, see 21.7 *AutoScan*, page 128.
10. **OSD Menu:** Click to open the camera's OSD menu. This may not be supported on all camera models.
11. **Auxiliary Settings:** Not supported.


21.4 Presets

Presets will save a camera position for quick retrieval.

To add preset locations:

1. From the Live View display of your PTZ camera, right-click to open the Quick Menu, then click **Pan/Tilt/Zoom**.
2. The PTZ controls open. Click  to open advanced PTZ controls, then click .
3. Click the **Preset** tab.
4. Enter the number of the preset you want to create under **Preset**.
5. Move the camera to the desired position and click **Set**.



To go to a preset location:

- Under **No.**, select the number of the preset you want to go to, then click .


21.5 Tours

Tours will cycle through a set of presets.

To add tours:

1. From the Live View display of your PTZ camera, right-click to open the Quick Menu, then click **Pan/Tilt/Zoom**.
2. The PTZ controls open. Click  to open advanced PTZ controls, then click .
3. Click the **Tour** tab.
4. Under **Patrol No.**, enter the number of the tour you want to create.
5. Under **Preset**, select a preset you want to add to the tour.
6. Click **Add Preset**.
7. Repeat steps 5 & 6 to add additional presets to the tour.

To run a tour:



- Under **No.**, select the number of the tour you want to go to, then click .

21.6 Patterns


Patterns automatically move the camera according to manually-entered movements.

To add patterns:

1. From the Live View display of your PTZ camera, right-click to open the Quick Menu, then click **Pan/Tilt/Zoom**.

-
2. The PTZ controls open. Click  to open advanced PTZ controls, then click .
 3. Click the **Pattern** tab.
 4. Under **Pattern**, enter the number of the pattern you want to create.
 5. Move the camera to the desired starting position, then click **Start**.
 6. Using the on-screen controls, move the camera in any pattern you wish. When finished, click **End**.



To run a pattern:

- Under **No.**, select the number of the pattern you want to go to, then click .

21.7 AutoScan

An autoscan automatically cycles between a left and right point.


To configure autoscan:

1. From the Live View display of your PTZ camera, right-click to open the Quick Menu, then click **Pan/Tilt/Zoom**.
2. The PTZ controls open. Click  to open advanced PTZ controls, then click .
3. Click the **Border** tab.
4. Move the camera into the desired left position and click **Left**.
5. Move the camera into the desired right position and click **Right**.


To run autoscan:

- Click .

The system supports Lorex HD audio cameras, which transmit audio through the same coax cable used for video connection. The system can also record one audio channel using the **AUDIO IN** port on the rear panel. You must have a self-powered microphone or an audio camera with an RCA-type audio connection to use this port.

 NOTE
Use of an external microphone allows you to record audio on Channel 1 of the system. It cannot be moved to a different channel.

The second RCA-type connector on the back panel is the **AUDIO OUT** port, which can be used to connect a self-powered speaker that will play audio from the system (requires audio-capable camera or self-power microphone).

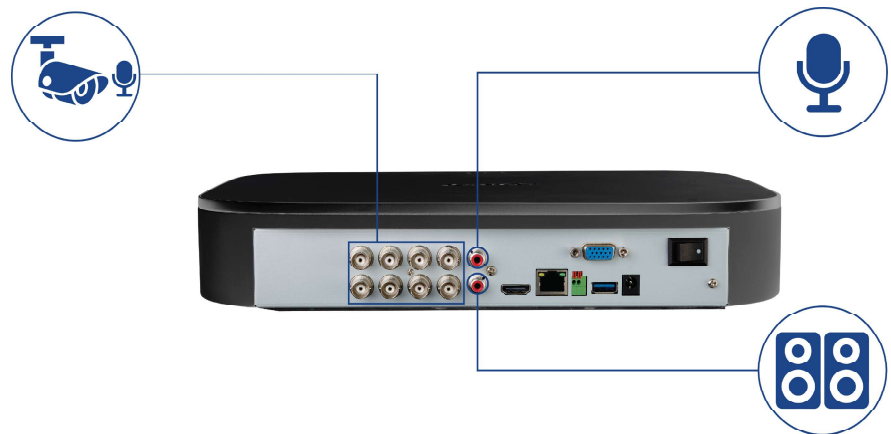


To enable audio recording using a Lorex HD audio camera:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
2. Click **Devices**, then **Record Settings**. Click the **Recording** tab from the side panel.

The screenshot shows the 'Record Settings' interface. At the top, a dropdown menu is set to 'Camera 1'. The interface is divided into two columns: 'Main Stream' and 'Sub Stream'. Each column has a 'Video' section with various settings like Type, Compression, Resolution, Frame Rate, Bit Rate Type, and Bit Rate. Below the video settings, there is an 'Audio Setting' button. A red warning message is displayed at the bottom: 'Audio recording and/or use of listen-in audio without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.' At the bottom right, there is an 'Apply' button and a 'Cancel' button.

3. Select the channel where the audio camera is connected.

- Click **Audio Setting**, then configure the following:

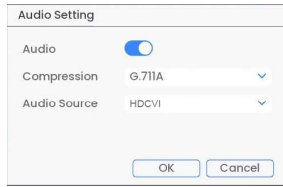

- Audio:** Click to enable () / disable () audio recording.


CAUTION

Audio recording and / or use of listen-in audio without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

- Compression:** Choose the desired format for audio recording (**G711a** recommended).
 - Audio Source:** Select **HDCVI**.
 - Click **OK**.
- Click **Apply** to save changes.
 - (*OPTIONAL*) Click **Copy** to apply the settings for the current channel to one or more other channels (see 19.8 *Copying Settings to Another Channel*, page 121 for full instructions on using the copy function).

To enable audio recording using an external microphone:

- From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.
- Click **Devices**, then **Record Settings**. Click the **Recording** tab from the side panel.

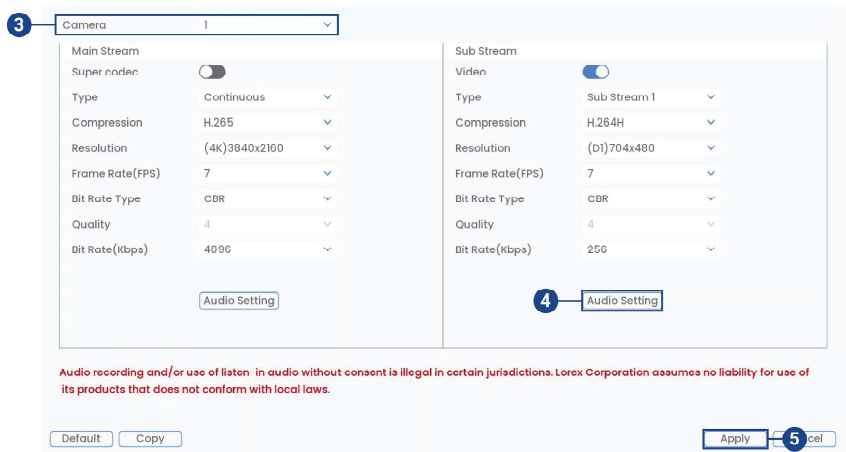


- Select **Camera 1**.

NOTE

Use of an external microphone allows you to record audio on **Channel 1** of the system. It cannot be moved to a different channel.

-
4. Click **Audio Setting**, then configure the following:

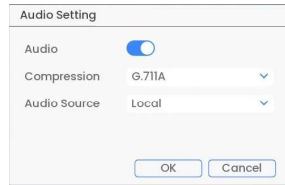

- **Audio:** Click to enable () / disable () audio recording.

**CAUTION**

Audio recording and / or use of listen-in audio without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

- **Compression:** Choose the desired format for audio recording (**G711a** recommended).
 - **Audio Source:** Select **Local**.
 - Click **OK**.
5. Click **Apply** to save changes.

The system comes with a pre-installed 3.5" SATA hard disk drive. You can replace the hard disk drive with one up to a maximum size of 8TB.

23.1 Removing the Hard Disk Drive



CAUTION

Make sure that the system is OFF and the power adapter is disconnected before removing/installing a hard disk drive.

To remove the hard disk drive:

1. Power off the system, and unplug all cabling from the system.
2. Turn the recorder over. Remove the bottom panel screws (6×).



3. Turn the recorder over carefully, then remove the top panel.

**CAUTION**

The wiring to the front panel button and USB port runs along the top panel of the recorder. When separating the top panel, rest it carefully beside the bottom panel as shown below.



4. Gently remove the power and SATA cables from the hard disk drive.



5. Carefully pick up the hard disk drive to lift the bottom panel, being mindful of the sharp edges of the bottom panel. Remove the hard disk drive screws (4×) from the bottom panel. Hold onto the hard disk drive so it remains in place when all screws have been removed.



-
- If you are not immediately going to install a new hard disk drive, replace the top panel and the 6 bottom panel screws.

23.2 Installing a New Hard Disk Drive



CAUTION

Make sure that the system is OFF and the power adapter is disconnected before removing/installing a hard disk drive.

To install a new hard disk drive:

- Insert the 2 hard disk drive screws closest to the SATA and power ports on the hard disk drive and tighten them half way.



- Power off the system, and unplug all cabling from the system.
- Turn the recorder over. Remove the bottom panel screws (6×).




4. Turn the recorder over carefully, then remove the top panel.

**CAUTION**

The wiring to the front panel button and USB port runs along the top panel of the recorder. When separating the top panel, rest it carefully beside the bottom panel as shown below.



-
5. Line the 2 half-inserted hard disk drive screws with the 2 holes shown below.

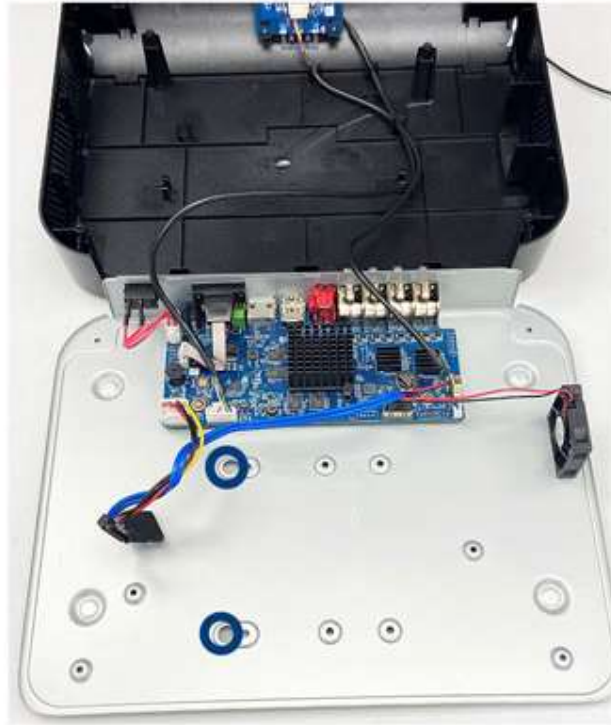

6. Carefully pick up the bottom panel with the hard disk drive, being mindful of the sharp edges of the bottom panel. Slide the 2 pre-inserted screws into the locked position, then tighten the screws. Insert and tighten the 2 remaining hard disk drive screws.



7. Connect the power and SATA cables to the hard disk drive.



8. Replace the top panel and the 6 bottom panel screws.

Setting up DDNS connectivity allows you to view your recorder from any computer or compatible mobile device with Internet access.

NOTE
<p>The primary connectivity option for the recorder uses the Lorex Home app to connect to your system over the Internet without the need for port forwarding or DDNS registration.</p> <ul style="list-style-type: none"> For instructions on using the Lorex Home app for mobile devices, see 20 <i>Connecting Remotely using the Lorex Home Mobile App</i>, page 123.


24.1 STEP 1: Port Forwarding

If you are using DDNS, you **must** port forward the HTTP and Client Ports (default: **80** and **35000**) on your router to your recorder's IP address before you can remotely connect to your system:


- Manually port forward the required ports on your router to your recorder's IP address by following your router manufacturer's instructions. For more information on port forwarding, see the reference guides on lorex.com.

24.2 STEP 2: Create a Lorex Account

- Visit lorex.com and click **Login/Signup** at the top of the page.

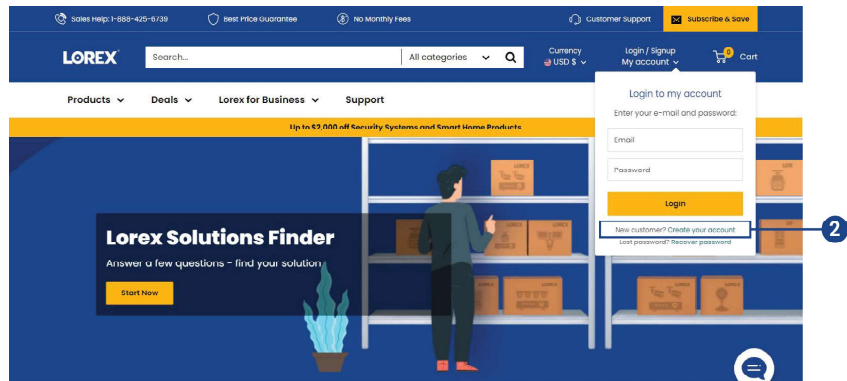

- Select **Create your account**.

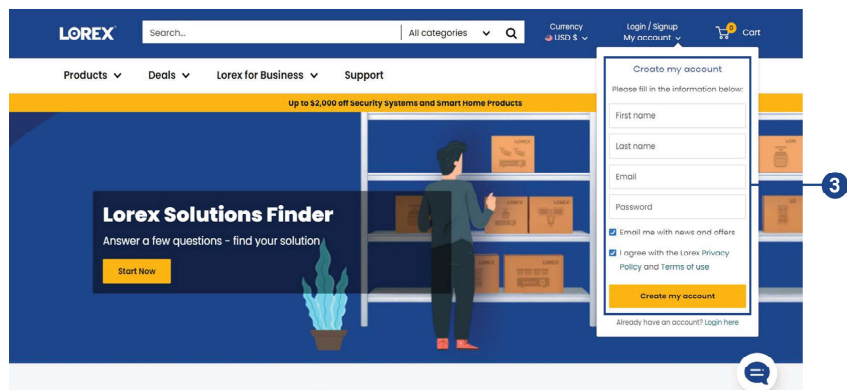

- Enter basic information for account setup, and then select **Create my account**.

24.3 STEP 3: Activate Your Warranty

Activate the manufacturer's warranty on your recorder.

To activate your product warranty:

The screenshot illustrates the warranty activation process. On the left, a navigation menu is shown with 'Warranty' highlighted by a blue box and a circled '1'. To the right, the 'Activate Warranty' page is displayed. At the top right of this page is a yellow 'Activate Warranty' button with a circled '2'. Below it is the 'Activate a New Warranty' form, which contains several fields: 'Model No' (with an example: N84IA8-Z or E892DD-Z), 'Serial No' (with an example: ND021911030913), 'Date of purchase*' (with a date picker showing 'yyyy-mm-dd'), 'Select Place of Purchase*', and 'Upload Bill of Sale*' (with a note: '(File with max size of 5MB)'). A 'Choose File' button is present below the upload field. At the bottom right of the form is a yellow 'Save Warranty' button with a circled '4' and a 'cancel' link. A circled '3' points to the form area.

1. From your Lorex account, click the **Warranty** tab.
2. Select **Activate Warranty**.
3. Enter your product information (attaching bill of sale optional).
4. Select **Save Warranty**.

Once submitted, your warranty information will be summarized under **Existing Warranties**.


24.4 STEP 4: Sign Up for a DDNS Account


Activate the manufacturer's warranty on your recorder.

To sign up for a DDNS account:

The screenshot shows the 'Create a New DDNS' form in a web interface. On the left, a sidebar menu has 'DDNS' highlighted with a blue box and a circled '1'. The main content area has a yellow 'Create a New DDNS' button at the top right with a circled '2'. Below it is a form with the following fields: 'Manufacturer Warranty: *' with a dropdown menu (3), 'Device name: *' with an example 'Device1' and a text input field, 'MAC address: *' with an example '00-0A-00-0B-00-00' and a text input field, and 'URL Request: *' with an example 'mycamera' and a text input field. At the bottom of the form are a blue 'Save DDNS' button (4) and a 'Cancel' button.

1. From your Lorex account, select the **DDNS** tab.
2. Select **Create a New DDNS**.
3. Select your recorder warranty from the drop-down next to **Manufacturer Warranty**. Enter the rest of your product information.

 **NOTE**

- The **Device Name** can be any name of your choice (for example, “Store Security System”).
- You can find your recorder’s **MAC Address** in the system information window on the recorder. From the Live View display, right-click and click **Info**, or click  on the Navigation Bar.

4. Click **Save DDNS**.
Once submitted, your DDNS account information will be summarized under **My DDNS Devices**. Make a note of your DDNS **URL**, **Username** and **Password**, as they will be needed to complete DDNS setup.

24.5 STEP 5: Enable DDNS on the Recorder

Enter your DDNS information into the menu of your recorder. You can find the information referenced below on your My Lorex account, or on the confirmation email sent to you after registering for DDNS service.

To configure DDNS in the recorder:

1. From the Live View display, right-click to open the Quick Menu, then click **Main Menu**.

2. Click **System**, then **Network**. Click the **DDNS** tab from the side panel.

3. Configure the following:

- **DDNS Type:** Select **Lorex DDNS**.
- **Domain Name:** Enter the first part of the DDNS domain that you requested during setup.
- **User ID:** Enter the username provided in the DDNS confirmation email.
- **Password:** Enter the password provided in the DDNS confirmation email.

4. Click **Apply** to save changes.

You will now be able to access your system remotely using DDNS. Enter the full domain name into a web browser (e.g., <http://www.tomsmithsecurity.lorexddns.net>) and login using the provided credentials.



NOTE

If your system uses an HTTP port other than 80, you will need to add a colon to the end of your DDNS domain name and enter the port number (e.g., <http://www.tomsmithsecurity.lorexddns.net:81>)

When a malfunction occurs, it may not be serious or difficult to correct. The following chart contains solutions to most common problems. Please refer to the topics below before calling Lorex Technical Support.

Error	Possible Causes	Solutions
System is not receiving power, or is not powering up.	Cable from power adapter is loose or is unplugged.	<ul style="list-style-type: none"> • Confirm that all cables are connected correctly. • Confirm that the power adapter is securely connected to the back of the unit.
	Cables are connected, but system is not receiving sufficient power.	<ul style="list-style-type: none"> • Confirm that the system is powered on (LED indicators on the front should be ON). • If the unit is connected through a power bar or surge protector, try bypassing the bar and connecting the power directly to the wall outlet. • Confirm that there is power at the outlet: <ul style="list-style-type: none"> ◦ Connect the power cable to another outlet. ◦ Test the outlet with another device (such as a lamp or phone charger).
Hard disk drive is not detected by the system.	Hard disk drive cables are loose or not properly connected.	Remove the housing and check that hard disk drive cables are firmly connected.
	There is no hard disk drive in the system.	Open the housing and install compatible hard disk drive. Make sure to format the drive after installing. For details, see 19.6.15 <i>Formatting the hard disk drive</i> , page 110.
Hard disk drive is full (0%) and the unit is no longer recording.	Overwrite is not enabled.	If hard disk drive overwrite is not enabled, the system will stop recording when the hard disk drive is full. For instruction on enabling hard disk drive overwrite, see 9.5 <i>Configuring hard disk drive Overwrite</i> , page 32.
There is no picture on monitor/TV after connecting it to the recorder.	Monitor/TV not detected by recorder.	Power off the monitor/TV and the recorder. Power on the monitor/TV, and then power on the recorder.
	Input channel for recorder not selected on monitor/TV.	Ensure that the monitor/TV is set to the input channel that the recorder is connected to.
	Video cable is loose or has become disconnected.	Check the video cable connection to the recorder and the monitor/TV.
	Camera is not compatible with the recorder.	Visit lorex.com/compatibility and navigate to D863 Series for a list of all compatible cameras.
Mouse not detected by system.	Mouse cable is not firmly connected to the system, or the mouse is not connected to the system.	Firmly connect the mouse cable to one of the USB ports.
	System needs to be reset.	Power off the system (disconnect power cable). Firmly connect a USB mouse to one of the USB ports. Reconnect the power cable to the 12V DC port on the rear panel.

Error	Possible Causes	Solutions
There is no picture on selected channels / camera picture is not being displayed.	Camera cables are loose or have become disconnected.	<ul style="list-style-type: none"> Check the camera video cable and connections. Disconnect and reconnect the cable at the system and at the camera. Try moving the camera to another channel or use another cable.
The image on the recorder appears, but does not have sound.	Cameras do not feature a microphone for audio recording.	The recorder supports audio recording, but requires audio-enabled cameras with a built-in microphone, or an external microphone to be connected. See , page for details on using audio-enabled devices.
The system beeps during motion detection.	Motion detection is enabled and the buzzer is activated.	See , page for full instructions on configuring motion detection options. You will need to uncheck the Buzzer option to prevent the recorder from beeping every time motion is detected.
Lorex Fusion Wi-Fi camera is not connecting to the recorder.	The recorder is not connected to the network using an Ethernet cable.	<ul style="list-style-type: none"> Check the recorder Ethernet cable connection. Disconnect and reconnect the Ethernet cable for your system.
	Lorex Fusion Wi-Fi camera and recorder are not connected to the same Lorex Home app and network.	<ul style="list-style-type: none"> Ensure both your Lorex Fusion Wi-Fi camera and recorder are powered ON. Ensure both your Lorex Fusion Wi-Fi camera and recorder are connected to the same Lorex Home app account. Ensure both your Lorex Fusion Wi-Fi camera and recorder are connected to the same network.
	Camera is not compatible with the recorder.	Visit lorex.com/compatibility and navigate to D863 Series for a list of all compatible cameras.
I am not receiving email notifications.	Email notification is disabled.	Ensure you have configured email notification. For full instructions, see 19.6.9 <i>Configuring Email Alerts</i> , page 105.
	Email notification is enabled, but you have not entered your own SMTP information.	If you want to use your own SMTP server, you must enter your SMTP server address, SMTP port, username, and password in the appropriate fields. For full instructions, see 19.6.9 <i>Configuring Email Alerts</i> , page 105.

26.1 General

Video Transmission Technology	HD Analog
Channels	D863A8: 8ch: 8 Wired + 4 Fusion Wi-Fi Channels D863A6: 16ch: 16 Wired + 4 Fusion Wi-Fi Channels

26.2 Inputs/Outputs

Video Input(s)	D863A8: 8ch: 8 x 1Vp-p, CVBS, 75ohms, BNC Type D863A6: 16ch: 16 x 1Vp-p, CVBS, 75ohms, BNC Type
Video Output(s)	1 x VGA, 1 x HDMI
Audio Input(s)	1 ch: RCA
Audio Output(s)	1 ch: RCA

26.3 Display

Display Output Resolution	Up to 4K
Live Display	D863A8: 8ch: 1, 4, 8, 9, 12 D863A6: 16ch: 1, 4, 8, 9, 16, 20
Live Display Speed (Max)	D863A8: 8ch: 240fps NTSC D863A6: 16ch: 480 NTSC
OSD	On/Off
System Navigation	USB Mouse

26.4 Recording

Recording Frame Rate	4K@7fps; 5MP@12fps; 4MP/3MP@15fps; 1080p@30fps; 720p@30fps
Recording Schedule	Per Channel by Continuous/Motion/Smart Motion (Person and Vehicle)/Alarm/Day/Hour
Back-up File Format	DAV / AVI / MP4 file
Video Compression	H.265 / H.264

26.5 Playback

Simultaneous Playback	Up to 4 Channels
Playback Speed	Variable Max 16x
Search	By Time/Date, All Motion Events or Smart Motion (Person and Vehicle), Area (Smart Search)

26.6 Storage

Hard Disk Drive Bays	1 Bay
Hard Disk Drive Capacity	Up to 1 x 8TB (SATA)
Backup Media	USB Flash Drive & USB HDD

26.7 Special Features

Smart Motion Detection	Person and Vehicle Motion Detection
Face Detection	Yes (two channels)
Face Recognition	Yes (two channels)
Virtual Fence (Perimeter protection)	Yes (two channels)
Active Deterrence Support	Yes
Panic Button	Yes
Smart Search	Yes

26.8 Smart Home

Voice Control	Amazon Alexa™, Google Assistant™
Streaming Options	Chromecast™, Apple TV,™ Amazon Echo Show™, Google Home Hub™

26.9 Connectivity

Mobile Viewing	Android, iOS
Compatible App	Lorex Home™
PC/MAC Software	Lorex Cloud™
Email Notification	Text and Snapshot
Network Interface	10/100 Base-TX, RJ45
DDNS	Yes (Optional)
USB Interface	USB 2.0 × 2

26.10 Additional Specifications

FW Upgrade	USB/Network
Watchdog Function	Yes
Power Consumption	< 10W (without HDD)
Supply Voltage	D863A8: 8ch: 12V/2A D863A6: 16ch: 12V/3A
Unit Dimensions (W × D × H)	12.9 × 9.6 × 2.1" (328 × 245 × 53mm)
Unit Weight	2.75lbs (1.26kg) (without HDD)
Operating Temperature	14° ~ 131°F / -10° ~ 55°C
Humidity	10 ~ 90% RH

26.11 Disclaimers

1. Recording time may vary based on recording resolution and quality, lighting conditions and movement in the scene.
2. Accuracy of Smart Motion Detection or Person and Vehicle Detection will be influenced by multiple factors, such as the object's distance from the camera, the size of the object, and the height and angle of the camera. Night vision will also impact the accuracy of detection.
3. Accuracy of Face Detection and Face Recognition will be influenced by the distance of the face from the camera. Partially or fully covered faces will not be detected. Night vision will impact the accuracy of Face Detection. Facial recording without consent is illegal in certain jurisdictions. Lorex Technology does not assume liability for any use of its product that fails to conform with local laws.

4. Face Detection and Face Recognition are available on up to 2 channels only. Smart Motion Detection can not be enabled on all channels while Face Detection or Face Recognition is enabled.
5. Virtual Fence is available on up to 2 channels only. Smart Motion Detection can not be enabled on the same channel when a single channel is enabled. To enabled Virtual Fence on 2 channels, Smart Motion Detection must be disabled on all channels.
6. Compatible with select Lorex cameras only. For a list of compatible cameras, please visit www.lorex.com/compatibility.
7. Controlling certain features in your security system requires a compatible smart device. Availability and performance of certain features and services are smart device dependent and may not be available.
8. Requires a high-speed internet connection and a router (not included) for remote access. A minimum upload speed of 7.5Mbps is required for the best video performance. Up to 3 devices may connect to the system at the same time. For the latest list of supported apps and devices, please visit: www.lorex.com/apps-software.
9. Both firmware and software must be updated to latest version to ensure remote connectivity in all areas or networks. For compatibility, features, instructions visit: www.lorex.com/smarthome.
10. HDMI output supports up to 4K for high definition multi-channel live or recorded video viewing. Image quality and resolution is dependent on the type of camera connected to the DVR, as well as TV/monitor resolution.
11. AppleTV™ or Chromecast™ need to be connected to the same network as your recorder. Requires AppleTV Gen 4 or newer with Lorex Home Apple TV APP or Chromecast™ device connected to the TV that you want to view the system on.

*Detection types need to be supported by the camera.

**Deterrence features need to be supported by the system.

This product has been certified and found to comply with the limits regulated by FCC, EMC, and LVD. Therefore, it is designated to provide reasonable protection against interference and will not cause interference with other appliance usage. However, it is imperative that the user follows the guidelines in this manual to avoid improper usage, which may result in damage to the product, electrical shock and fire hazard injury.

27.1 FCC/IC

This equipment has been tested and found to comply with the limits for a digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential or commercial installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

27.2 CE

This product and the supplied accessories are marked with “CE” and comply with the applicable harmonized European standards listed under Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC.

27.3 Modification

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Toute modification non approuvée explicitement par le fournisseur de licence de l'appareil peut entraîner l'annulation du droit de l'utilisateur à utiliser l'appareil.

27.4 RoHS

This product is fully compliant with the European Union Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment ("RoHS") Directive (2002/95/EC). The RoHS directive prohibits the sale of electronic equipment containing certain hazardous substances such as lead, cadmium, mercury, and hexavalent chromium, PBB, and PBDE in the European Union.

27.5 ICES-003

This device meets the CAN ICES-3 (A) / NMB-3 (A) standards requirements.



Website

www.lorextechnology.com

Copyright

© 2022, Lorex Corporation

All rights reserved worldwide. Names and marks appearing herein are either registered trademarks or trademarks of Lorex Corporation and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

Legal disclaimer

As our product is subject to continuous improvement, Lorex Corporation & subsidiaries reserve the right to modify product design, specifications & prices without notice and without incurring any obligation.E&OE.

Publ. No.: LX400123
Release: 2.0
Commit: 60063
Head: 60063
Language: en-US
Modified: 2022-10-25
Formatted: 2022-10-25